



## Part Names

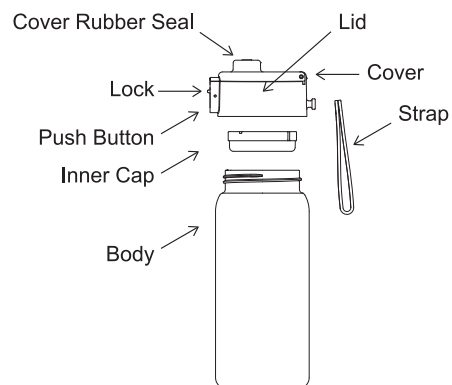

### Position of Ring Rubber Seal

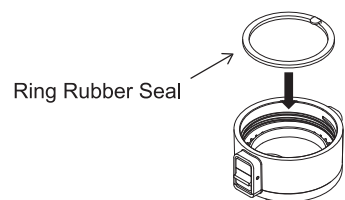

- Check that each rubber seal is correctly fitted before use.

**MUJI 無印良品**

## Clear travel bottle User Guide

**\* This product is for use with cold water only.**

- Read this User Guide carefully to ensure correct use of the product.  
Store this guide in an easily accessible place for future reference.

### Quality Label

Raw Resin	Body, Cover : Saturated Polyester Resin Lid, Inner Cap : Polypropylene Lock : ABS Resin Push Button : Polyacetal
Material	Rubber Seal, Strap: Silicone Rubber
Heat-Resistant Temperature	Body, Cover 80 °C Lid, Inner Cap 100 °C Rubber Seal, Strap 150 °C
Capacity	350 mL, 550 mL, 800 mL

## Safety Advice

In this guide, warnings and cautions are indicated by symbols to prevent accidents against misuse of the product.  
The meanings of the symbols are as follows.

ⓘ Actions that must be taken.    ⓧ Actions that are prohibited.

⚠ Indicates a potential risk of minor injury or product malfunction.

## Cautions

### ● Before Use

- ⓧ Do not use the product if small scratches or cracks are found on the product. Otherwise it may cause damage.
- ⓘ Wash each part thoroughly with lukewarm water and assemble the parts correctly before use.
- ⓧ Do not sterilize in boiling water. The heat may cause deformation, cracking, cloudiness and/or discolouration.
- ⓧ Do not use in the following drinks.
  - Dry ice, soda and fermented food: The internal pressure may rise causing the product to explode.
  - Milk, milk-based beverages, fruit juice and fruit pulp, etc.: May spoil or deteriorate.
  - Tea leaves, coffee powder, tea bags with strings, etc.: May get caught in the inner cap causing leakage.

### ● During Use

- ⓧ **Do not put beverage at a temperature of 50 °C or higher into the product. When putting tea or other boiled drinks, wait until the temperature drops. Otherwise this may cause burns. It may also cause product deformation, damage or leakage.**

**Recommended temperature of beverage is 50 °C or lower.**


- ⓧ When carrying, do not shake it, turn it sideways, or upside down. It may cause leakage.
- ⓧ Do not use as storage containers. It may cause spoilage and/or deterioration.
- ⓧ Do not use in a freezer, chiller compartment or other places where the temperature drops below freezing. The liquid may freeze and expand, causing damage to the body.
- ⓧ Do not use in a microwave.
- ⓧ Do not use while driving. It may stain the inside of the car or clothes. Also, use while driving may result in lack of caution and may cause serious danger.
- ⓧ Do not place near open flames. It may cause damage or a fire.
- ⓧ Do not apply strong impact or excessive force, such as dropping or tipping over. Doing so may cause damage.
- ⓧ Do not remove the lid with the cover raised. The cover hinge may become damaged.
- ⓧ Do not place in an unstable place. The body may fall over.
- ⓧ Do not swing or lift vigorously by the strap. The strap may become damaged.

### ● After Use

- ⓘ Wash with neutral dish detergent, rinse well and dry after use before storing.
- ⓧ Do not wash with an abrasive scouring pad, wire wool, or cleanser. Doing so may scratch the surface and cause product breakage.
- ⓧ Do not put in a dishwasher.
- ⓧ Do not sterilize in boiling water. The heat may cause deformation, cracking, cloudiness and/or discolouration.

## Directions for Use

- Wash each part thoroughly with lukewarm water and assemble the parts correctly before use.
- To drink, hold the bottle upright and press the button to unlock. Press the lock to open the cover and slowly tilt the bottle.
- When you have finished drinking, close the cover in an upright position and lock the button until you hear a click.
- \* The open and closed states are as shown in the figure. Make sure to lock it when not drinking to prevent the cover from opening unexpectedly.

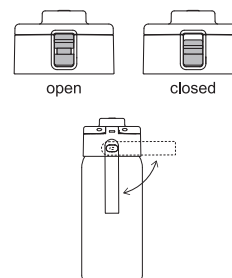

- When removing the strap, position it perpendicular to the bottle and lower it slowly. (Position of dotted line in the right figure)
- To prevent damage to the strap, do not apply strong force when removing or attaching it.
- When washing, remove the inner cap, use a soft sponge with a neutral dish detergent and rinse thoroughly.
- Water droplets may form on the inside of the cover. Be careful not to let water drops fall on your clothes when opening and closing.
- After washing, wipe dry with a soft cloth.

### Disposal

- To dispose of the product, follow the rules implemented by your local government.