MUJI 無印良品

Retain for future reference

Beechwood Arm chair Round legs

User Guide

Thank you for your purchase. Read the User Guide before use to ensure correct use of this product. Store this guide in an easily accessible place for future reference

Directions for Use

Moving the Product

 \bigcirc

• Do not drag to move the product. Doing so may cause product damage, floor scratches and/or injury.

Disposal

Specifications

Product Name

.IAN

Product

Dimension

Product Weight

Usade

Material

Surface Finish

Place of Origin

• To dispose of the product, follow the rules implemented by your local government.

Beechwood Arm chair Round leas

Backrest : Natural Wood (Beechwood)

I aminated Wood

: Natural Wood (Beechwood)

W553 × D504 × H729 mm

Seat Height: 442 mm

Chair (for 1 person)

Structural Element

Urethane Resin Coating

4550583987473

Approx, 5 kg

Seat

Leg

Vietnam

Important Information (Safety Advice)

The warnings and cautions indicated here are intended to prevent harm to the users and other individuals or damage . to the property. The instructions must be followed.

Ω


Actions that are prohibited.



WARNING Hazards that may lead to death or serious injury

- Do not lay small children on the product. Doing so may cause them to suffocate or fall on the floor.
- Do not use in an unstable state, such as tilting while sitting on the product. Otherwise this may cause tip-over, damage, floor scratches and/or injury.
- Do not allow more than the specified number of people to use at the same time. Doing so may cause damage, resulting in injury. (See the Specifications for details.)
- Do not stand on the product. Doing so may cause you to fall, the product to become unstable and fall over or become damaged, leading to injury.
- Do not let children use without supervision. Doing so may result in unexpected iniury.
- Do not sit on any part other than the seat. Doing so may cause DON'Ts unexpected injury.
 - Do not use for other than its intended purpose of sitting on. Doing so may cause unexpected injury.
 - Do not sit near the edge of the seat. Doing so may cause tip-over, damage and/or injury.
 - Do not put excessive load only on one side (of the legs). Doing so may damage the parts and lead to injury.
 - Do not use if damaged or deformed. Doing so may cause insufficient strength and may lead to injury.
 - Do not attempt to repair or modify. Doing so reduces the strength of the product and may lead to injury.
 - Do not place on the power cord of an electrical appliance. Doing so may damage the cord, leading to electric shock or a fire.

Names of Parts / Fitting Part

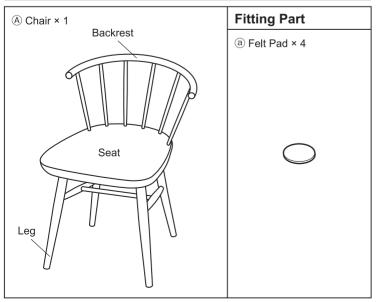


the store of purchase.

distortion or damage. DOs **CAUTION** Hazards that may result in injury or damage to the property • Do not use outdoors. Doing so may cause deformation or severe degradation, resulting in injury. Do not leave unnecessary packaging materials within reach of small children. Children may accidentally pull them over their head, cover their mouth and/or nose and suffocate. \bigcirc Do not use bleach or organic solvents, such as thinner, for cleaning. DON'Ts Doing so may cause discolouration or deformation. • Do not leave a chemically treated cloth in contact with the product for a long time. Doing so may cause discolouration or peeling of the surface material. • Ventilate the room well at the early stage of use. The product may contain a small amount of Formaldehvde, and those with chemical sensitivity or small children may experience allergic reactions. • Avoid exposure to direct sunlight and heat or air from heating and cooling appliances such as an air conditioner and a heater. Not doing 0 so may cause warping, cracking and discolouration. DOs Wipe off immediately when alcohol-containing disinfectant is spilled on the coating or plastic parts. Do not excessively wipe with alcohol disinfectant. Doing so may cause discolouration or deterioration of the

Directions for Use

surface.

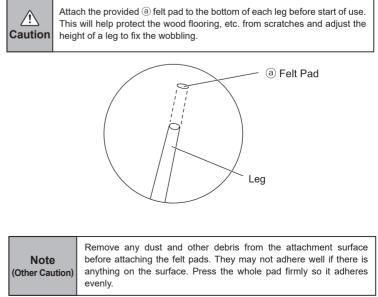

Care Instructions

Approval

GS-VY 5/31/2

WARNING (Continued)

Maintenance and Inspection

- · Regularly check for any looseness or damage in all parts, and stop use if any abnormalities are found. Continued use under this condition may cause injury or damage.
- Take insecticidal measures immediately if any type of pest is found. If left untreated, pest damage may worsen.

Maintenance for Wooden Parts

- · Gently wipe off dust from coated surfaces using a soft cloth or duster.
- If the product is heavily soiled, clean it with a cloth soaked in 3-5% neutral detergent solution and wipe off any detergent residue with a damp cloth. Then gently wipe with a dry cloth and let the product dry naturally.

Contact Information

serious iniurv

• Use on a flat and stable surface. Otherwise it may cause product

For enquiries regarding the product, please contact

Hazards that may lead to death or