

Wall furniture Mirror

User Guide

Thank you for your purchase.
Read this User Guide before use to ensure correct assembly and use of the product.
Store this guide in an easily accessible place for future reference.

2026/3/11

Important Information (Safety Advice)

The warnings and cautions indicated here are intended to prevent harm to the users and other individuals or damage to the property. The instructions must be followed.

Actions that are prohibited.

Actions that must be taken.

⚠ WARNING Hazards that may lead to death or serious injury	
DON'Ts	Do not do anything that applies loads to the product, such as resting your hand on it. Do not apply excessive loads to its edges. Also, do not apply force from below. Doing so may cause the product to become damaged or fall, resulting in injury. Do not apply loads from any direction other than vertically. Doing so may cause the product to become damaged or fall, resulting in injury. Do not mount or store the product within reach of pets and small children. Doing so may cause unexpected injury. Do not mount the product in areas subject to vibration (areas close to speakers, washing machine or doors). Doing so may cause the fixing parts to loosen and the product to fall, resulting in injury. Do not leave unnecessary packaging materials within reach of small children. Children may accidentally pull them over their heads, cover their mouths and/or noses and suffocate. DOs
	Periodically check the mounting condition of the product, and remount in a different location if any abnormalities, such as looseness, are found. Continued use in this state may cause the product to fall and lead to injury. The fixing parts may become loose particularly after an earthquake or prolonged use, and must be inspected in these situations. After mounting, ensure that there is no looseness or gaps before use. When fixing the mounting hooks to a non-plasterboard wall, use screws that are suitable for the wall material. Use of unsuitable screws will result in insufficient strength, which may cause the product to fall, leading to injury.

⚠ CAUTION Hazards that may result in injury or damage to the property	
DON'Ts	Do not use the product for other than its intended purpose. Doing so may cause damage, resulting in injury. Do not use the mounting hooks or the main unit if they are warped, deformed or damaged. Do not modify them. Doing so may result in insufficient strength. Do not reinsert pins or screws into the same location. The product cannot maintain sufficient strength. Do not use the parts for anything other than this product. The parts are designed to be used only for Wall Furniture.
DOs	Mount the product on a flat, vertical wall. The product cannot be mounted correctly on an uneven or slanted wall, and if not mounted correctly, it may cause falls or injury. Use the Positioning Guide to mount the product and check that it is mounted correctly. Gaps and looseness will cause insufficient strength, and may result in falls or injury. Ventilate the room well at the beginning of use. The product may contain a small amount of formaldehyde and those with chemical sensitivities or small children may experience allergic reactions. Avoid exposure to direct sunlight and heat or air from heating and cooling appliances, such as an air conditioner and a heater. Failure to do so may cause warping, cracking and discolouration.

Note (Other Caution)	
	To dispose of the product, follow the rules implemented by your local government.

Care Instructions

Maintenance for Wooden Parts

- Gently wipe off dust from coated surfaces using a soft cloth or duster.
- If the product is heavily soiled, clean it with a cloth soaked in a 3 to 5% neutral detergent solution and wipe off any detergent residue with a damp cloth. Then, gently wipe with a dry cloth and let the product dry naturally.
- Do not use organic solvents, such as thinner, or chemicals, such as bleach, for cleaning. Doing so may cause discolouration or deformation.

Maintenance and Inspection

- Take insecticidal measures immediately if any type of pest is found. If left untreated, pest damage may worsen.
- Wipe off immediately if alcohol-based disinfectant is spilled on the coating or the plastic parts. Avoid wiping excessively with alcohol disinfectant. Otherwise, it may cause discolouration or deterioration of the surface.

Parts and Part Names

- * This product is designed for mounting only on plasterboard or wooden walls, and cannot be mounted on walls made of concrete or other materials.
- * Prepare commercially available fixing screws (4 pieces) when mounting the product on a wooden wall.
(Screws recommended for wooden surfaces: Cross-recessed round-head wood screws with nominal diameter of 3.8 mm and length of 16 mm)

Ⓐ Main Unit × 1 Bracket * The Mirror S is used in the illustrations.	Ⓑ Mounting Hook × 2 Screw Hole Pin Hole	Ⓒ Fixing Pin × 11 (including 1 spare) * For plasterboard walls only	Ⓓ Pin Insertion/Removal Tool × 1 Pin removal side Pin insertion side * Store this in a safe place.
--	--	---	--

CAUTION	Do not use Ⓒ Fixing Pins on sound-absorbing walls or on non-plasterboard walls, as they are intended for use on plasterboard walls only. Be careful not to prick your fingers or other body parts with Ⓒ Fixing Pins when mounting the product. Otherwise, it may cause unexpected injury as the tips are very sharp.
--	---

What is plasterboard?

- Plasterboard is used in many walls of modern detached houses and apartments (except bathrooms) for the purpose of non-combustibility.
- How to distinguish plasterboard from others
Plasterboard wall surfaces are usually covered with vinyl wallpaper. Stick a drawing pin into the wall. If there is white powder on its tip, the wall is made with plasterboard.

Specifications

Product Name	Wall furniture Mirror		
Specifications	Oak S	Walnut S	Oak Light grey S
JAN	4550584896668	4550723275026	4550723274944
Product Dimensions	W44 × D2 × H32.1 cm		
Product Weight	Approx. 1.5 kg		
Usage	Mirror (for indoor use only)		
Materials	Main Unit Frame: Natural Wood (Oak) Mirror: Glass Back Panel: Fibreboard Bracket/Mounting Hook: Styrene Resin Fixing Pin Head: Styrene Resin Body: Metal (Stainless Steel) Surface Finish Main Unit: Urethane Resin Coating	Main Unit Frame: Natural Wood (Walnut) Mirror: Glass Back Panel: Fibreboard Bracket/Mounting Hook: Styrene Resin Fixing Pin Head: Styrene Resin Body: Metal (Stainless Steel) Surface Finish Main Unit: Urethane Resin Coating	Main Unit Frame: Natural Wood (Oak) Mirror: Glass Back Panel: Fibreboard Bracket/Mounting Hook: Styrene Resin Fixing Pin Head: Styrene Resin Body: Metal (Stainless Steel) Surface Finish Main Unit: Lacquer Coating
Made in	VIETNAM		

Product Name	Wall furniture Mirror		
Specifications	Oak M	Walnut M	Oak Light grey M
JAN	4550584896675	4550723275033	4550723274937
Product Dimensions	W32.1 × D2 × H100 cm		
Product Weight	Approx. 3.4 kg		
Usage	Mirror (for indoor use only)		
Materials	The same as the Oak S	The same as the Walnut S	The same as the Oak Light grey S
Made in	VIETNAM		

Contact Information

For enquiries regarding the product, please contact the store where it was purchased.

How to Mount

1

Check that there is no unevenness on the wall surface. Firmly smooth out any folds in the Positioning Guide (on the bottom part of this User Guide). Using cellophane tape, etc., attach the guide on the wall where the main unit will be mounted.

* Use a separate Positioning Guide for Mirror M.

Note
(Other Caution)

Do not use strong adhesive tape. Doing so may damage the wallpaper, or cause the adhesive to remain on the wall.

Firmly smooth out

Cellophane tape, etc.

2

Attach ② × 2 to the wall

* The main unit can be installed either horizontally or vertically. The Hook Attachment Position differs depending on the orientation.

When mounting on a plasterboard wall

* Mount on a plasterboard wall with a thickness of 9.5 mm or greater.

① Align ② with the Hook Attachment Position.

② Insert ③ × 5 into the pin holes in ②, in the order of Fig. 1, Fig. 2 and Fig. 3, and securely fix ② to the wall. If it is difficult to insert ③, use ④ Pin Insertion/Removal Tool.

③ × 5

Pin Hole

④ Fixing Pin

Top view

Front view

Wall (plasterboard)

Fig. 1

Fig. 2

Fig. 3

CAUTION

❗ Attach correctly. Otherwise, the product cannot maintain sufficient strength, which may cause falls, resulting in injury.

❗ First, slightly insert each ③ Fixing Pin into the pin hole while checking the angle. Once the angle of ③ is aligned with that of the hole, fully insert ③. Be careful not to insert with excessive force as it may bend.

❗ Insert ③ Fixing Pins all the way in, up to the bases of their heads and ensure there is no gap between ② Mounting Hooks and the wall. Otherwise, the product may not maintain sufficient strength.

❗ Ensure that ② Mounting Hooks are level after attaching them to the wall. If they are tilted, ① Main Unit cannot be mounted properly.

<Using ④ Pin Insertion/Removal Tool>

• Inserting

Slightly insert ③ into the pin hole while checking the angle and fit the head of ③ into the pin insertion side of ④, then push it.

③

④

• Removing

① Grip the narrow section of the head of ③ with the pin removal side of ④.

② Tilt ④ to slightly raise ③.

③ Bring ④ that was tilted in ② back to the original angle, then pull it out along with ③.

③

④

When mounting the product on a wooden wall

* This product is designed for mounting only on plasterboard or wooden walls, and cannot be mounted on walls made of concrete or other materials.

Align ② with the Hook Attachment Position. Insert fixing screws into the screw holes in ② to securely fix ② to the wall.

CAUTION

❗ Use screws that fit the size of the holes. The screw hole diameter of ② Mounting Hook is 4.5 mm.

❗ Do not use power tools to drive in the screws. Applying excessive loads may damage ② Mounting Hooks, leading to injury.

Hook Attachment Position

Screw Hole

②

3

① Align ① with the Main Unit Alignment Position and the Left Alignment Position, and press it against the wall. Make sure to attach the left and right sides of ① at the same time.

② Push the top surface (shaded areas) of ① downwards until it reaches the Top Surface Position. Make sure it **clicks** into place.

If not aligned with the Top Surface Position, excessive force may be applied to the hooks, leading to damage. (See <Point> below)

Left Alignment Position

Main Unit Alignment Position

①

②

CAUTION

❗ Make sure the side with the brackets on both corners is facing up. Otherwise, ① Main Unit may fall and lead to injury.

Bracket

Horizontal

No bracket

Vertical

<Point>

The brackets on ① Main Unit and ② Mounting Hooks **click** into place when they engage.

Ensure there are no gaps between the product and the wall and there is no wobbling after mounting. If there are gaps or wobbling, remount the product. The product may move sideways after being mounted, but it is not abnormal.

Main Unit Alignment Position

Top Surface Position

Bracket

①

Wall

Tab

②

Click into place here.

Click into place here.

4

Slide the Positioning Guide upwards to remove it, while being careful not to let ① and ② come off the wall.

Note
(Other Caution)

Be careful not to tear the Positioning Guide during removal. If torn pieces are left behind the product, they may cause a mould infestation, which can lead to wallpaper stains.

Positioning Guide

How to Remove

1

Raise ① vertically and remove it from ②.

CAUTION

❗ Do not hold the bottom edge of ① Main Unit when raising it. Forcefully removing it may damage ② Mounting Hooks, the wall and the product.

2

Pull out ③ or the fixing screws to remove ② from the wall by referring to the How to Mount section.

①

②

③

Positioning Guide (for Mirror S)

Main Unit Alignment Position

Main Unit Centre Point (for mounting vertically)

Main Unit Centre Point (for mounting horizontally)

Top Surface Position

Left Alignment Position

Hook Attachment Position (for mounting vertically)

Hook Attachment Position (for mounting horizontally)