

分解して洗える  
キッチンばさみ  
約長さ20cm  
4550512076971  
表(日本語・英語)

A4 (210×297mm)  
2つ折り  
資材:ラベル(糊なし)MR70

### 取扱説明書

MUJI 無印良品

ver.2022.11

4550512076971 分解して洗えるキッチンばさみ 約長さ20cm

この取扱説明書をよくお読みいただき、正しくご使用ください。  
また、すぐ取り出せる場所に大切に保管し、必要なお読みください。

#### 安全上のご注意

本紙では誤った取り扱いによる事故を未然に防ぐための注意事項を、マークをつけて表示しています。  
マークの意味は以下の通りです。

ⓐ 実行しなければならない内容です。 ⓑ してはいけない内容です。

#### ⚠ 警告 死亡、または重傷を負うおそれがある内容を示しています。

- ⓐ 刃物のため、取り扱いや保管には十分ご注意ください。
- ⓑ この刃物は調理を目的としたものです。用途以外に使用しないでください。
- ⓒ ハンドルから手が滑る状態(油・洗剤等)で使用しないでください。
- ⓓ 破損または変形した場合には使用しないでください。
- ⓔ 乳幼児の手の届かない場所に保管してください。

#### ⚠ 注意 軽傷、または物的損害を負うおそれがある内容を示しています。

##### ご使用前

- ⓐ ご使用前に水やぬるま湯で洗浄し、よく乾燥させてください。
- ⓑ 洗浄の際、刃先に触れたり、手を滑らせて落下させないように十分ご注意ください。


##### ご使用中

- ⓐ 片方のハンドルだけを持ちたり、刃が開いた状態での持ち運びはしないでください。分解式のため、落下するおそれがあります。
- ⓑ 刃が大きく開くような使い方はしないでください。分解してケガをするおそれがあります。
- ⓒ ビスを締めたり、緩めることはしないでください。破損の原因となります。
- ⓓ 火気に近づけないでください。変形の原因となります。

##### ご使用后

- ⓐ ご使用後は汚れを落とし、水分を良く拭き取ってから保管してください。
- ⓑ 洗浄の際、刃先に触れたり、手を滑らせて落下させないように十分ご注意ください。
- ⓒ 金属たわしやみがき粉で洗浄しないでください。キズがつくおそれがあります。
- ⓓ 濡れたまま、湿気の多い場所で保管しないでください。水分や汚れがあるとサビる場合があります。  
特に刃部に使用している鋼材は一般的に用いられるステンレス鋼と違い、焼き入れ特性を持たせる炭素を多く含んでおり、サビが発生しやすくなっています。


#### 各部名称

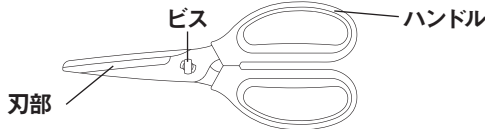

#### ご使用方法


- ご使用前に水やぬるま湯で洗浄し、よく乾燥させてください。
- 洗浄の際、柔らかいスポンジに薄めた食器用中性洗剤をつけて洗浄してください。
- 食器洗い乾燥機使用可能です。
- 刃は分解できます。それぞれのハンドルを手で持ち、大きく刃を開いた状態で分解します。
- 刃の開閉が重くなったと感じたら、刃裏に少量の食用油を塗ると回復します。

#### ■ 刃部の外し方

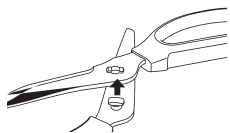


刃部を開きビスから外します

#### ■ 刃部の付け方

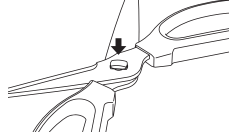

刃部を開きビスに付けます

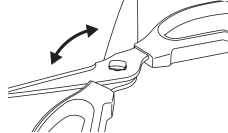

最大に開いた状態から15度戻した位置でビスから着脱できます

#### 本品の廃棄について

- 廃棄時は各自治体の定める方法に従って処理してください。

品質表示	
刃部	ステンレス刃物鋼
ビス	ステンレス鋼
ハンドル部	ポリプロピレン、ポリエチレン、合成ゴム 耐熱温度:100℃ 中国製

お問い合わせ先  
株式会社 良品計画 www.muji.com  
〒170-8424 東京都豊島区東池袋4-26-3  
お客様相談室でんわ 0120-14-6404

### User Guide

MUJI 無印良品

ver.2022.11

4550512076971 Detachable and washable kitchen scissors  
Approx. L20 cm

Read this User Guide before use to ensure correct use of the product.  
Store this guide in an easily accessible location for future reference.

#### Safety Advice

Symbols used in this guide indicate possible dangers associated with misuse of this product.  
The following are the symbols and their meanings.

ⓐ Actions that must be taken. ⓑ Actions that are prohibited.

#### ⚠ WARNING Indicates a hazard which may result in death or serious injury.

- ⓐ The product has blades. Handle and store it with care.
- ⓑ The product is intended for cooking use. Do not use for other than its intended purpose.
- ⓒ Do not use with greasy or soapy hands.
- ⓓ Do not use this product if it is damaged or deformed.
- ⓔ Keep out of reach of small children.

#### ⚠ CAUTION Indicates a hazard which may result in minor injury or property damage.

##### Before use

- ⓐ Wash with water or lukewarm water before use, and let dry well.
- ⓑ Be careful not to touch the blades or drop the product when washing.


##### During use

- ⓐ Do not hold only one handle, and do not keep the blades open when carrying the product.  
Doing so may cause the blade to fall off due to its detachable feature.
- ⓑ Do not widely open the blades when using the product. Doing so may cause the blades to detach, resulting in injury.
- ⓒ Do not tighten or untighten the rivet. Doing so may damage the product.
- ⓓ Do not use/store near open flames. Doing so may result in deformation.

##### After use

- ⓐ Clean the product after use. Dry thoroughly before storing.
- ⓑ Be careful not to touch the blades or drop the product when washing.
- ⓒ Do not wash with a wire wool or abrasive powder. Doing so may cause scratches.
- ⓓ Do not store when wet or in a place with high humidity. The product may rust if left dirty or wet.  
The steel used for the blades is particularly prone to rust compared to stainless steel generally used, as it contains carbon for quenching effects.


#### Part Names

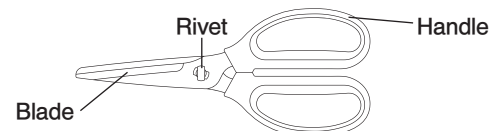

#### Directions for Use


- Wash with water or lukewarm water before use, and let dry well.
- Wash with a soft sponge soaked in diluted neutral dishwashing detergent.
- Can be washed and dried in a dishwasher.
- The blades are detachable. Hold the handles with both hands, and widely open the blades to detach them.
- Apply a small amount of cooking oil to the inner blade when opening/closing operation becomes less smooth.

#### ■ How to Detach

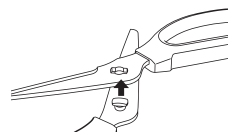


Open the blades and detach them by releasing the rivet.

#### ■ How to Attach

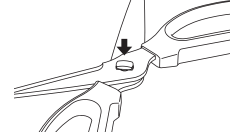

Align the rivet head with the hole to engage the rivet.

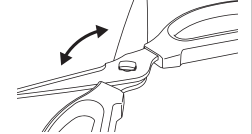

The blades can be attached/detached by engaging or releasing the rivet at the position where the blades are adjusted by 15 degrees from their widest angle.

#### Disposal

- To dispose of this product, follow the rules implemented by your local government.

Specifications	
Blade	STAINLESS STEEL
Rivet	STAINLESS STEEL
Handle	POLYPROPYLENE, POLYETHYLENE, SYNTHETIC RUBBER (HEAT-RESISITANT TEMPERATURE: 100 °C / 212 °F)
MADE IN CHINA	

Contact Information  
Please contact the store of purchase.