

木製デスク オーク材天板 Wooden desk Oak desktop

組立・取扱説明書 User Guide

日本語

この度は本製品をお買い上げいただき、誠にありがとうございます。
1ページからお読みください。

English

Thank you for your purchase.
Read these instructions from Page 10.

4550584891175 Wooden desk Oak desktop

木製デスク オーク材天板

組立・取扱説明書

この度は本製品をお買い上げいただき、誠にありがとうございます。
ご使用前に本書をよくお読みいただき、内容を理解した上で、正しく組み立て、正しくお使いください。
また、本書はいつでも確認できるように大切に保管してください。

もくじ	ページ
重要なお知らせ（安全上のご注意）	2～4
パーツリスト	5
各部の名称	5
組立方法	6～7
お手入れ方法	8
ご使用に際して	8～9
製品仕様	9
お問い合わせ先	9

重要なお知らせ（安全上のご注意）

必ずお守りください。

本書には、お使いになる方や他の人への危害と財産への損害を未然に防ぎ、安全に正しくお使いいただくために、重要な内容を記載しています。

次の内容（表示・図記号）をよく理解してから本文をお読みになり、記載事項をお守りください。

●表示の説明

誤った使い方をしたときに生じる危害や損害の程度を区分して説明しています。



警告

使用者が死亡または重傷（※1）を負うことが想定される内容です。



注意

使用者が傷害（※2）を負うことや物的損害（※3）が発生することが想定される内容です。

●図記号の説明

お守りいただく内容を次の図記号で説明しています。（次は図記号の例です。）



してはいけない「禁止」の内容です。



実行しなければならない内容です。

※1 重傷とは、失明やケガ、やけど、骨折、中毒、感電などで後遺症が残るもの及び治療に入院、長期の通院を要するものをさします。

※2 傷害とは、治療や入院や長期の通院を要しない、ケガ、やけどをさします。

※3 物的損害とは、家屋、家財にかかわる拡大損害をさします。



警告



禁止

- 乳幼児を寝かささないでください。床へ落下したり、窒息したりする原因となることがあります。
- 保護者の目の届かない場所で、お子さまだけで使用させないでください。思わぬケガの原因となります。
- 製品の上にのらないでください。バランスをくずして転倒する、製品の破損によりケガをするおそれがあります。
- 不要になった梱包材は、幼児の手の届くところに置かないでください。頭からかぶるなどしたときに、口や鼻をふさぎ、窒息するおそれがあります。
- 製品で電化製品の電源コードを踏まないでください。コードが破損し、感電や火災の原因となります。
- 引出しの上に腰掛けたり、ぶら下がったり、無理な力で引っ張ったりしないでください。転倒や破損、ケガをするおそれがあります。
- 引出しが複数ある場合、同時に開けないでください。バランスがくずれて倒れ、ケガをするおそれがあります。
- フィッティングパーツは幼児の手の届くところには置かないでください。また、なくさないでください。これらは小さく、誤飲してしまうと窒息などのおそれがあります。

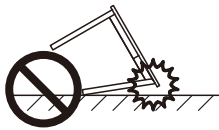


注意



禁止

- 引出しを強く引っ張らないでください。破損したり、引出しが抜け落ちたりケガの原因となります。
- 耐荷重を超えて物をのせたり、耐荷重内でも一部に片寄ってのせたりしないでください。変形や破損の原因となり、ケガをするおそれがあります。
- 組み立てが不完全なまま使用しないでください。固定部分がはずれてケガの原因になることがあります。










⚠ 注意 (つづき)	
 禁止	● 高温な場所、乾燥した場所で長期間設置しないでください。製品の反りやゆがみ、割れなどの原因になります。 ● 移動させる際は、製品を引きずらないでください。製品破損や床面へのキズ、ケガしたりするおそれがあります。 ● 指定の用途以外で使用しないでください。破損してケガをするおそれがあります。 ● フェルトを貼った後、凹凸や継ぎ目などの段差のある床面では使用しないでください。フェルトがはがれると、床面を汚したり、キズつけたりする原因となります。 ● 破損や変形した状態では使用しないでください。 ● 修理や改造はしないでください。製品の強度が弱くなり、ケガをするおそれがあります。 ● 屋外では使用しないでください。変形や著しい劣化が起こり、ケガをする原因となります。 
 行う	● 定期的に、またご使用前に、各部のボルトなどにゆるみがないか確認してください。ゆるみがあれば締め直してください。引出しが脱落したり、思わぬ事故の原因になります。 ● 引出し開閉時、手や指が可動部や隙間に触れないようにしてください。指や手のはさまれて、ケガをするおそれがあります。 ● 使い始める時は、室内の換気を十分にしてください。接着剤などに含まれるホルムアルデヒドが残っている可能性があり、化学物質に敏感な体質の方や乳幼児などアレルギー症状をおこすおそれがあります。 ● 壁から少し離して設置してください。空気の滞留や壁側の結露を防ぎ、カビの発生防止になります。また、壁に直接触れないことで、壁紙の変色防止にもなります。 ● 使用時は、脚底面にフェルトなどの保護材を貼ったり、敷物を敷いたりしてご使用ください。床へのキズ防止、また、クッションフロアなどの場合は木部の塗料とクッションフロアの反応による変色を防いでくれます。 ● 移動させる際は、収納物を取り除き、大人2人以上で移動させてください。1人で無理に移動させると、破損、ケガをするおそれがあります。 ● 各部にグラつきや破損がないか定期的に点検し、異常が認められたら使用を中止してください。そのまま使用すると、ケガや破損の原因となります。 ● 引出しの取りはずしや取り付けは、中の収納物を全て出してから行ってください。収納物が入ったまま取りはずそうとすると、破損したり、収納物が落下してケガをするおそれがあります。

お願い (その他 注意)	
	● 平らで安定した場所に設置してください。不安定な場所での使用は、製品のゆがみ、破損の原因になることがあります。 ● 直射日光や冷暖房器具などの熱や風が製品に直接当たらないようにしてください。反りやゆがみ、割れ、変色などの原因になります。 ● 暖房器具使用時は、室内温湿度を適正に保ってください。冬場などの暖房器具による室内の極端な乾燥は、天然木材の割れや反りの原因となります。 ● 製品に直接熱い物や濡れた物を置かないでください。反りやゆがみ、割れ、変色、カビなどの原因となります。 ● 飲食時は、ランチョンマットやコースターなどを敷いてお使いください。濡れた物、熱い物が置かれると、変形や変色の原因となります。


お願い (その他 注意) (つづき)

- テーブルの上で筆記などの作業を行う時は、必ずマットなどを敷いてください。天板に凹みやキズがつく原因となります。
- 製品の上で陶器など底のざらついた物を直接置いて引きずらないでください。天板がキズがつく、凹む原因となります。
- 突板や天然木の上にビニール製品（塩化ビニル樹脂など）を直接、長期間置かないでください。変色や表面がはがれる原因となります。
- 長時間、化学雑巾を接触させたままにしないでください。変色や表面がはがれる原因となります。
- シンナーなどの有機溶剤や漂白剤などの薬剤でお手入れしないでください。変色や変形の原因となります。
- 塗装やプラスチック部にアルコールを含む消毒剤などが垂れた場合にはすぐにふき取ってください。また、過度なアルコール消毒剤でのふき掃除は避けください。表面が変色や変質することがあります。
- 鉄でできたものを製品の上に直接置かないでください。天板が濡れていたりすると、鉄成分によって表面が黒く変色するおそれがあります。
- 廃棄の際は、居住地域の自治体のルールに従い、処分してください。
- 組み立ての際は、手袋などをつけて作業してください。思わぬケガの防止になります。

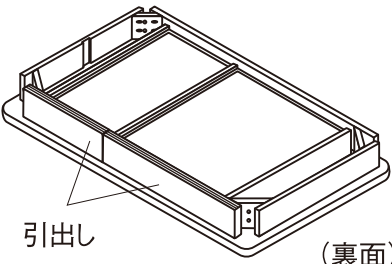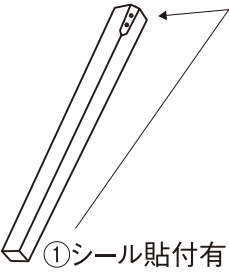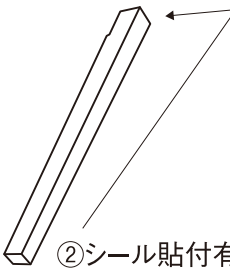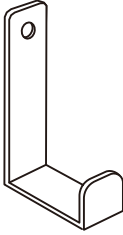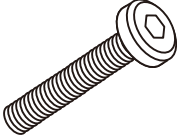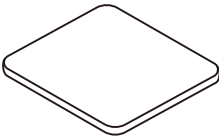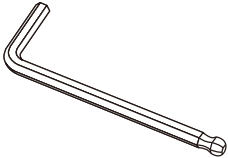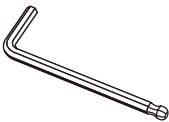パーツリスト

①天板×1 	②脚-①×2 (向かって左前 ／向かって右後)  ①	③脚-②×2 (向かって右前 ／向かって左後)  ②	④フック×2  ※①に取り付けてあります
フィッティングパーツ			
⑤ワッシャー×8 	⑥スプリングワッシャー×8 	⑦ボルト×8 	⑧ボルト×2  ※①に取り付けてあります
⑨フェルト×4 (30×30 mm) 	⑩レンチ(大)×1 (5 mm) 	⑪レンチ(小)×1 (4 mm) 	

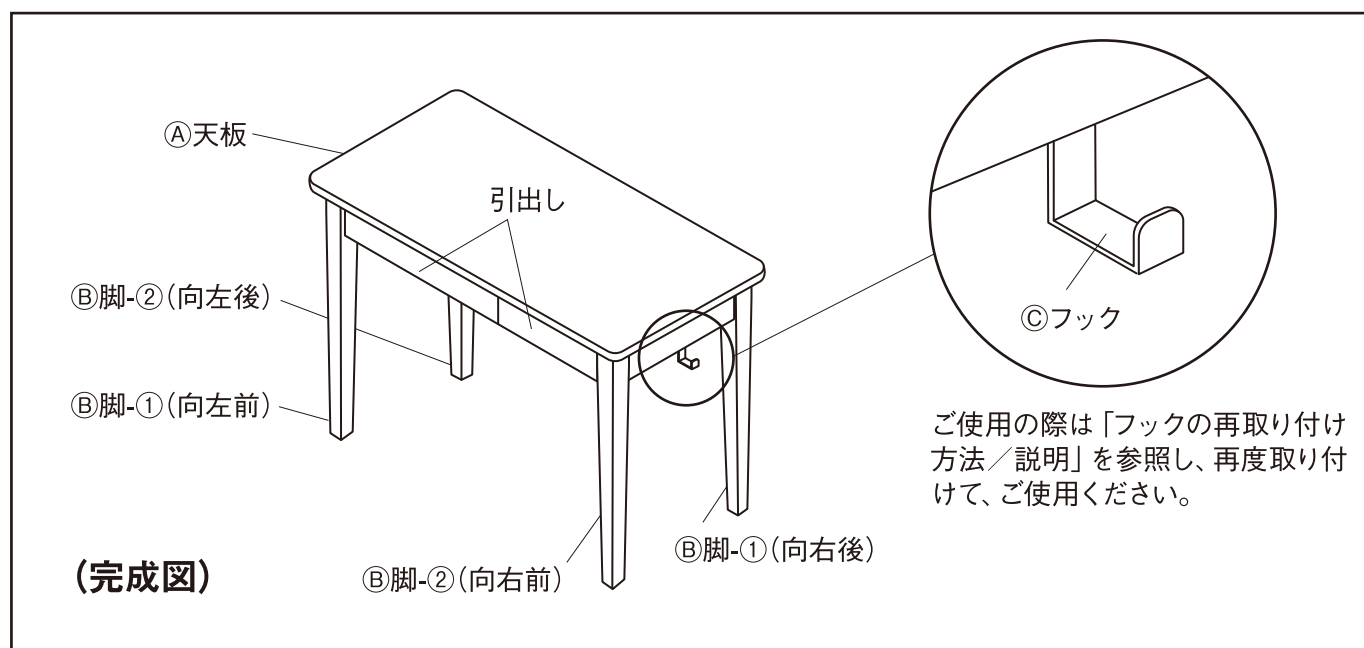各部の名称



組立方法



- ❶ 組み立ては、大人2人以上で行ってください。1人で作業すると、転倒や破損、床をキズつける、ケガの原因となります。
- ❷ 組み立てには電動工具は使用しないでください。無理な負荷がかかると、製品破損によりケガをするおそれがあります。

脚の取り付け

※敷物を敷くなどして、床や既存の家具にキズがつかないように、注意して行ってください。

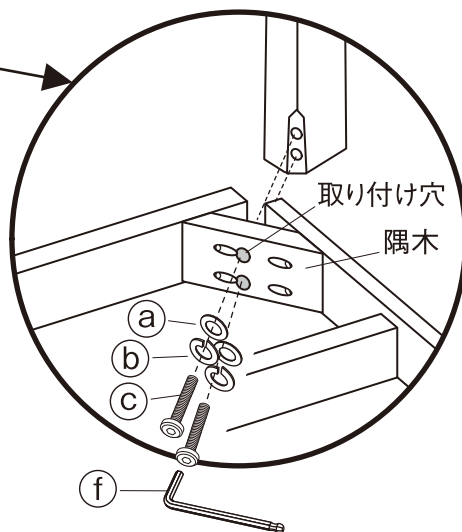
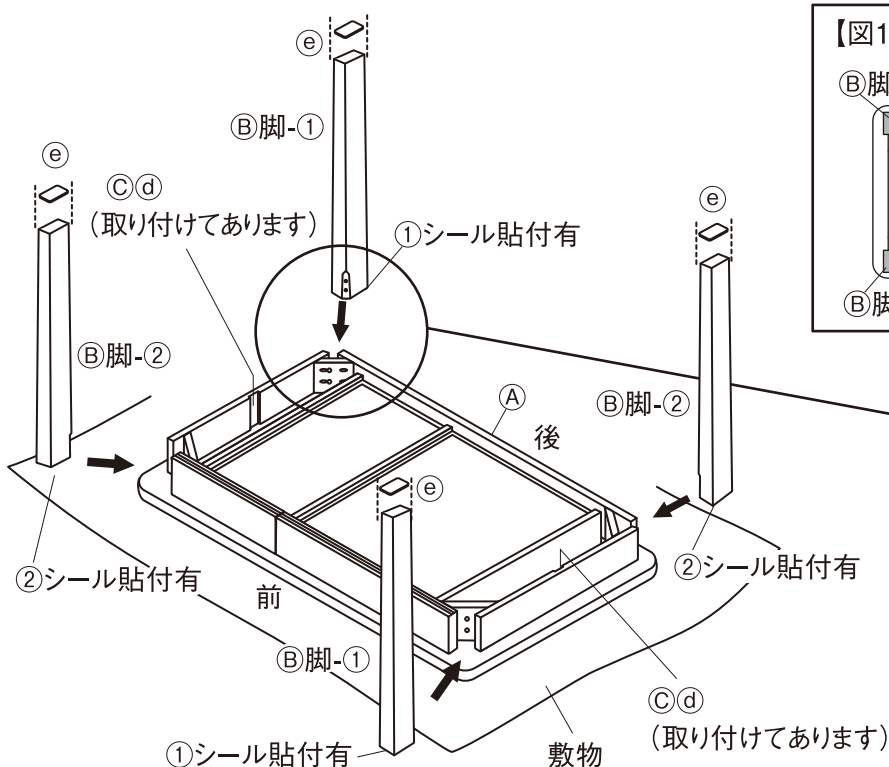
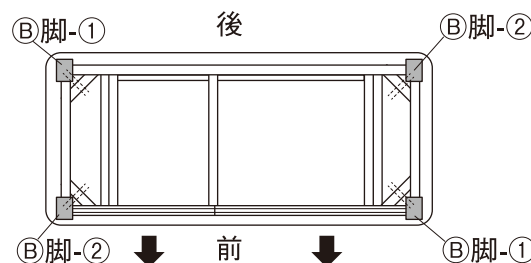
1

引出しが飛び出さないよう押さえながら④天板を下にして置いてください。⑤脚の向きを【図1】【図2】を確認して合わせ、⑤脚を①、②、③を使い④天板に取り付けます。⑥でしっかり締め付けてください。脚が天板とすきまなく取り付けられていることを確かめてから⑤脚底面に付属の⑦を貼り付けます。その後引出しの飛び出しに注意しながら、2人以上で静かに起こしてください。

お願い
(その他 注意)

⑦フェルトを貼る前に脚の貼る面のほこりなどの付着物をふき取ってください。付着物があると粘着力が低下します。貼った後は全体をしっかりと押さえて、ムラなく接着してください。

【図1】⑤脚取り付け位置 (天板裏からの図)



お願い
(その他 注意)

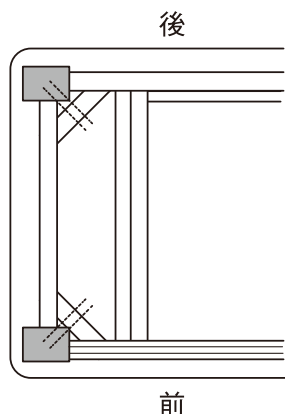
脚の取り付け位置にご注意ください。

【図2】 ⑤脚取り付け位置の説明

※⑤脚の番号と取り付け位置をよく確認して配置し、下の右図のように取り付けてください。




誤り



(天板を裏にした状態の図)



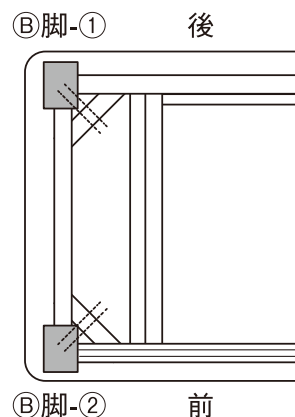正しい向き



組立方法（つづき）

フックの再取り付け方法／説明

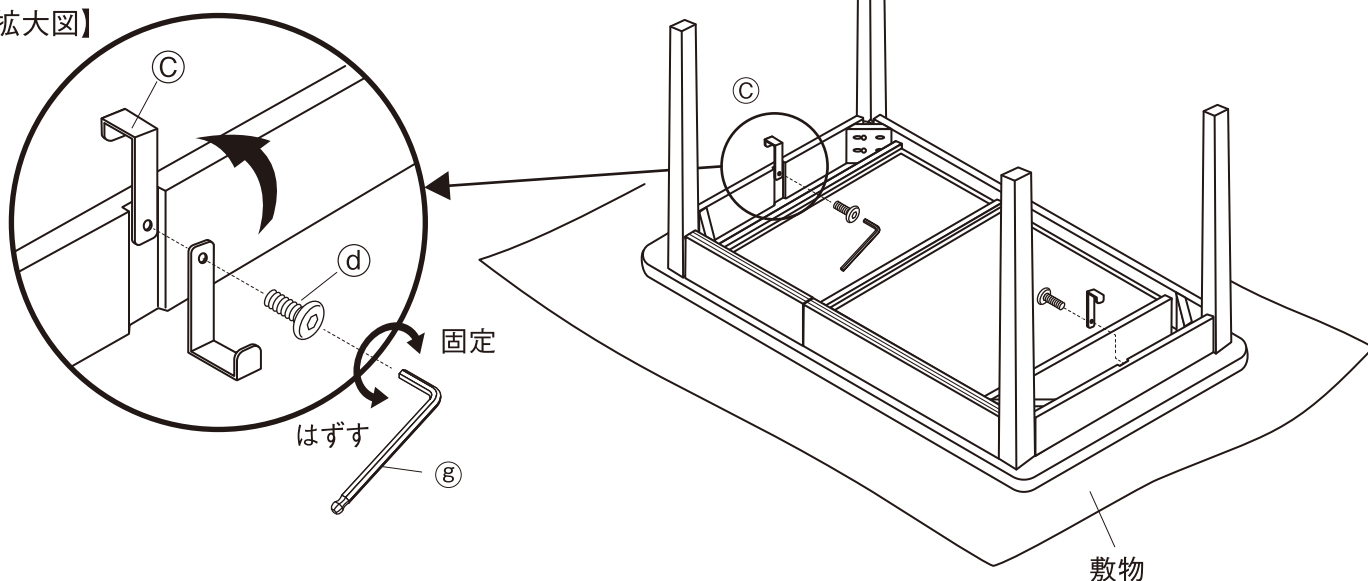
2

※敷物を敷くなどして、床や既存の家具にキズがつかないように、注意して行ってください。

◎フックは出荷時に④天板に取り付けられています。フックがイラストのように外側になるように回転させ、再度④でしっかり締め付けてください。

用途に合わせ、フックの向きを内側に向けて取り付けることも可能です。

【拡大図】




注意

- ④ デスクを起こす際は、一部の脚に片寄る過度な荷重は加えないでください。部材の破損の原因となり、ケガをするおそれがあります。
- ④ 組み立て後、1週間程度経過しましたら、ボルトを締め直してください。使い始めはゆるんでいる場合があります、そのまま使用すると破損、ケガの原因となります。



●スライドレールタイプの引出しの取りはずし方

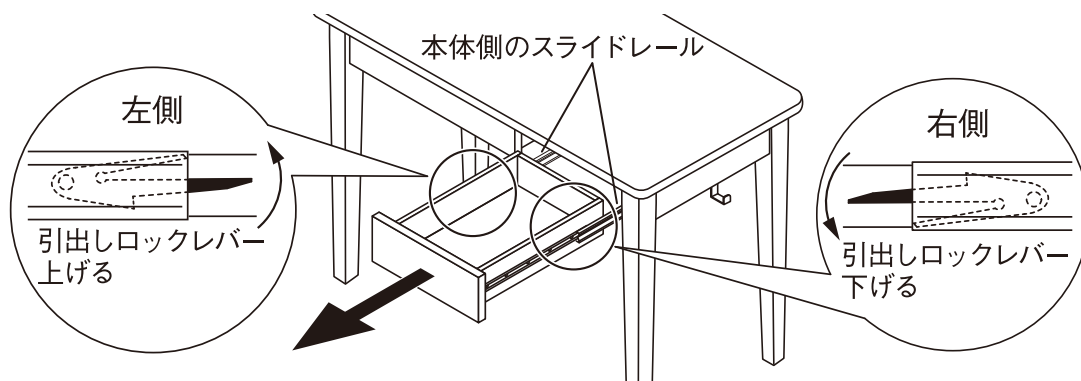引出しを前方にいっぱいまで引き出し、図の位置にある引出しロックレバーを上下に動かしてロックを解除した後、引出しをまっすぐ引き抜きます。



※引出しを取り付ける場合は、本体側のスライドレールを本体側に戻し、レール位置を合わせて水平に差し込みます。

しっかりと押さえ込む為に、本体を押さえながら2人で行ってください。

お手入れ方法

保守点検

- 各部にグラつきや破損がないか定期的に点検し、異常が認められたら使用を中止してください。そのまま使用すると、ケガや破損の原因となります。
- 害虫を発見した場合は、直ちに殺虫や防虫処理をしてください。放置すると虫害が拡大するおそれがあります。

木部のお手入れ

- 塗装面のほこりはやわらかい布または、はたきで軽く払ってください。
- 汚れのひどい時は、3～5%に薄めた中性洗剤を浸した布で汚れを落とし、その後、水で浸した布で洗剤分をよくふき取ってください。次に乾いた布で軽くふいた後、自然乾燥させてください。
- 長時間、化学雑巾を接触させたままにしないでください。変色や表面がはがれる原因となります。

金属部のお手入れ

- 毎日のお手入れはやわらかい布で乾ぶきしてください。
- 汚れのひどい時は、3～5%に薄めた中性洗剤を浸した布で汚れを落とし、その後、水で浸した布で洗剤分をよくふき取ってください。次に乾いた布で軽くふいた後、自然乾燥させてください。
- 金属部には、防錆潤滑油を薄く塗り、やわらかい布で軽くふき取ってください。

ご使用に際して

天然木について

- 本製品は天然木(突板)を使用しているため、製品ごとに天然木材特有の個体差(木目や色合いなど)がありますが、あらかじめご了承ください。
- 天然木(突板)は下記の条件により、割れや反りなどが発生することがありますので、ご注意ください。
 - ・直射日光の当たる場所でのご使用は出来る限りお避けください。どうしても直射日光が当たる場合は、カーテンなどで出来る限り避けてご使用ください。
 - ・冷暖房器具の近くでのご使用は出来る限り避け、必ず冷暖房の風が直接当たらないようにしてください。
 - ・特に冬の暖房による室内の極端な乾燥は、天然木の割れ、反りを発生させる原因となります。

ホルムアルデヒドの対策について

- ホルムアルデヒドとは
シックハウス症候群の原因物質の一つといわれています。常温で気化する、無色で刺激臭のある化学物質で、家具はもとより建築資材・壁紙を貼る接着剤などに含まれています。少しずつ放散されるため、ホルムアルデヒドに汚染された室内に長時間いると目がチカチカしたり、喉に不快な刺激を感じたりすることがあります。濃度が高いと呼吸困難を起こす場合もあります。

- お部屋の換気について



❗ 家具を設置の際は、室内の換気を十分にしてください。
化学物質に敏感な体質の方や乳幼児などアレルギー症状を起こすことがあります。

ホルムアルデヒドは空気中に放散されやすいので、普段からこまめに室内の換気を行うようにしてください。特に複数の家具を同時に設置した場合は、窓をできるだけ広く開け、十分な換気を行ってください。室内の温度が高くなると、ホルムアルデヒドは多く放散される傾向がありますので、夏季に室内を長時間閉め切っている場合は、特に換気をするようにご注意ください。換気効率を上げるため複数の窓を開ける、換気扇、扇風機、サーキュレーターの利用をおすすめします。

ご使用に際して（つづき）

●化学物質に敏感な体質のお客さまへ

ホルムアルデヒドに限らず、シックハウス症候群に該当する化学物質の許容量には個人差があり、室内濃度指針値（健康上望ましいとされるホルムアルデヒドの室内濃度値）以下の濃度であっても反応する体質の方もいらっしゃいます。現段階の無印良品の家具においても、ホルムアルデヒド放散量の少ない材料を極力使用しておりますが、まったく放散されないわけではありませんので、ご注意ください。

アレルギー症状が起きた際は、医師にご相談されることをおすすめします。

●ホルムアルデヒド吸着・分解シートについて

狭い空間ではホルムアルデヒドは逃げ場がなく、材料に再吸着する可能性がありますので、お手元に届くまで少しでもホルムアルデヒド濃度を低下させるために、無印良品の家具には、ホルムアルデヒド吸着・分解シートを同梱しています。

※同梱の「ホルムアルデヒド吸着・分解シート」は効力が落ちておりますので、燃えるゴミとして処分してください。

製品仕様

品 名	木製デスク オーク材天板	
規 格	幅110×奥行55×高さ70 cm	
J A N	4550584891175	
製 品 寸 法	幅1100×奥行550×高さ700 mm	
引出しの奥行	約403 mm	
製 品 重 量	約21 kg	
用 途	デスク	
耐 荷 重	天 板	40 kg以下
	引出し	各3 kg以下
	フック	各3 kg以下
材 質	甲板の表面材：天然木（オーク材） 脚 部：天然木（オーク材） 引 出 し：前板 天然木（オーク材） 内箱 積層材 スライドレール：金属（鋼） フ ッ ク：金属（鋼） 表 面 加 工：木 部 ウレタン樹脂塗装 フック ポリエステル樹脂（粉体塗装）	
原 産 国	カンボジア	

お問い合わせ先

製品のお問い合わせは、お買い上げの販売店もしくは下記お客様相談室までご連絡ください。

株式会社 良品計画

お客様相談室でんわ

 **0120-14-6404**

Wooden desk Oak desktop

User Guide

Thank you for your purchase.
Read this User Guide before use to ensure correct assembly and use of the product.
Store this guide in an easily accessible place for future reference.

Table of Contents	Pages
Important Information (Safety Advice)	11 - 13
Parts	14
Part Names	14
Assembly Instructions	15 - 16
Care Instructions	17
General Notes	18
Specifications	19
Contact Information	19

Important Information (Safety Advice)

The instructions must be followed.

This User Guide contains important information for safe use of the product in order to prevent harm to users and other individuals as well as damage to property.

Please ensure you fully understand the following content (indications and graphic symbols) before reading the main content of this guide and follow the given instructions.

- Explanations of Indications
The extent of injury and damage that may arise when the product is used incorrectly is classified and explained with the following symbols.

 WARNING Indicates a hazard with a level of risk which, if not avoided, could result in death or serious injury ^{*1} to the user.	 CAUTION Indicates a hazard with a level of risk which, if not avoided, could result in injury ^{*2} to the user or property damage. ^{*3}
---	---

- Explanations of Graphic Symbols
Instructions are given in the form of the following graphic symbols.
(Examples of graphic symbols are as follows.)

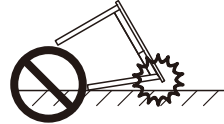
 Actions that are prohibited.	 Actions that must be taken.
--	---

*1 “Serious injury” indicates injuries, such as blindness, traumas, burns, bone fractures, poisoning, or electric shocks, that have long-term effects and require hospitalisation and/or long-term hospital visits for treatment.

*2 “Injury” indicates traumas or burns that do not require hospitalisation or long-term hospital visits for treatment.

*3 “Property damage” indicates extended damage that involves the house or household property.





 WARNING	
 DON'Ts	• Do not lay small children on the product. Doing so may cause them to fall on the floor or suffocate. • Do not let children use without adult supervision. Doing so may cause unexpected injury. • Do not sit or stand on the product. Doing so may cause you to lose your balance and fall, or damage the product, leading to injury. • Do not leave unnecessary packaging materials within reach of small children. Children may accidentally pull the materials over their heads, cover their mouths and/or noses and suffocate. • Do not place the product on the power cord of any electrical appliance. Doing so may damage the cord, leading to electric shock or fire. • Do not sit on or hang from the drawers, or pull them with excessive force. Doing so may cause the product to tip over or become damaged, leading to injury. • Do not open multiple drawers at the same time. Doing so may cause the product to lose its balance and tip over, leading to injury. • Do not keep the fitting parts within reach of small children, and do not lose them. Children may choke if they put small parts in their mouths and accidentally swallow them.





 CAUTION	
 DON'Ts	• Do not pull the drawers with excessive force. Doing so may cause the product to become damaged or the drawers to fall out, leading to injury. • Do not place any items that exceed the load capacity, or place items only on one side even if they are within the load capacity. Doing so may cause deformation or damage, leading to injury. • Do not use unless fully assembled. It may cause the fixed parts to come off and lead to injury. • Do not place in locations with high temperatures or low humidity for extended periods. Doing so may cause warping, distortion or cracking. • Do not drag the product to move it. Doing so may cause product damage, floor scratches and/or injury. • Do not use the product for anything other than its intended purpose. Doing so may cause damage, resulting in injury. • Do not use the product on an uneven floor after attaching the felt pads. Doing so may cause them to come off, leading to dirt or scratches on the floor surface. • Do not use if damaged or deformed. • Do not attempt to repair or modify. Doing so may reduce the strength of the product, leading to injury. • Do not use outdoors. Doing so may cause deformation or severe degradation, resulting in injury. 
 DOs	• Check for any looseness in bolts or other parts regularly and before use. Retighten them if any looseness is found. Failure to do so may cause the drawers to fall out or lead to accidents. • Do not touch the moving parts and gaps when opening/closing the drawers. Doing so may cause your hands or fingers to get caught, resulting in injury. • Ventilate the room well during initial period of use. Formaldehyde contained in the adhesive may still remain, and individuals with chemical sensitivities and small children may experience allergic reactions. • Place the product slightly away from the wall. Doing so prevents air stagnation and condensation on the walls, which helps prevent mould growth. Avoiding direct contact with the wall also prevents discolouration of the wallpaper. • Apply felt pads or any protective materials to the bottoms of the legs, or use an underlay. This helps protect floors from scratches and prevents discolouration on vinyl floors caused by chemical reactions between the coating on the wooden parts and the flooring. • When moving the product, remove all stored items and be sure to move it with at least two adults. Moving it alone may result in product damage and/or injury. • Regularly check for any wobbling or damage in all parts, and discontinue use if any abnormalities are found. Continued use under this condition may cause injury or damage. • Take out all items inside before removing or re-inserting the drawers. Not doing so may cause the drawers to become damaged or the items to fall, leading to injury.

Note (Other Caution)


- Place the product on a flat and stable surface. Using the product on an unstable surface may cause it to become distorted or damaged.
- Avoid exposure to direct sunlight and prevent heat or air from appliances such as air conditioners or heaters from blowing directly onto it. Not doing so may cause warping, distortion, cracking or discolouration.
- Keep the room at an appropriate temperature and humidity level when using a heating appliance. Extremely dry conditions, especially in winter, may cause cracking or warping of natural wood.
- Do not place hot or wet items directly on the product. Doing so may cause warping, distortion, cracking, discolouration or mould growth.
- Lay place mats and coasters on the product when eating. Placing wet or hot items directly on the product may cause deformation or discolouration.
- Be sure to use a mat or similar protection when writing or drawing on the desk. Not doing so may cause dents or scratches on the desktop.
- Do not place and drag items with rough bottom surfaces, such as ceramics, directly on the product. Doing so may cause scratches and dents on the desktop.
- Do not place vinyl items (vinyl chloride resin, etc.) directly on veneer or natural wood for an extended period. Doing so may cause discolouration or peeling of the surface material.
- Do not leave a chemically treated cloth in contact with the product for a long time. Doing so may cause discolouration or peeling of the surface material.
- Do not use organic solvents, such as thinner, or chemicals, such as bleach, for cleaning. Doing so may cause discolouration or deformation.
- Wipe off immediately if alcohol-based disinfectant is spilt on the coating or plastic parts. Avoid excessive wiping with alcohol disinfectant. Doing so may cause discolouration or deterioration of the surface.
- Do not place iron objects directly on the product. Iron components may leave black marks if the desktop is wet.
- To dispose of the product, follow the rules implemented by your local government.
- Wear gloves during assembly of the product. Doing so prevents unexpected injury.

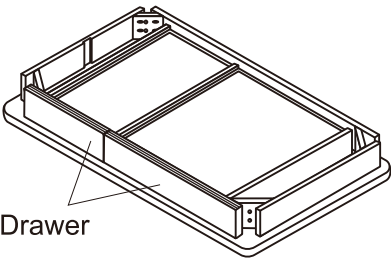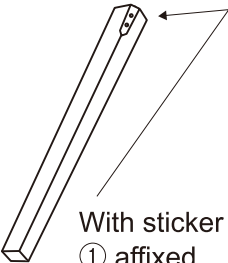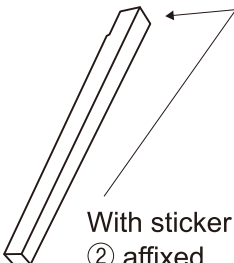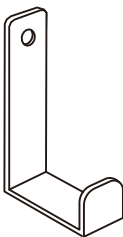Parts

Ⓐ Desktop × 1  Drawer (Underside)	Ⓑ Leg-① × 2 (For front left and back right when facing the product)  With sticker ① affixed ①	Ⓑ Leg-② × 2 (For front right and back left when facing the product)  With sticker ② affixed ②	Ⓒ Hook × 2  * Pre-attached to Ⓐ
---	---	--	--

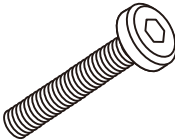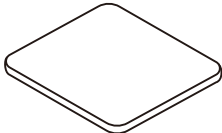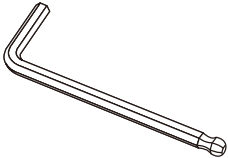Fitting Parts			
Ⓐ Washer × 8 	Ⓑ Spring Washer × 8 	Ⓒ Bolt × 8 	Ⓓ Bolt × 2  * Pre-installed on Ⓐ
Ⓔ Felt Pad × 4 (30 × 30 mm) 	Ⓕ Wrench (L) × 1 (5 mm) 	Ⓖ Wrench (S) × 1 (4 mm) 	

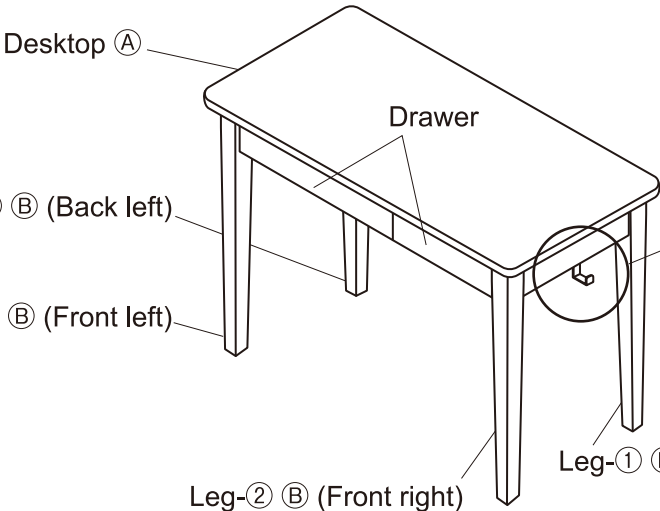Part Names

 Desktop ① Drawer Leg-② ② (Back left) Leg-① ② (Front left) Leg-② ② (Front right) Leg-① ② (Back right) Hook ③ Refer to “Reattaching the Hooks” when using the hooks. (Completion Image)

Assembly Instructions



- ❗ The product must be assembled by at least two adults. Assembling alone may cause tip-over, damage, floor scratches and/or injury.
- ⚠ Do not use power tools to assemble the product. Applying an excessive load to the product may cause it to become damaged and lead to injury.

Attaching the Legs

* Place an underlay to protect the floor and other furniture from scratches.

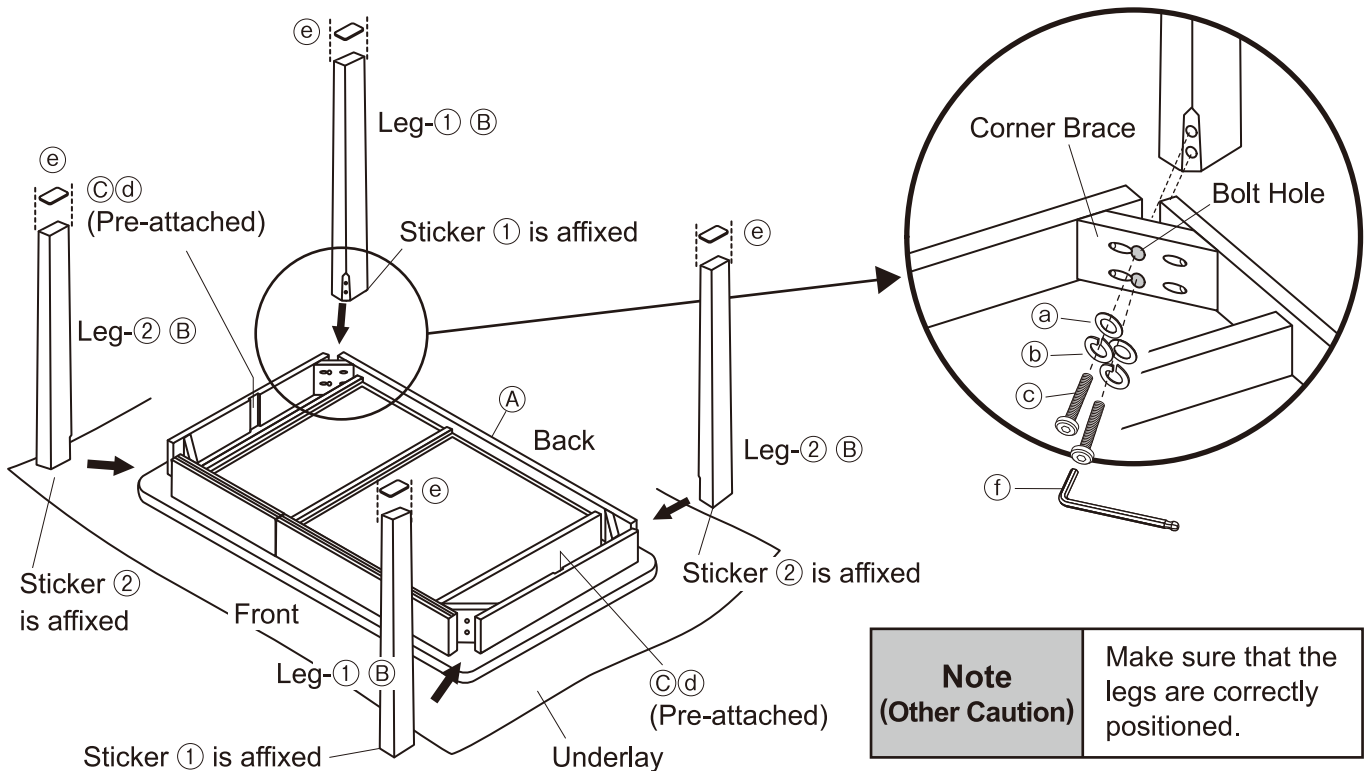
1

Turn Desktop (A) upside down while holding the drawers to prevent them from sliding out. Position Leg (B) in the correct orientation as shown in the rightmost figure in [Fig.1] below and attach it to Desktop (A) by tightening (a), (b) and (c) securely using (f). After confirming that all the legs are attached to the desktop with no gaps, attach the included (e) to the bottoms of Legs (B).

Then, with two or more people, slowly turn the desk upright, ensuring the drawers do not slide out.

Note (Other Caution)

Wipe off any dust and other particles from the attachment surface before attaching Felt Pad (e). It may not adhere well if there are any particles remaining on the surface. After attaching, press down firmly on the entire surface to ensure even adhesion.




Note (Other Caution)

Make sure that the legs are correctly positioned.

[Fig. 1] Attachment Positions of Legs (B)

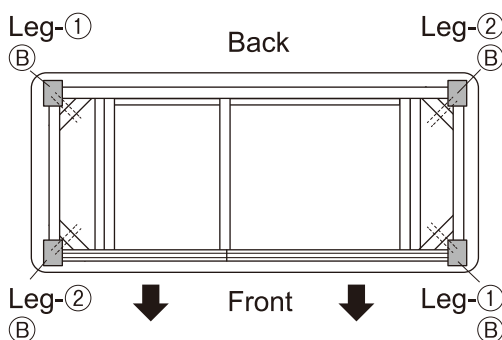
(Bottom view of the desktop)




* Carefully check the numbers on Legs (B) and their positions. Then, attach Legs (B) as shown in the right-hand figure below.



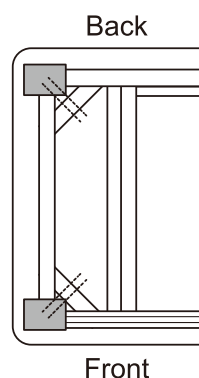Incorrect




Correct
Orientations

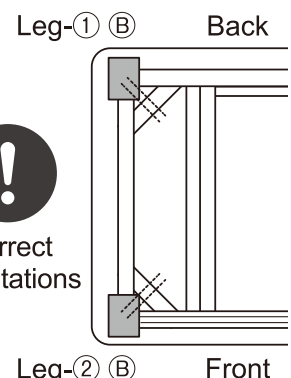

Assembly Instructions (Continued)

Reattaching the Hooks * Place an underlay to protect the floor and other furniture from scratches.

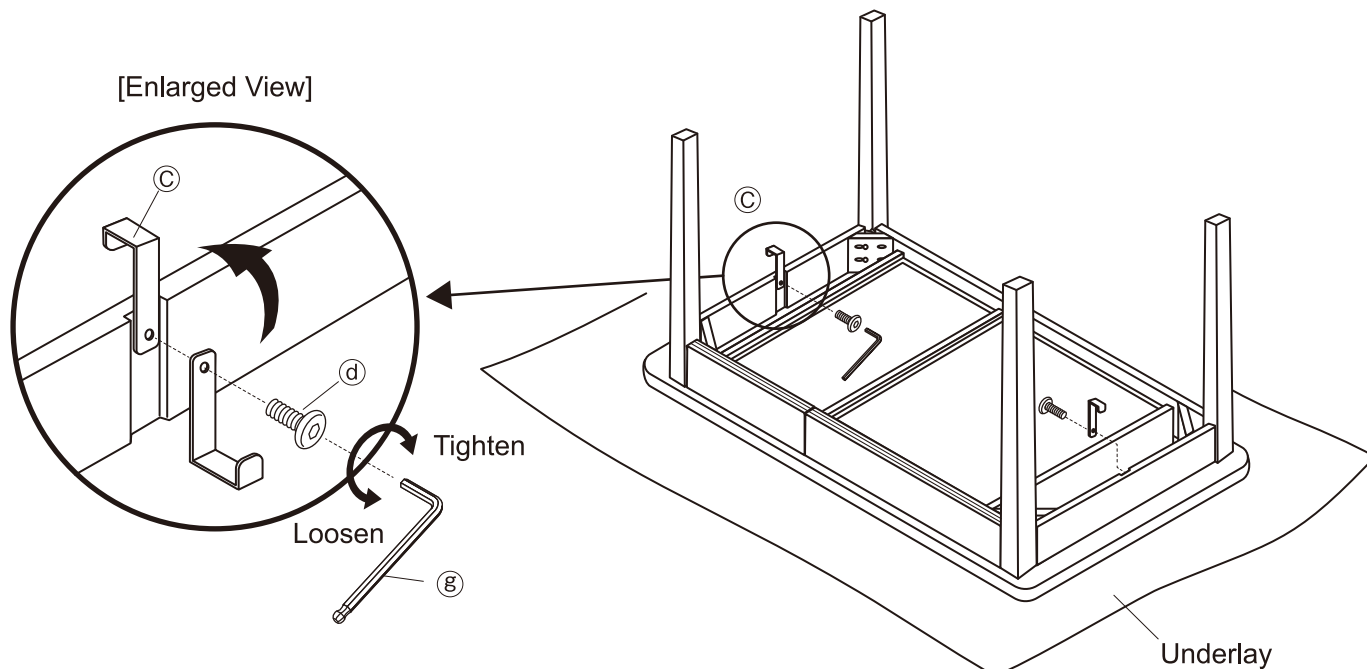- 2** Hooks ③ are pre-attached to Desktop ①. Turn Hook ③ as shown in the figure so that its tip faces outwards. Then, reattach it by firmly tightening ④. They can be attached facing inwards depending on your intended use.




CAUTION

- ⊘ Do not apply excessive load only to one side of the legs when turning the desk upright. Doing so may damage the parts and lead to injury.
- ⓘ Retighten all the bolts approximately one week after assembly. They may be loose at the start of use, and continued use under this condition can lead to damage and/or injury.



• How to Remove the Drawer with Side Rails

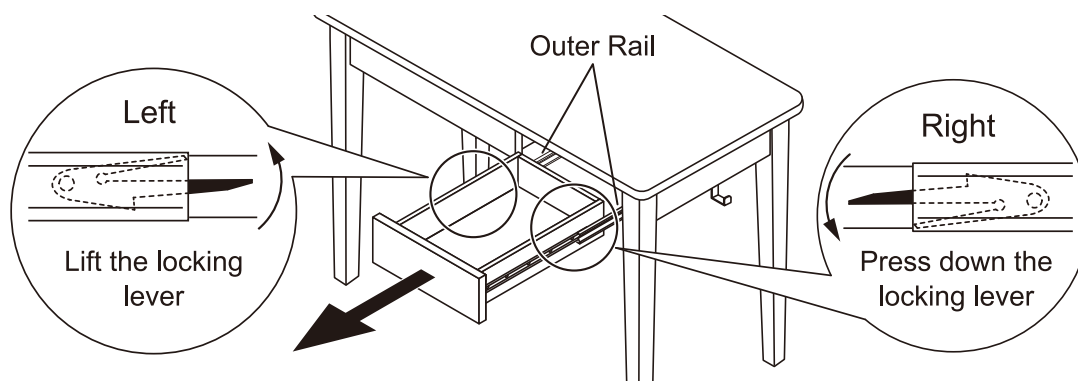Fully open the drawer. Move the locking levers as shown in the figure (one up and one down) to unlock the rails. Then, pull the drawer straight out.



* When inserting the drawer, slide the intermediate rails back into the outer rails, and align the inner rails with them. Then, push the drawer straight into place.

To ensure stability, one person should hold the main unit securely while another inserts the drawer.

Care Instructions

Maintenance and Inspection

- Regularly check for any wobbling or damage in all parts, and discontinue use if any abnormalities are found. Continued use under this condition may cause injury or damage.
- Take insecticidal measures immediately if any type of pest is found. If left untreated, pest damage may worsen.

Maintenance of Wooden Parts

- Gently wipe off dust from coated surfaces using a soft cloth or duster.
- If the parts are heavily soiled, clean them with a cloth soaked in a 3% to 5% neutral detergent solution and thoroughly wipe off any residual detergent with a damp cloth. Then, gently wipe with a dry cloth and let them dry naturally.
- Do not leave a chemically treated cloth in contact with the product for a long time. Doing so may cause discolouration or peeling of the surface material.

Maintenance of Metal Parts

- For daily care, wipe with a soft, dry cloth.
- If the parts are heavily soiled, clean them with a cloth soaked in a 3% to 5% neutral detergent solution and thoroughly wipe off any residual detergent with a damp cloth. Then, gently wipe with a dry cloth and let them dry naturally.
- Apply a thin coating of anti-rust lubricant to the metal parts, and lightly wipe the excess off with a soft cloth.

General Notes

Care Tips for Natural Wood Products

- As this product is made of natural wood (veneer), each piece has unique variations in grain and colour.
- Note that cracking and warping may occur in natural wood (veneer) under the following conditions.
 - Avoid using the product in locations exposed to direct sunlight. If exposure to direct sunlight is unavoidable, use curtains or other coverings to avoid it as much as possible.
 - Avoid using the product near heaters or air conditioners and make sure that the air from a heater or an air conditioner does not blow directly on it.
 - Extremely dry indoor conditions caused by heating appliances, especially in winter, may cause cracking or warping of natural wood.

Formaldehyde Countermeasures

- What is Formaldehyde?

Formaldehyde is said to be a cause of sick house syndrome. It is a colourless, pungent-smelling chemical that vaporises at room temperature, often found in furniture, building materials, wallpaper adhesives, etc. As it is gradually released into the air, spending a long time in a room contaminated with formaldehyde can result in eye/throat irritation. Also, exposure to a high concentration of formaldehyde may cause breathing difficulties.

- Room Ventilation



❗ Ventilate the room well when installing the furniture. Some individuals sensitive to chemicals and small children may experience allergic symptoms.

Be sure to ventilate the room regularly as formaldehyde is released into the air. Especially when installing multiple pieces of furniture at the same time, open the windows wide enough to allow adequate ventilation. Formaldehyde release tends to increase with temperature rise within the room. Therefore, be sure to ventilate well after the room has been closed for a long time during summer. It is recommended that you open multiple windows and use a ventilation fan or an air circulator to increase ventilation efficiency.

- For Individuals Sensitive to Chemicals

There are individual differences in resistance to chemicals that are related to sick house syndrome other than formaldehyde. Therefore, even if the actual concentration in the room is lower than the indoor concentration guideline value (acceptable safe level of formaldehyde indoors), some people may react to formaldehyde. MUJI furniture is made with materials that contain as little formaldehyde as possible, but this does not guarantee that they are completely formaldehyde-free.

It is recommended that you seek medical attention if you experience any allergic symptoms.

- Formaldehyde Adsorption/Decomposition Sheet

Formaldehyde is re-adsorbed onto materials when there is nowhere for it to dissipate in a confined space. Therefore, a formaldehyde adsorption/decomposition sheet is included in the packaging to reduce formaldehyde concentration as much as possible before the product reaches the customer.

* The effect of the sheet will be diminished by the time the product reaches the customer. Dispose of the sheet as burnable waste after unpacking.

[illegible]

1. *Journal of the American Medical Association*, 1997; 278: 1039-1044.