

## 木製 リビングダイニング テーブル Wooden living dining Table

### 組立・取扱説明書 User Guide

#### 日本語


この度は本製品をお買い上げいただき、誠にありがとうございます。  
1ページからお読みください。

#### English

Thank you for your purchase.  
Read these instructions from Page 14.

4550344692660 Wooden living dining Table Oak W130 cm  
4550344692677 Wooden living dining Table Oak W150 cm

## 木製 リビングダイニング テーブル

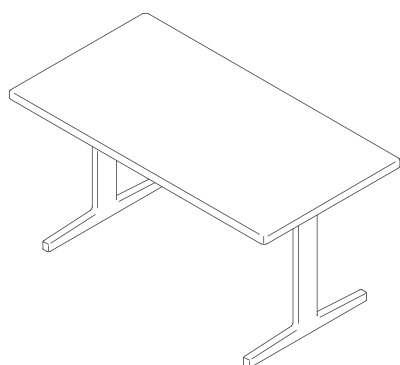

### 組立・取扱説明書

この度は本製品をお買い上げいただき、誠にありがとうございます。  
ご使用前に本書をよくお読みいただき、内容を理解した上で、正しく組み立て、正しくお使いください。  
また、本書はいつでも確認できるように大切に保管してください。

もくじ	ページ
重要なお知らせ（安全上のご注意）	2 ～ 4
パーツリスト	5
各部の名称	5
組立方法	6 ～ 8
ご使用方法	9 ～ 11
お手入れ方法	11
ご使用に際して	12
製品仕様	13
お問い合わせ先	13

# 重要なお知らせ（安全上のご注意）

必ずお守りください。

本書には、お使いになる方や他の人への危害と財産への損害を未然に防ぎ、安全に正しくお使いいただくために、重要な内容を記載しています。

次の内容（表示・図記号）をよく理解してから本文をお読みになり、記載事項をお守りください。

## ●表示の説明

誤った使い方をしたときに生じる危害や損害の程度を区分して説明しています。



### 警告

使用者が死亡または重傷（※1）を負うことが想定される内容です。



### 注意

使用者が傷害（※2）を負うことや物的損害（※3）が発生することが想定される内容です。

## ●図記号の説明

お守りいただく内容を次の図記号で説明しています。（次は図記号の例です。）



してはいけない「禁止」の内容です。



実行しなければならない内容です。

※1 重傷とは、失明やケガ、やけど、骨折、中毒、感電などで後遺症が残るもの及び、治療に入院、長期の通院を要するものをさします。

※2 傷害とは、治療や入院や長期の通院を要しない、ケガ、やけどをさします。

※3 物的損害とは、家屋、家財にかかわる拡大損害をさします。




## 警告



禁止

- 乳幼児を寝かさなideてください。床へ落下したり、窒息の原因となることがあります。
- 保護者の目の届かない場所で、お子さまだけで使用させないでください。思わぬケガの原因となります。
- 製品の上にのらないでください。バランスをくずして転倒したり、製品の破損によりケガをするおそれがあります。

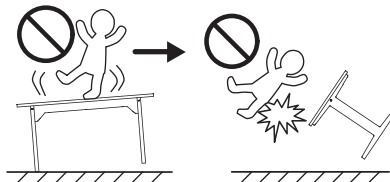

- ストーブなど引火するおそれのある物を近くに置かないでください。火災の原因になります。
- 製品で電化製品の電源コードを踏まないでください。コードが破損し、感電や火災の原因となります。
- 修理や改造はしないでください。製品の強度が弱くなり、ケガをするおそれがあります。
- 不要になった梱包材は、幼児の手の届くところに置かないでください。頭からかぶるなどしたときに、口や鼻をふさぎ、窒息するおそれがあります。
- フィッティングパーツは幼児の手の届くところには置かないでください。また、なくさないでください。これらは小さく、誤飲してしまうと窒息などのおそれがあります。





## 注意



禁止

- 耐荷重を超えて物をのせたり、耐荷重内でも一部に片寄ってのせたりしないでください。変形や破損の原因となり、ケガをするおそれがあります。
- 組み立てが不完全なまま使用しないでください。固定部分がはずれてケガの原因になることがあります。

⚠ 注意 (つづき)	
 禁止	<ul style="list-style-type: none"> <li>● 高温多湿な場所に長期間設置しないでください。カビやダニなどが発生し、健康を害することがあります。</li> <li>● 移動させる際は、製品を引きずらないでください。製品破損や床面へのキズ、ケガしたりするおそれがあります。</li> <li>● 指定の用途以外で使用しないでください。破損してケガをするおそれがあります。</li> <li>● 破損や変形した状態では使用しないでください。製品の強度が弱くなりケガをするおそれがあります。</li> <li>● 屋外では使用しないでください。変形や著しい劣化が起こり、ケガをする原因となります。</li> <li>● フェルトを貼った後、凹凸や継ぎ目などの段差のある床面では使用しないでください。フェルトがはがれると、床面を汚したり、キズつけたりする原因となります。</li> </ul>
 行う	<ul style="list-style-type: none"> <li>● 平らで安定した場所に設置してください。不安定な場所での使用は、製品のゆがみ、破損の原因になることがあります。</li> <li>● 使い始める時は、室内の換気を十分にしてください。接着剤などに含まれるホルムアルデヒドが残っている可能性があり、化学物質に敏感な体質の方や乳幼児などアレルギー症状をおこすおそれがあります。</li> <li>● 壁から少し離して設置してください。空気の滞留や壁側の結露を防ぎ、カビの発生防止になります。また、壁に直接触れないことで、壁紙の変色防止にもなります。</li> <li>● 組み立ては、大人2人以上で行ってください。1人で作業すると、転倒や破損、ケガをしたり、床をキズつける原因となります。</li> <li>● 使用時は、脚底面にフェルトなどの保護材を貼ったり、敷物を敷いたりしてご使用ください。床へのキズ防止、また、クッションフロアーなどの場合は木部の塗料とクッションフロアーの反応による変色を防いでくれます。</li> <li>● 各部にグラつきや破損がないか定期的に点検し、異常が認められたら使用を中止してください。そのまま使用すると、ケガや破損の原因となります。</li> <li>● 直射日光や冷暖房器具などの熱や風が製品に直接当たらないようにしてください。反りやゆがみ、割れ、変色などの原因になります。</li> </ul>

お願い (その他 注意)	
	<ul style="list-style-type: none"> <li>● 暖房器具使用時は、室内温湿度を適正に保ってください。冬場などの暖房器具による室内の極端な乾燥は、天然木材の割れや反りの原因となります。</li> <li>● 製品に直接熱い物や濡れた物を置かないでください。反りやゆがみ、割れ、変色、カビなどの原因となります。</li> <li>● 飲食時は、ランチョンマットやコースターなどを敷いてお使いください。濡れた物、熱い物が置かれると、変形や変色の原因となります。</li> <li>● テーブルの上で筆記などの作業を行う時は、必ずマットなどを敷いてください。天板に凹みやキズがつく原因となります。</li> <li>● 製品の上で陶器など底のざらついた物を直接置いて引きずらないでください。天板がキズがついたり、凹む原因となります。</li> <li>● 突板や天然木の上にビニール製品(塩化ビニル樹脂など)を直接、長期間置かないでください。変色したり、塗装がはがれる原因となります。</li> <li>● 長時間、化学雑巾を接触させたままにしないでください。変色したり、表面がはがれる原因となります。</li> </ul>






### お願い（その他 注意）（つづき）

- シンナーなどの有機溶剤や漂白剤などの薬剤でお手入れしないでください。変色や変形の原因となります。
- 鉄でできたものを製品の上に直接置かないでください。テーブルが濡れていたりすると、鉄成分によって表面が黒く変色するおそれがあります。（特にオーク材は変色しやすいので注意してください。）
- 開封後の梱包材は、居住地域の自治体のルールに従い、処分してください。








# パーツリスト

幅130cm 幅150cm 共通

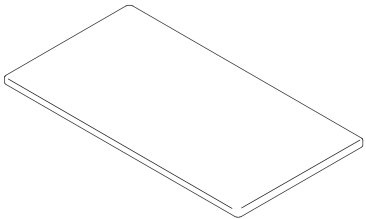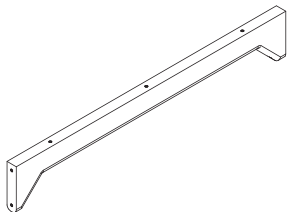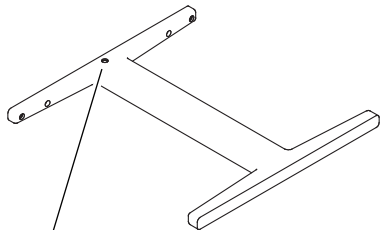※各リストは 幅130cm 幅150cm 共通です。


<p>① 天板 ×1</p>  <p>※表・裏面があり、溝があるほうが裏面です。</p>	<p>② 幕板 ×1</p> 	<p>③ 脚 ×2 ※内・外側があります</p>  <p>※ボルト穴が1つのほうが外側</p>
---	--	--

## フィッティングパーツ

<p>④ フェルト ×4</p> 	<p>⑤ 六角レンチ ×1 (4 mm)</p> 	<p>⑥ ボルト・長 ×3 (M8×L70 mm)</p> 	<p>⑦ ボルト・中 ×4 (M8×L50 mm)</p> 
<p>⑧ ボルト・短 ×8 (M8×L35 mm)</p> 	<p>⑨ ワッシャー ×15 (M8用)</p> 	<p>⑩ スプリングワッシャー ×15 (M8用)</p> 	

## 各部の名称

※イラストには 幅130cm タイプを使用しています。

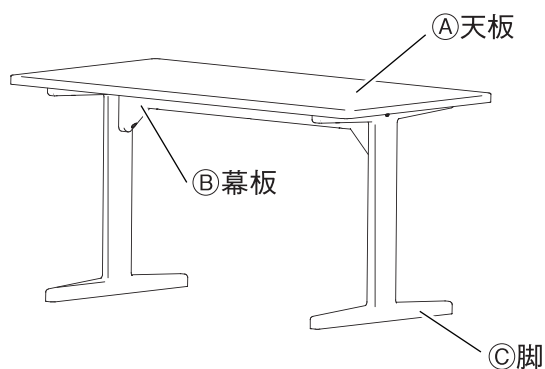

(完成図)

# 組立方法

幅130cm 幅150cm 共通

※イラストには 幅130cm タイプを使用しています。




注意

- ❶ 組み立ては、大人2人以上で行ってください。1人で作業すると、転倒や破損、ケガをしたり、床をキズつける原因となります。
- ❷ 組み立てには電動工具は使用しないでください。無理な負荷がかかると、製品破損によりケガをするおそれがあります。
- ❸ 組み立て時は、組み立てに必要なスペースを十分に確保し、敷物を敷いてください。床や既存の家具のキズ防止になります。

1

①天板を敷物の上に裏面が見えるように置いてください。

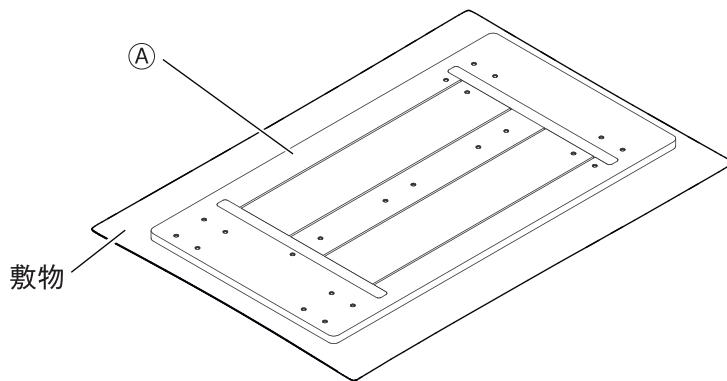


使用するパーツ

①天板×1

2

①天板に②、③、④、⑤を使って、⑥幕板を取り付ける。

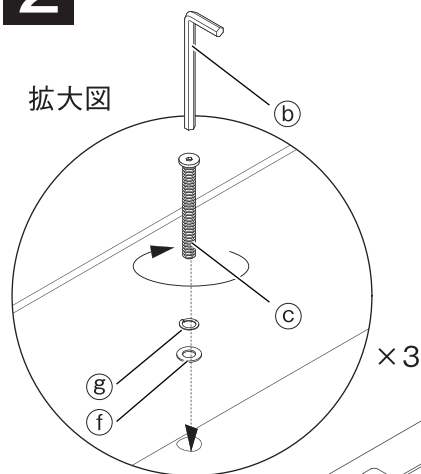

使用するパーツ

⑥幕板×1


使用するフィッティングパーツ

②×1


③×3

④×3

⑤×3

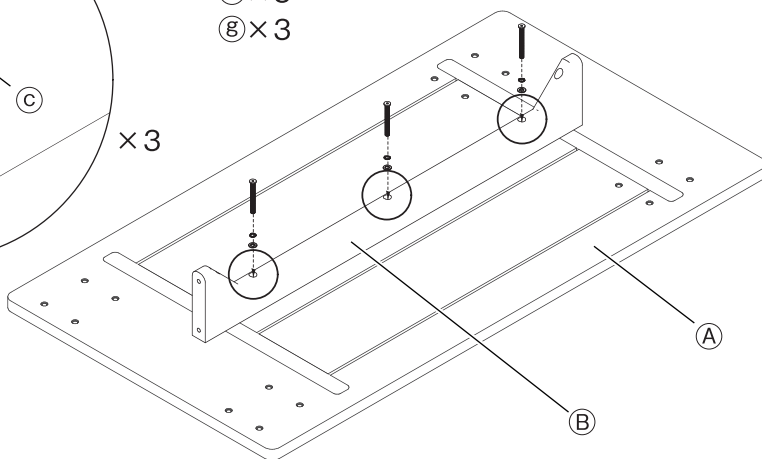

ボルトをゆるく締める

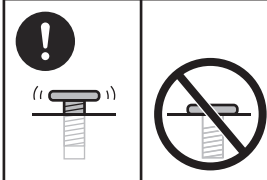


まずゆるめに  
③、④、⑤を  
3か所に取り付け、  
その後につく  
締めてください。

このイラストの⑥幕板取り付け位置は、①ノーマルポジションで説明されています。


⑥幕板取り付け位置は2種類あり、用途やお好みに合わせて取り付けできます

①ノーマルポジション

①天板裏面

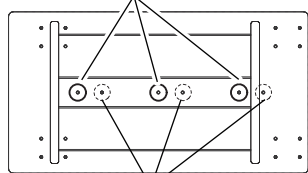

②オプションポジション

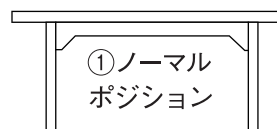

①ノーマル  
ポジション



②オプション  
ポジション

片方の天板短辺側に椅子を配置できるようになります。

3

2に◎脚を取り付ける

使用するパーツ

◎脚×2



使用するフィッティングパーツ

①×1

②×4


③×4

④×4

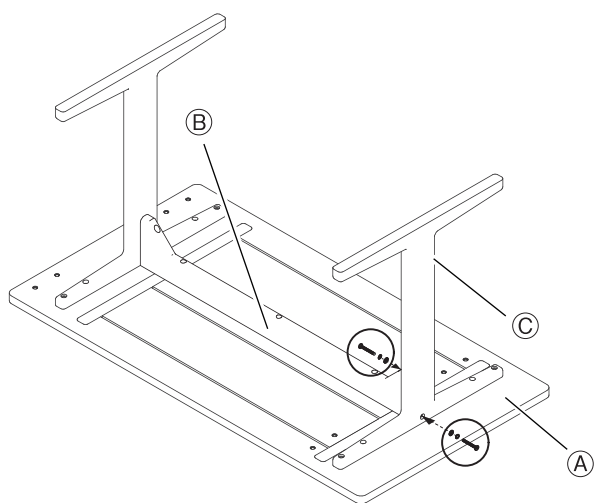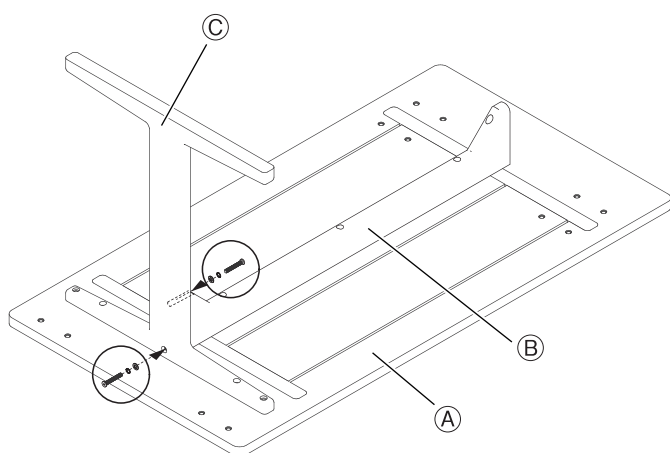


## ◎脚の取り付け穴位置

◎脚の取り付け位置は二種類あり、**2**で選んだ◎幕板の位置に合う方を選び取り付けてください。

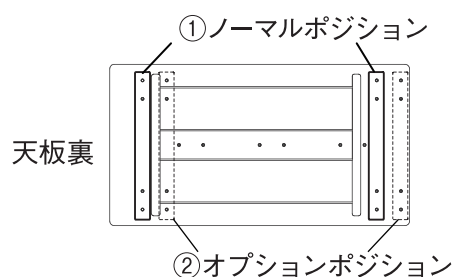


## ボルトをゆるく締める

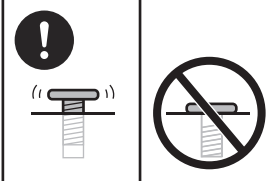

穴が一箇所の方が外側

拡大図

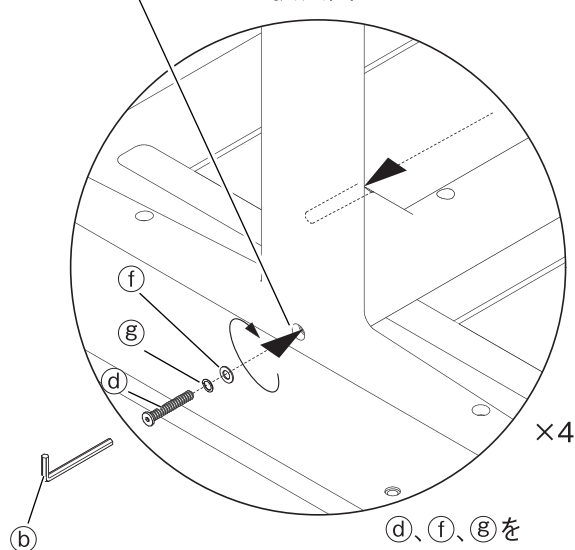

②、③、④を  
片脚2カ所ずつ、  
全部で4カ所、  
ゆるめに取り付けます。  
(**5**できつく締めます)

# 組立方法 (つづき)


幅130cm 幅150cm 共通

4


③と①天板を固定する。

使用するフィッティングパーツ


- ①×1
- ③×8
- ④×8
- ⑤×8

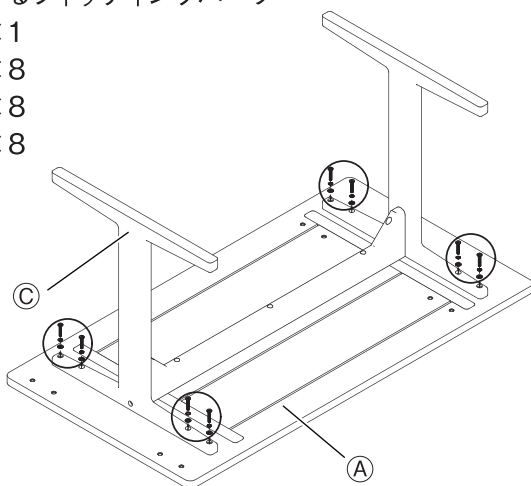

拡大図

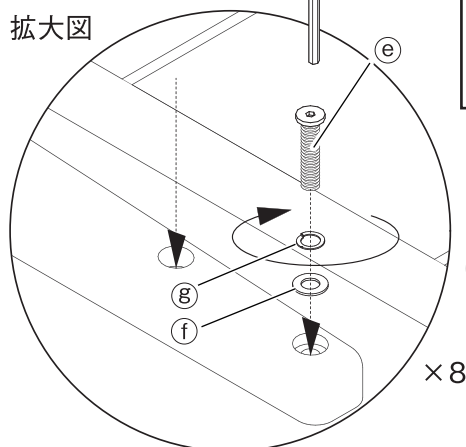

ボルトをゆるく締める


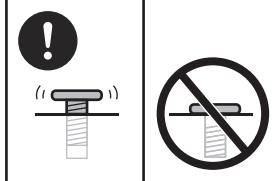


これら③、④、⑤も  
ゆるめに  
8か所に取り付けます。


×8

5

④と③をきつく締める。

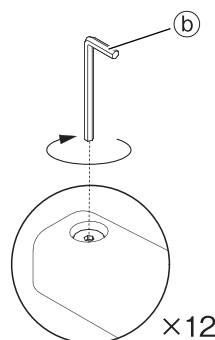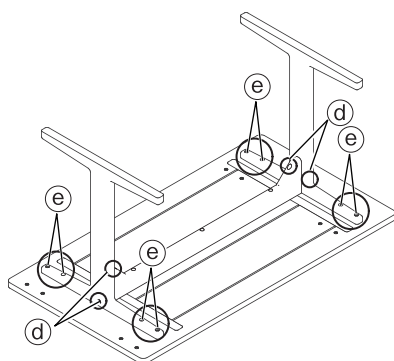


ボルトをきつく締める

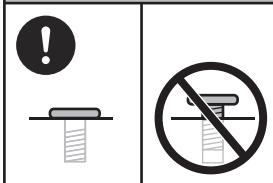

×12

6

③脚に②を貼る。

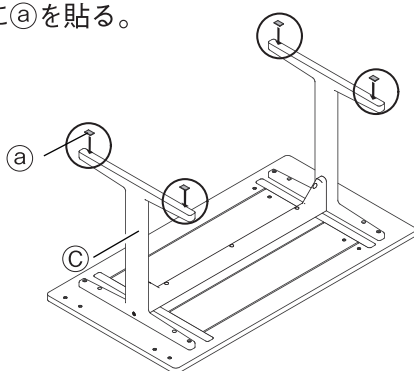

使用するフィッティングパーツ


- ②×4

お願い  
(その他 注意)

②を貼る前に貼る面のホコリなどの付着物をふき取ってください。付着物があると粘着力が低下します。貼った後は全体をしっかり押さえて、ムラなく接着してください。

7


⑥を持ち上げながら起こして完成です。

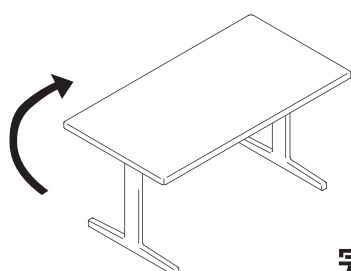

完成

⚠  
注意

① テーブルを起こす際は、片方の脚に過度の荷重がかからないよう、2人以上で床から持ち上げて起こしてください。

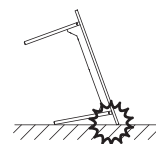

## 脚の取り付け位置を変更する場合

※イラストには幅130cmタイプを使用しています。

※ここでは①ノーマルポジションから②オプションポジションに変更する場合を説明しています。




注意

- ❶ 組み立ては、大人2人以上で行ってください。1人で作業すると、転倒や破損、ケガをしたり、床をキズつける原因となります。
- ❷ 組み立てには電動工具は使用しないでください。無理な負荷がかかると、製品破損によりケガをするおそれがあります。
- ❸ 組み立て時は、組み立てに必要なスペースを十分に確保し、敷物を敷いてください。床や既存の家具のキズ防止になります。


1

組み立ててあるテーブルを敷物の上に裏面が見えるように置き、下図のイラスト位置の㉔ボルト・長と㉕ボルト・短と㉖ワッシャーと㉗スプリングワッシャー（11か所）をはずしてください。

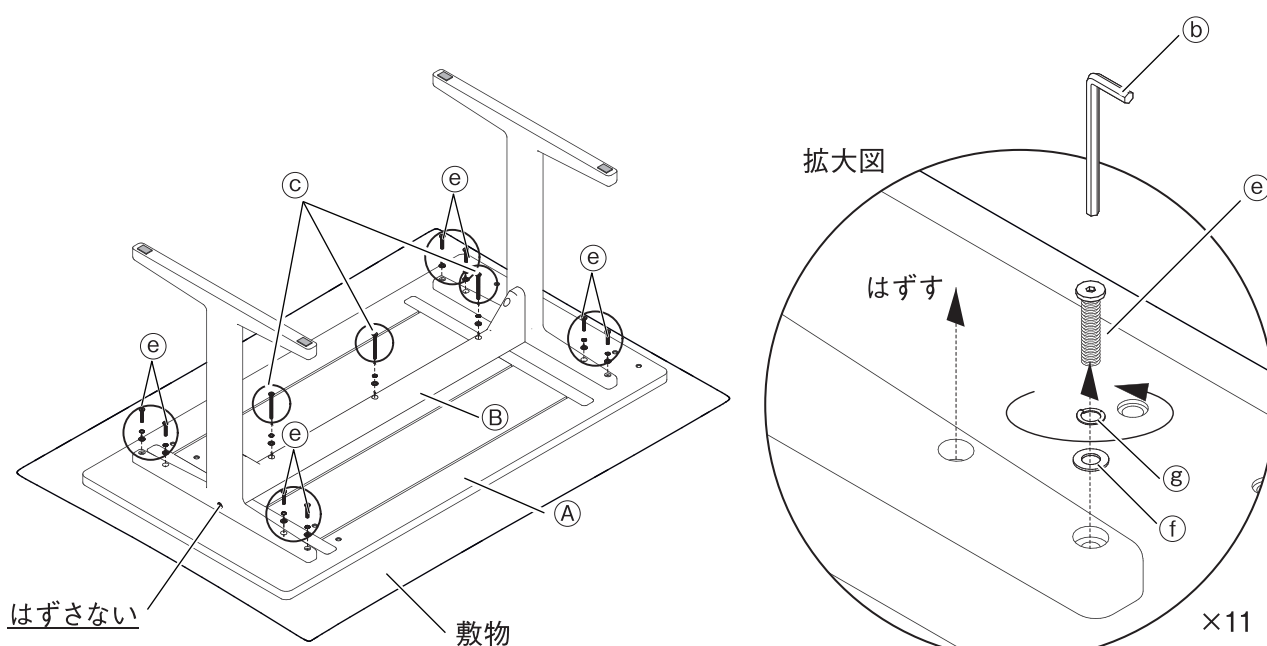

2


ボルトをはずした1の㉔幕板と㉔脚を、変更したい脚取り付け位置の穴位置に合うようにゆっくり押してください。

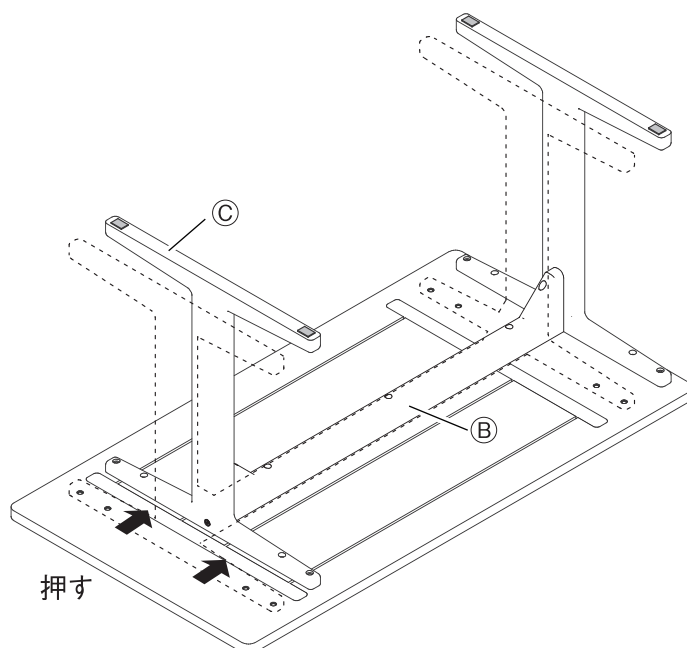

# ご使用方法 (つづき)

幅130cm 幅150cm 共通

**3** 2に1で取りはずした③と④を⑤と⑥を取り付ける。

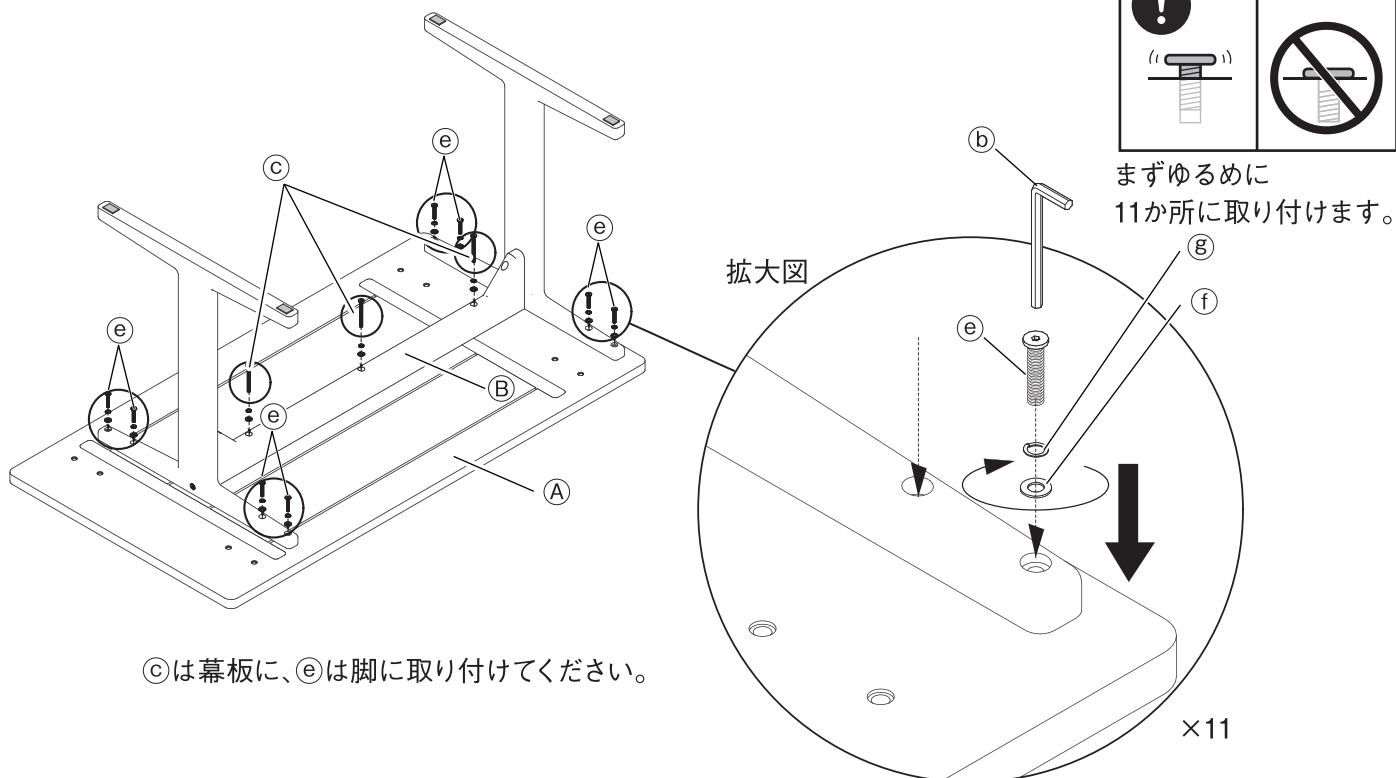


**4** 3で取り付けした③と④をきつく締める。



×11

**5** 4のボルトが全てしっかり取り付けられたのを確認し、製品を持ち上げながら起こして完成です。

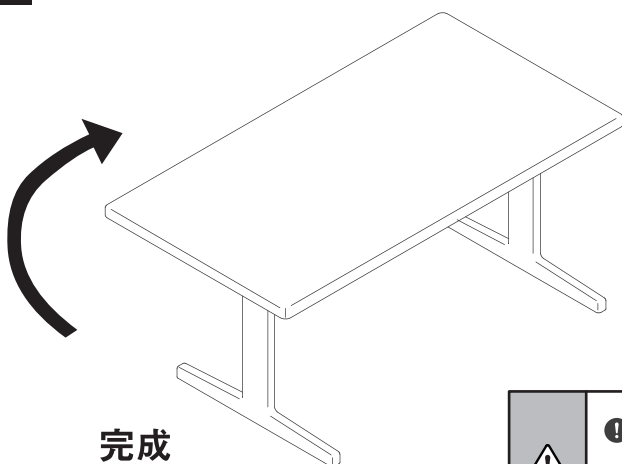
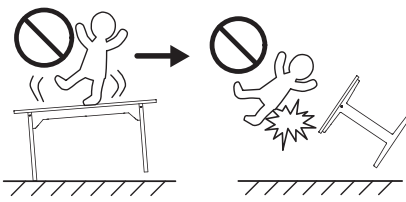


**注意**

① テーブルを起こす際は、片方の脚に過度の荷重がかからないよう、2人以上で床から持ち上げて起こしてください。



## ご使用方法（つづき）

 注意	<p>⊙ 製品の上にのらないでください。バランスをくずして転倒したり、製品の破損によりケガをするおそれがあります。特に天板の端に負荷を掛けますと、安定性を欠くおそれがありますので、絶対にのらないでください。</p> <p>❗ 直射日光や冷暖房器具などの熱や風が製品に直接当たらないようにしてください。反りやゆがみ、割れ、変色などの原因になります。</p>	
お願い (その他 注意)	<p>⊙ 飲食時は、ランチョンマットやコースターなどを敷いてお使いください。濡れた物、熱い物が置かれると、変形や変色の原因となります。万が一天板が濡れた場合は、乾いた布などで速やかにふき取ってください。</p>	

### 移動について

- 移動させる際は、大人2人以上で、必ず製品の下に両手を掛け、床面を引きずらないように持ち上げて運んでください。床や既存の家具のキズ防止になります。

### 廃棄について

- 廃棄の際は、居住地域の自治体のルールに従い、処分してください。

## お手入れ方法

### 保守・点検

- 破損や変形した状態では使用しないでください。製品の強度が弱くなりケガをするおそれがあります。
- ボルト、金具類は、ゆるみやグラつきがないか定期的に点検し、ゆるみはじめたら⑩六角レンチを用いて、しっかり締め直してください。ゆるんだままだと、ケガや脚・本体の破損、床面のキズの原因となります。
- 点検により破損箇所を発見した場合は、直ちに使用を中止してください。そのままご使用を続けた場合、変形したり、転倒や破損、ケガをするおそれがあります。
- 各部にグラつきや破損がないか定期的に点検し、異常が認められたら使用を中止してください。そのまま使用すると、ケガや破損の原因となります。
- 害虫を発見した場合は、直ちに殺虫や防虫処理をしてください。放置すると虫害が拡大するおそれがあります。

### 木部のお手入れ

- 塗装面のほこりはやわらかい布または、はたきで軽く払ってください。
- 汚れのひどい時は、3～5%に薄めた中性洗剤を浸した布で汚れを落とし、その後、水で浸した布で洗剤分をよくふき取ってください。次に乾いた布で軽くふいた後、自然乾燥させてください。
- 長時間、化学雑巾を接触させたままにしないでください。変色したり、表面がはがれる原因となります。



# ご使用に際して

## 天然木について

- 本製品は天然木を使用しているため、製品ごとに天然木材特有の個体差（木目や色合いなど）がありますが、あらかじめご了承ください。
- 天然木は下記の条件により、割れや反りなどが発生するおそれがありますので、ご注意ください。
  - ・直射日光の当たる場所でのご使用は出来る限りお避けください。どうしても直射日光が当たる場合は、カーテンなどで出来る限り避けてご使用ください。
  - ・冷暖房器具の近くでのご使用は出来る限り避け、必ず冷暖房の風が直接当たらないようにしてください。
  - ・特に冬の暖房による室内の極端な乾燥は、天然木の割れ、反りを発生させる原因となります。

## ホルムアルデヒドの対策について

### ●ホルムアルデヒドとは

シックハウス症候群の原因物質の一つといわれています。常温で気化する、無色で刺激臭のある化学物質で、家具はもとより建築資材・壁紙を貼る接着剤などに含まれています。少しずつ分散されるため、ホルムアルデヒドに汚染された室内に長時間いると目がチカチカしたり、喉に不快な刺激を感じたりすることがあります。濃度が高いと呼吸困難を起こす場合もあります。

### ●お部屋の換気について



- ❗ 家具を設置の際は、室内の換気を十分にしてください。  
化学物質に敏感な体質の方や乳幼児などアレルギー症状を起こすことがあります。

ホルムアルデヒドは空気中に分散されやすいので、普段からこまめに室内の換気を行うようにしてください。特に複数の家具を同時に設置した場合は、窓をできるだけ広く開け、十分な換気を行ってください。室内の温度が高くなると、ホルムアルデヒドは多く分散される傾向がありますので、夏季に室内を長時間閉め切っている場合は、特に換気をするようにご注意ください。換気効率を上げるため複数の窓を開けたり、換気扇、扇風機、サーキュレーターの利用をおすすめします。

### ●化学物質に敏感な体質のお客さまへ

ホルムアルデヒドに限らず、シックハウス症候群に該当する化学物質の許容量には個人差があります。よって、室内濃度指針値（健康上望ましいとされるホルムアルデヒドの室内濃度値）以下の濃度であっても反応する体質の方もいらっしゃいます。現段階の無印良品の家具におきましても、ホルムアルデヒド分散量の少ない材料を極力使用しておりますが、まったく分散されないわけではありませんので、ご注意ください。アレルギー症状が起きた際は、医師にご相談されることをおすすめします。

### ●ホルムアルデヒド吸着・分解シートについて

狭い空間ではホルムアルデヒドは逃げ場がなく、材料に再吸着する可能性があります。そこで、お手元に届くまで少しでもホルムアルデヒド濃度を低下させるために、無印良品の家具には、ホルムアルデヒド吸着・分解シートを同梱しています。

※同梱の「ホルムアルデヒド吸着・分解シート」は効力が落ちておりますので、燃えるゴミとして処分してください。

## 製品仕様

品 名	木製 リビングダイニング テーブル	
規 格	オーク材 幅130cm	オーク材 幅150cm
J A N	4550344692660	4550344692677
製 品 寸 法	幅1300×奥行700×高さ650 (mm)	幅1500×奥行800×高さ650 (mm)
製 品 重 量	約 27 kg	約 34 kg
用 途	テーブル	
耐 荷 重	天板：約 40 kg (均等に荷重をかけた場合)	
材 質	甲板の表面材：天然木(オーク材) その他木部：天然木(オーク材) 表面加工：ウレタン樹脂塗装	
原 産 国	ベトナム	

## お問い合わせ先

製品のお問い合わせは、お買い上げの販売店もしくは下記お客様相談室までご連絡ください。

### 株式会社 良品計画

〒170-8424


東京都豊島区東池袋 4-26-3

お客様相談室でんわ



**0120-14-6404**

Wooden living dining Table

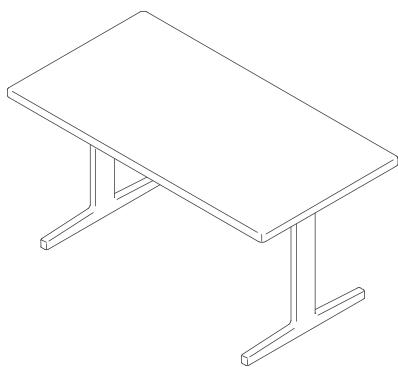

User Guide

Thank you for your purchase.  
Read this User Guide before use to ensure correct assembly and use of the product.  
Store this guide in an easily accessible place for future reference.



Table of Contents	Pages
Important Information (Safety Advice)	15 ~ 17
Parts	18
Part Names	18
Assembly Instructions	19 ~ 21
Directions for Use	22 ~ 24
Care Instructions	24
General Notes	25
Specifications	26
Contact Information	26

# Important Information (Safety Advice)

The instructions must be followed.

This User Guide contains important information for safe use of the product in order to prevent harm to users and other individuals as well as damage to property.  
Please note the following contents (indications and graphic symbols) before reading the main contents of this guide and follow the given instructions.


- **Explanations of Indications**  
The extent of injury and damage that may arise when the product is used incorrectly is classified and explained with the following symbols.


 <b>WARNING</b> Indicates a hazard with a level of risk which, if not avoided, could result in death or serious injury* <sup>1</sup> to the user.	 <b>CAUTION</b> Indicates a hazard with a level of risk which, if not avoided, could result in injury* <sup>2</sup> to the user or property damage* <sup>3</sup> .
---	--

- **Explanations of Graphic Symbols**  
Instructions are given in the form of the following graphic symbols. (Examples of graphic symbols are as follows.)


 Actions that are prohibited.	 Actions that must be taken.
--	---

- \*1 "Serious injury" indicates injuries, such as blindness, traumas, burns, bone fractures, poisoning, or electric shocks, that have long-term effects and require hospitalisation and/or long-term hospital visits for treatment.
- \*2 "Injury" indicates traumas or burns that do not require hospitalisation or long-term hospital visits for treatment.
- \*3 "Property damage" indicates extended damage that involves the house or household property.




 **WARNING**

  
DON'Ts

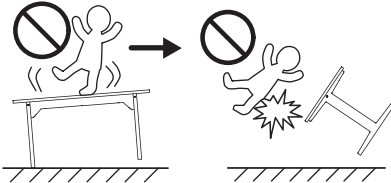- Do not lay small children on the product. Doing so may cause them to suffocate or fall on the floor.
- Do not let children use without supervision. Doing so may result in unexpected injury.
- Do not climb on the product. Doing so may cause tip-over from loss of balance or product damage and may lead to injury.



- Do not place near a heat source such as a heater. Doing so may cause a fire.
- Do not place on the power cord of an electrical appliance. Doing so may damage the cord, leading to electric shock or a fire.
- Do not attempt to repair or modify. Doing so reduces the strength of the product, leading to injury.
- Do not leave unnecessary packaging materials within reach of small children. Children may accidentally pull them over their head, cover their mouth and/or nose and suffocate.
- Do not keep the fitting parts within reach of small children and be careful not to lose them. Children may accidentally swallow small parts and choke.

 <b>CAUTION</b>	
 <b>DON'Ts</b>	<ul style="list-style-type: none"> <li>• Do not place anything exceeding the withstand load or anything only on one side even if it is within the withstand load. Doing so may cause product deformation or damage and lead to injury.</li> <li>• Do not use unless fully assembled. Doing so may cause the fixed parts to come off and lead to injury.</li> <li>• Do not install in locations with high temperatures and humidity for a long time. Doing so may cause mould and mites to grow, leading to health hazards.</li> <li>• Do not drag the product. Doing so may cause product damage, floor scratches and/or injury.</li> <li>• Do not use for other than its intended purpose. Doing so may cause product damage and lead to injury.</li> <li>• Do not use if damaged or deformed. Doing so reduces the strength of the product and may lead to injury.</li> <li>• Do not use outdoors. Doing so may cause deformation or severe degradation, leading to injury.</li> <li>• Do not use the product on an uneven floor when felt pads are applied to it. Doing so may cause them to come off, leading to dirt or scratches on the floor surface.</li> </ul>
 <b>DOs</b>	<ul style="list-style-type: none"> <li>• Install on a flat and stable surface. Using on an unstable surface may cause product distortion or damage.</li> <li>• Ventilate the room well at the early stage of use. Formaldehyde contained in adhesive may still remain, and those with chemical sensitivity and small children may experience allergic reactions.</li> <li>• Install slightly away from the wall. This is to prevent air stagnation and condensation on the wall, and eventually mould growth. Avoiding direct contact with the wall also prevents discolouration of the wall paper.</li> <li>• The product must be assembled by at least two adults. Installing alone may cause injury, tip-over, damage and/or floor scratches.</li> <li>• Apply felt pads or any protective materials to the bottom of the legs, or use an underlay. This is to protect the floor from scratches and discolouration due to reaction between the coating on the wooden parts and the floor when the product is installed on a cushioned vinyl flooring.</li> <li>• Regularly check for any looseness or damage in all parts, and stop use if any abnormalities are found. Continued use under this condition may cause injury or product damage.</li> <li>• Be careful not to expose to direct sunlight and heat or air from heating and cooling appliances such as an air conditioner and heater. Otherwise it may cause warping, distortion, cracking, or discolouration.</li> </ul>




**Note (Other Caution)**

- Keep the room at an appropriate temperature and humidity level when using a heating appliance. Using heating appliances in winter may cause the room to become extremely dry, resulting in cracking or warping of natural wood.
- Do not place hot or wet items directly on the product. Doing so may cause warping, distortion, cracking, discolouration, or mould growth.
- Use place mats and coasters on the product when eating. Placing wet or hot items directly on the product may cause deformation or discolouration.
- Be sure to use a mat, etc. when writing or drawing on the table. Not doing so may cause dents and scratches on the tabletop.
- Do not place and drag items with rough bottom surfaces, such as ceramics, directly on the product. Doing so may cause scratches and dents on the tabletop.
- Do not place plastic items (vinyl chloride resin, etc.) directly on veneer or natural wood for a long time. Doing so may cause discolouration or peeling of the coating.
- Do not leave a chemically treated cloth in contact with the product for a long time. Doing so may cause discolouration or peeling of the surface material.
- Do not use bleach or organic solvents, such as thinner, for cleaning. Doing so may cause discolouration or deformation.
- Do not place iron items directly on the table. Iron can leave black marks if the table is wet. (Oak is particularly susceptible to discolouration.)
- To dispose of the packaging materials, follow the rules implemented by your local government.








# Parts

Both W130 cm and W150 cm types

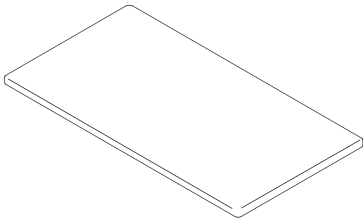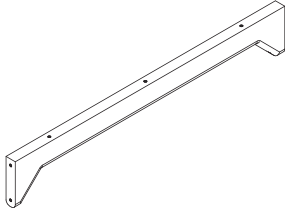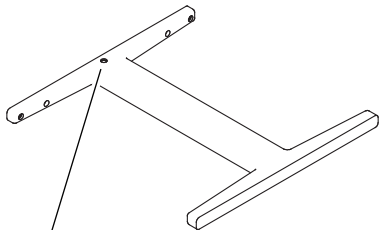\* Each list applies to both W130 cm and W150 cm types.


<p>Ⓐ Tabletop × 1</p>  <p>* The side with grooves is the underside.</p>	<p>Ⓑ Apron × 1</p> 	<p>Ⓒ Leg × 2</p> <p>* The inner and outer sides are different.</p>  <p>* The side with one bolt hole is the outer side.</p>
--	--	--

## Fitting Parts

<p>Ⓐ Felt Pad × 4</p> 	<p>Ⓑ Hexagonal Wrench × 1 (4 mm)</p> 	<p>Ⓒ Bolt / L × 3 (M8 × L70 mm)</p> 	<p>Ⓓ Bolt / M × 4 (M8 × L50 mm)</p> 
<p>Ⓔ Bolt / S × 8 (M8 × L35 mm)</p> 	<p>Ⓕ Washer × 15 (For M8)</p> 	<p>Ⓖ Spring Washer × 15 (For M8)</p> 	

# Part Names

\* W 130cm is used in the illustrations.

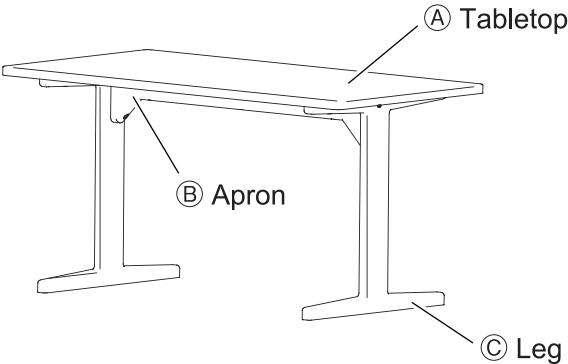

(Completion Image)

# Assembly Instructions

Both W130 cm and W150 cm types


\* W 130cm is used in the illustrations.



- ❗ The product must be assembled by at least two adults. Assembling it alone may cause injury, tip-over, damage and/or floor scratches.
- ⚠ Do not use power tools to assemble the product. Placing excessive strain on the product may cause damage and lead to injury.
- ❗ Secure enough space and place an underlay when assembling the product. This prevents the floor and other furniture from scratches.

**1**

Place (A) tabletop on an underlay with the underside facing up.

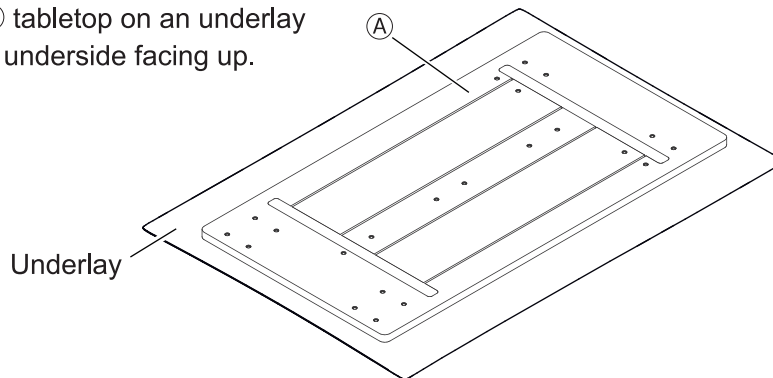


Part to be used

(A) Tabletop × 1

**2**

Attach (B) apron to (A) tabletop using (b), (c), (f) and (g).

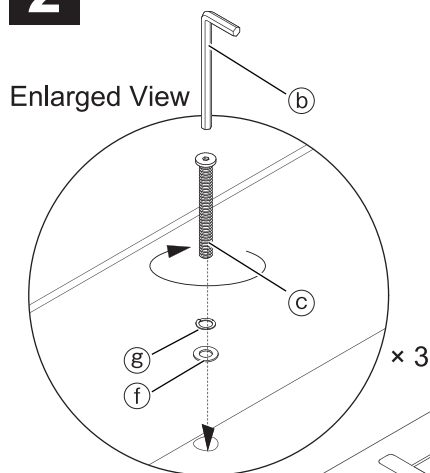

Part to be used

(B) Apron × 1


Fitting parts to be used

(b) × 1

(c) × 3

(f) × 3

(g) × 3

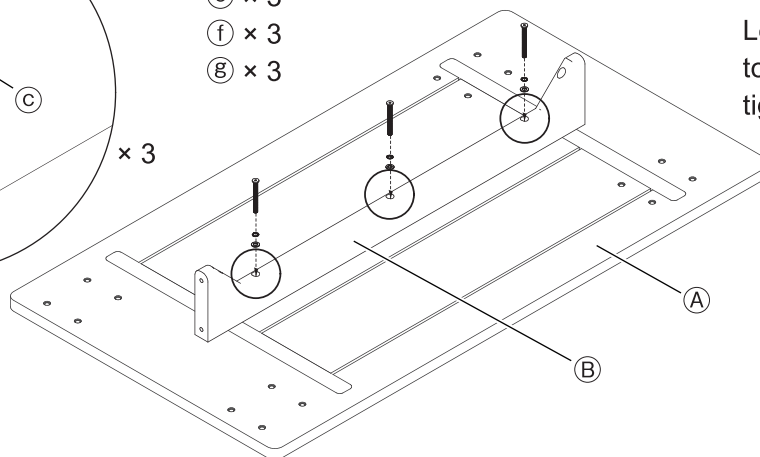

**Loosely tighten the bolts**




Loosely tighten (c), (f) and (g) to three places, then firmly tighten them.

The attachment position of (B) apron in the illustrations is that of ① Default position.


There are two positions to attach (B) apron. Choose one according to your needs and liking.

① Default position


(A) Tabletop  
Underside

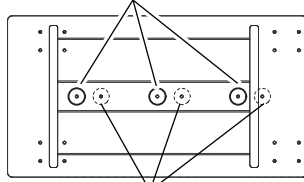

② Optional position

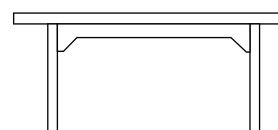

① Default position

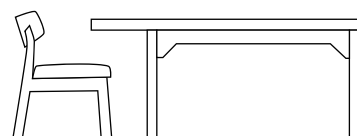

② Optional position

Allows to place a chair by one of the short sides.



# Assembly Instructions (Continued)

Both W130 cm and W150 cm types

## 3

Attach ③ legs to **2**.

Part to be used

③ Leg × 2


Fitting parts to be used

① × 1

④ × 4

⑥ × 4

⑧ × 4

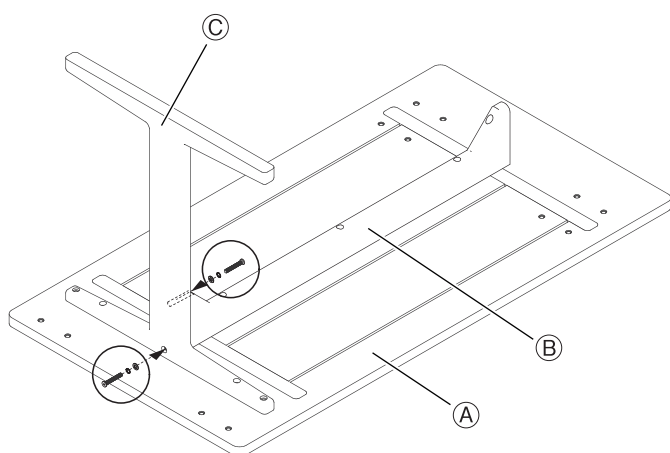


### Attachment position of ③ legs


There are two positions to attach ③ legs. Attach them according to the position of ② apron you chose in the step **2**.

① Default position

Underside of tabletop

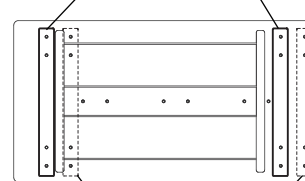

② Optional position

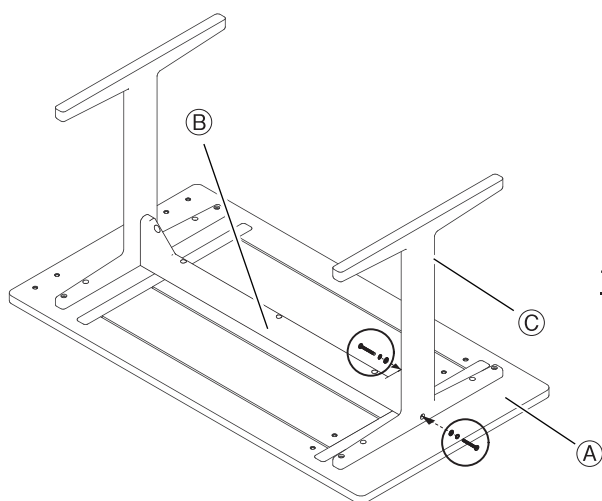


### Loosely tighten the bolts



The side with one bolt hole is the outer side.

Enlarged View

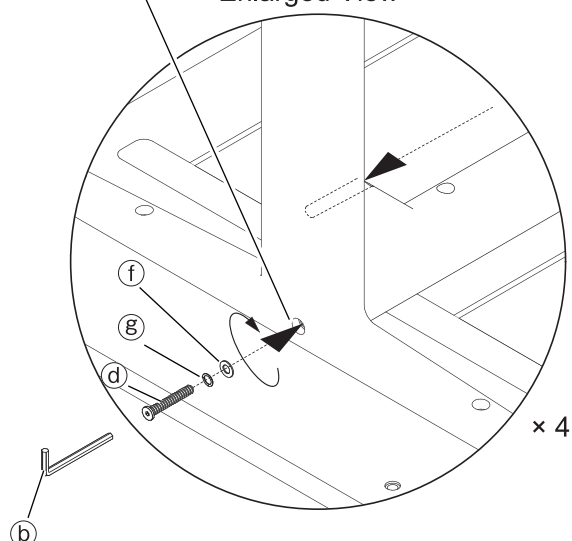

Loosely attach 2 sets of ④, ⑥ and ⑧ on each leg, 4 places in total.

(The bolts will be tightened in the step **5**)

# Assembly Instructions (Continued)


Both W130 cm and W150 cm types

**4**


Fix **3** and **(A)** tabletop.

Fitting parts to be used

- (b) × 1
- (e) × 8
- (f) × 8
- (g) × 8

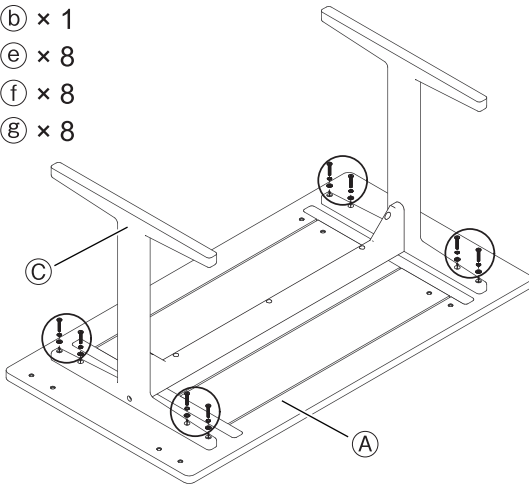

Enlarged View

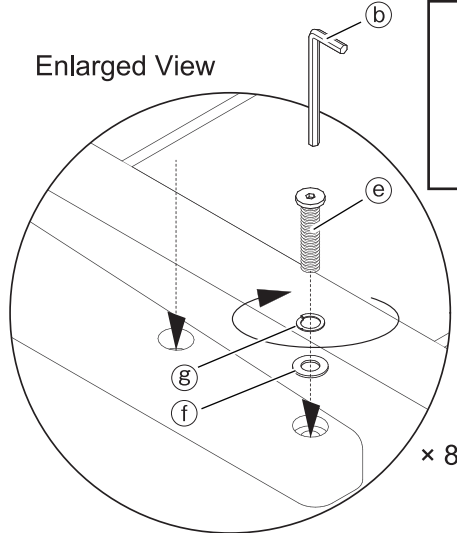



**Loosely tighten the bolts**



Attach also these (e), (f) and (g) to 8 places.

**5**

Tighten (d) and (e) firmly.

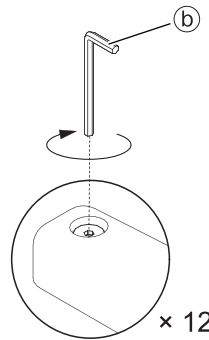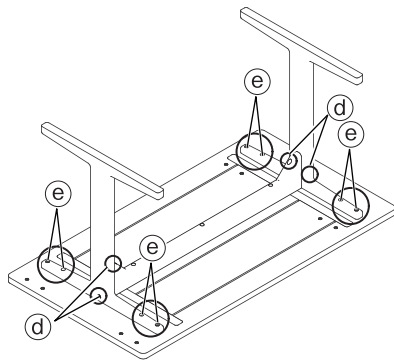


**Firmly tighten the bolts**



**6**

Attach (a) to (C) legs.

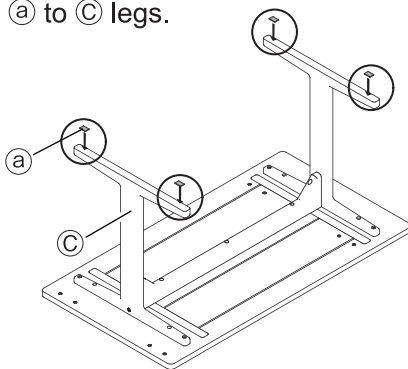

Fitting part to be used


- (a) × 4

**Note**  
(Other Caution)

Remove dust off the attachment surface before attaching (a). Otherwise the adhesive strength of the pads will be reduced. Press the whole pad firmly so it adheres evenly.


**7**

Lift and turn **6** to upright position to complete.

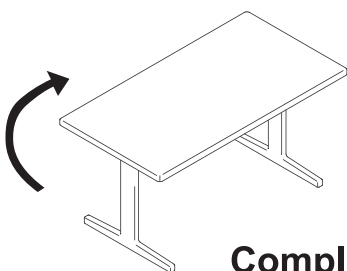

**CAUTION**

⚠ When turning the table to upright position, lift it from the floor to ensure that excessive weight is not placed on one particular side.

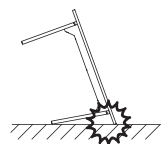

# Directions for Use

Both W130 cm and W150 cm types

To switch the position of the legs

\* W130 cm is used in the illustrations.

\* In this page, how to switch the position of the legs from ① Default position to ② Optional position is explained.




**CAUTION**

- ❗ The product must be assembled by at least two adults. Assembling it alone may cause injury, tip-over, damage and/or floor scratches.
- ⚠ Do not use power tools to assemble the product. Placing excessive strain on the product may cause damage and lead to injury.
- ❗ Secure enough space and place an underlay when assembling the product. This prevents the floor and other furniture from scratches.


**1**

Place the assembled table with the underside facing up on an underlay. Remove ③ bolts / L, ④ bolts / S, ⑤ washers and ⑥ spring washers (11 places) from the positions shown in the figure.

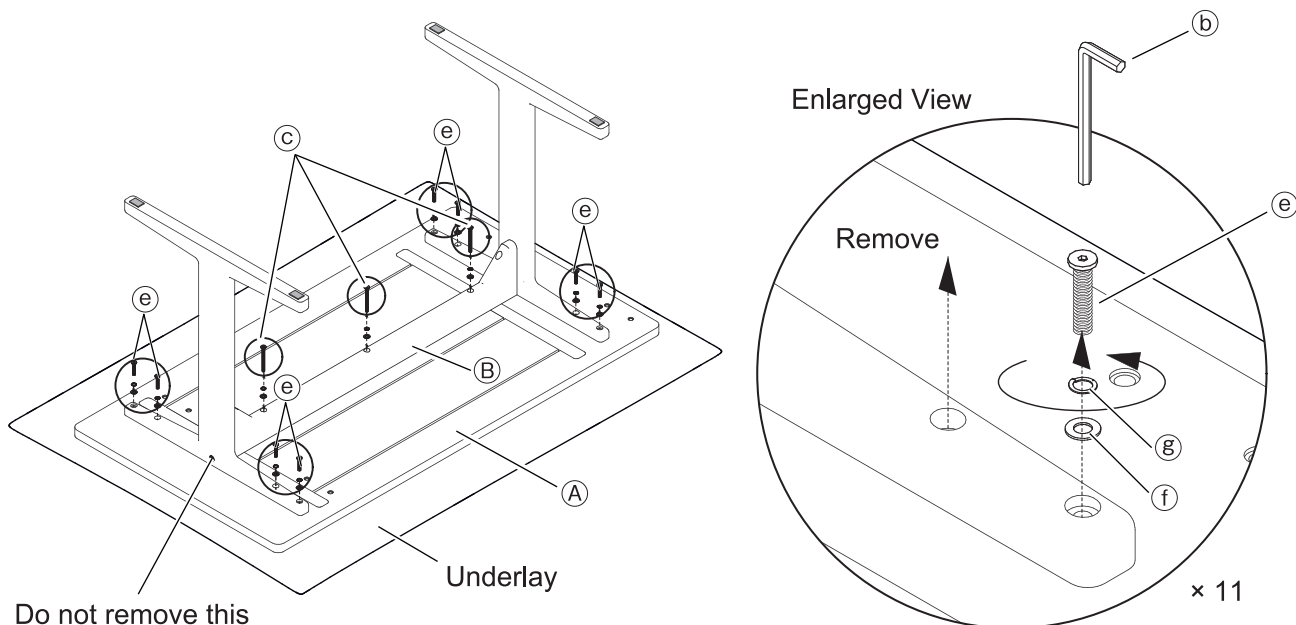

**2**

Slowly slide ③ apron and ④ legs from which bolts were removed in the step **1**, toward the position you would like them to be.

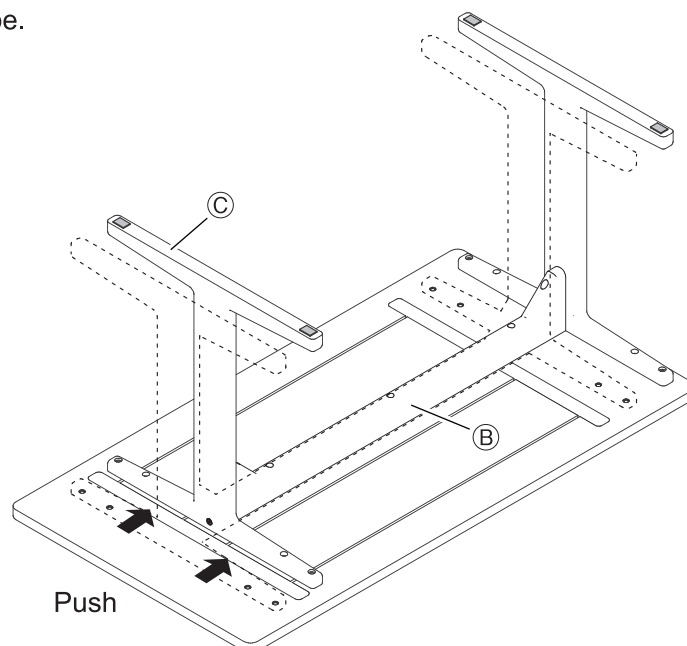


# Directions for Use (Continued)

Both W130 cm and W150 cm types


**3**

Attach ③, ④, ⑤ and ⑥ removed in the step **1** to **2**.

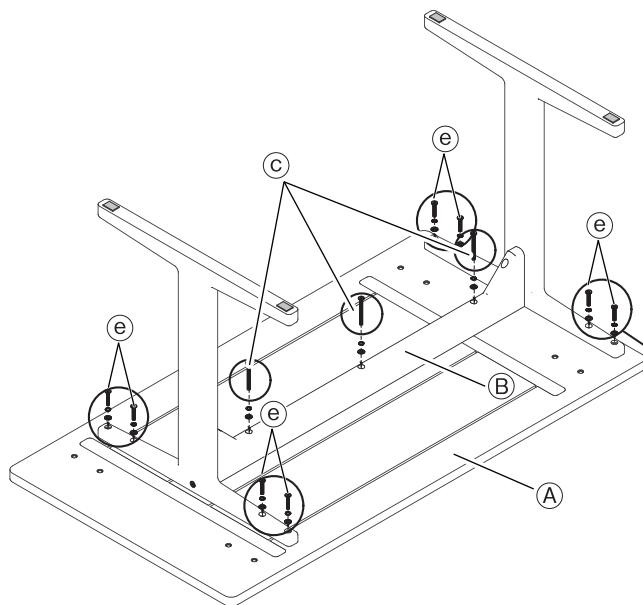

Attach ③ to the apron and ④ to the legs.

Enlarged View

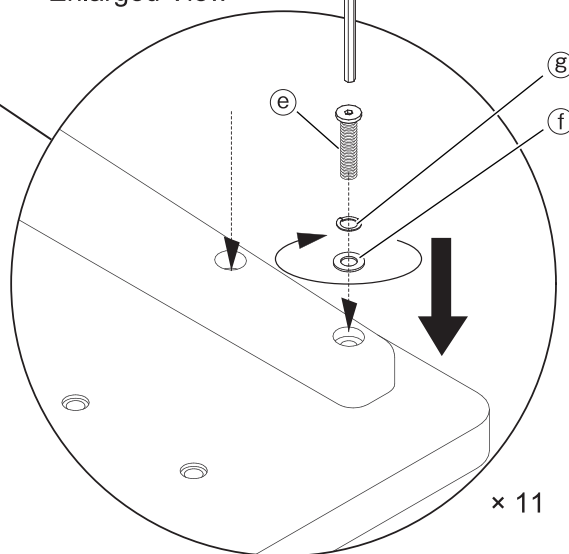

**Loosely tighten the bolts**



Loosely attach them to 11 places first.

**4**

Firmly tighten ③ and ④ that were attached in the step **3**.


**Firmly tighten the bolts**



x 11

**5**

Check all the bolts in the step **4** are fully tightened. Lift and turn the table over to complete.

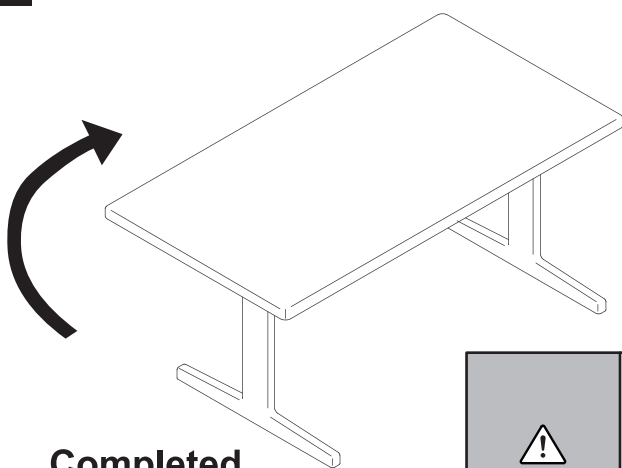


**Completed**


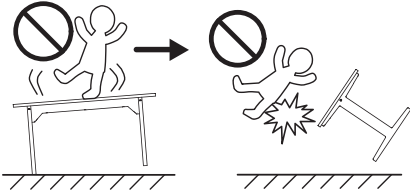


**CAUTION**

⚠ When turning the table to upright position, lift it from the floor to ensure that excessive weight is not placed on one particular side.

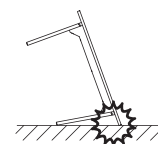

## Directions for Use (Continued)

 <b>CAUTION</b>	<p>⊘ Do not climb on the product. Doing so may cause tip-over from loss of balance or product damage and may lead to injury. In particular, never climb on the edge of the tabletop as excessive load may cause the product to become unstable.</p> <p>❗ Be careful not to expose to direct sunlight and heat or air from heating and cooling appliances such as an air conditioner and heater. Otherwise it may cause warping, distortion, cracking, or discolouration.</p> 
<b>Note (Other Caution)</b>	<p>⊘ Use place mats and coasters on the product when eating. Placing wet or hot items directly on the product may cause deformation or discolouration. If the tabletop becomes wet, immediately wipe off with a dry cloth.</p>

### Relocating the Product

- When moving the assembled product, do not drag it on the floor. It must be lifted and carried by at least two adults holding the underneath of the product with both hands. This prevents the floor and other furniture from scratches.

### Disposal

- To dispose of the product, follow the rules implemented by your local government.

## Care Instructions

### Maintenance and Inspection

- Do not use if damaged or deformed. Doing so reduces the strength of the product and may lead to injury.
- Periodically check for any looseness or wobbling in bolts and other fittings, and retighten them with ⑥ hexagonal wrench if any looseness is found. Continued use with the loose parts may result in injury, damage to the legs and the main unit, or scratches to the floor.
- Immediately stop use if any damaged parts are found during inspection. Continued use may cause deformation, tip-over, damage and/or injury.
- Regularly check for any looseness or damage in all parts, and stop use if any abnormalities are found. Continued use under this condition may cause injury or product damage.
- Take insecticidal measures immediately if any type of pest is found. If left untreated, pest damage may worsen.

### Maintenance for Wooden Parts

- Gently wipe off dust from coated surfaces using a soft cloth or duster.
- If the product is heavily soiled, clean it with a cloth soaked in 3-5% neutral detergent solution and wipe off any detergent residue with a damp cloth. Then gently wipe with a dry cloth and let the product dry naturally.
- Do not leave a chemically treated cloth in contact with the product for a long time. Doing so may cause discolouration or peeling of the surface material.

# General Notes

---

## Care Tips for Natural Wood Products

- As this product is manufactured using natural wood, there are individual differences (grain, colour, etc.) unique to natural wood.
- Note that cracking and warping may occur in natural wood (veneer) under the following conditions.
  - Avoid use in locations exposed to direct sunlight. If exposure to direct sunlight is unavoidable, use curtains, etc. to reduce the amount of sunlight.
  - Avoid use near heaters or air conditioners and make sure that the air from heater or air conditioner does not come into direct contact with the product.
  - In particular, use of heating appliances during winter causes the room to become extremely dry and may lead to cracking or warping of natural wood.

## Formaldehyde Countermeasures

- What is Formaldehyde?

Formaldehyde is said to be a cause of sick house syndrome. It is a colourless, pungent-smelling chemical that vaporises at room temperature, often found in furniture, building materials, wallpaper adhesives, etc. As it is gradually released into the air, spending a long time in a room contaminated with formaldehyde can result in eye/throat irritation. Also, exposure to a high concentration of formaldehyde may cause breathing difficulties.

- Room Ventilation



⚠ Ventilate the room well when installing the furniture. Some individuals sensitive to chemicals and small children may experience allergic symptoms.

Be sure to frequently ventilate the room on a regular basis as formaldehyde is released into the air. Especially when installing multiple pieces of furniture at the same time, open the windows wide enough to allow adequate ventilation. Formaldehyde release tends to increase with temperature rise of the room. Therefore, be sure to ventilate well after the room has been closed up for a long time during summer. It is recommended that you open multiple windows and use a ventilation fan or an air circulator to increase ventilation efficiency.

- For Individuals Sensitive to Chemicals

There are individual differences in resistance to chemicals that are related to sick house syndrome other than formaldehyde. Therefore, even if the actual concentration in the room is lower than the indoor concentration guideline value (acceptable safe level of formaldehyde indoors), some people may react to formaldehyde. MUJI furniture are made with materials that contain as little formaldehyde as possible, but note this does not guarantee that they are completely formaldehyde-free. It is recommended that you seek medical attention if you experience any allergic symptoms.

- Formaldehyde Adsorption/Decomposition Sheet

Formaldehyde is readsorbed onto materials when there is nowhere for it to dissipate in a confined space. Therefore, a formaldehyde adsorption/decomposition sheet is included in the packaging to reduce formaldehyde concentration as much as possible before the product reaches the customer.

- \* The effect of the sheet will be diminished by the time the product reaches the customer. Dispose of the sheet as burnable waste after unpackaging.

## Specifications

---

Product Name	Wooden living dining Table	
Specification	Oak W130 cm	Oak W150 cm
JAN	4550344692660	4550344692677
Product Dimension	W1300 × D700 × H650 (mm)	W1500 × D800 × H650 (mm)
Product Weight	Approx. 27 kg	Approx. 34 kg
Usage	Table	
Withstand Load	Tabletop: Approx. 40 kg (When the load is spread evenly across the tabletop)	
Material	Tabletop Surface : Natural Wood (Oak) Other Wooden Part : Natural Wood (Oak) Surface Finish : Urethane Resin Coating	
Place of Origin	VIETNAM	

## Contact Information

---

For enquiries regarding the product, please contact the store of purchase.