

リビングでもダイニングでもつかえるソファチェア・オーク材
リビングでもダイニングでもつかえるソファチェア・ウォールナット材

LIVING DINING SOFA CHAIR / OAK
LIVING DINING SOFA CHAIR / WALNUT

取扱説明書 User Guide

日本語

この度は本製品をお買い上げいただき、誠にありがとうございます。
1ページからお読みください。

English

Thank you for your purchase.
Read these instructions from Page 10.

4550344910870 Living dining Sofa chair / Oak
4550344910887 Living dining Sofa chair / Walnut

リビングでもダイニングでもつかえるソファチェア・オーク材 リビングでもダイニングでもつかえるソファチェア・ウォールナット材

取扱説明書

この度は本商品をお買い上げいただき、誠にありがとうございます。
ご使用前に本書をよくお読みいただき、内容を理解して、正しくお使いください。
また、本書はいつでも確認できるように大切に保管してください。

もくじ	ページ
重要なお知らせ（安全上のご注意）	2～3
パーツリスト	4
各部の名称	4
ご使用方法	5～6
お手入れ方法	7
ご使用に際して	8
製品仕様	9
お問い合わせ先	9

重要なお知らせ（安全上のご注意）

必ずお守りください。

本書には、お使いになる方や他の人への危害と財産への損害を未然に防ぎ、安全に正しくお使いいただくために、重要な内容を記載しています。

次の内容（表示・図記号）をよく理解してから本文をお読みになり、記載事項をお守りください。

●表示の説明

誤った使い方をしたときに生じる危害や損害の程度を区分して説明しています。



警告

使用者が死亡または重傷（※1）を負うことが想定される内容です。



注意

使用者が傷害（※2）を負うことや物的損害（※3）が発生することが想定される内容です。

●図記号の説明

お守りいただく内容を次の図記号で説明しています。（次は図記号の例です。）



してはいけない「禁止」の内容です。



実行しなければならない内容です。

※1 重傷とは、失明やケガ、やけど、骨折、中毒、感電などで後遺症が残るもの及び、治療に入院、長期の通院を要するものをさします。

※2 傷害とは、治療や入院や長期の通院を要しない、ケガ、やけどをさします。

※3 物的損害とは、家屋、家財にかかわる拡大損害をさします。



警告



禁止

- 乳幼児を寝かさないでください。床への落下や窒息の原因となることがあります。
- 保護者の目の届かないところで、お子さまだけでは使用させないでください。思わぬケガの原因となります。
- 座面の上に立ったり、飛び跳ねたり、踏み台の代わりに使用したりしないでください。バランスを崩し転倒したり、商品の破損によりケガの原因となるおそれがあります。
- 座った状態で商品を傾けるなど不安定な状態では使用しないでください。転倒や商品の破損によりケガをしたり、床をキズつける原因となります。
- 座面に浅く腰掛けしないでください。転倒してケガをする原因となります。
- 座面以外には座らないでください。思わぬケガの原因となります。
- 規定を超える人数では使用しないでください。破損してケガをするおそれがあります。
- 不安定な状態や場所で使用しないでください。転倒によりケガをする原因となるおそれがあります。
- ストーブなど引火するおそれのあるものを近くに置かないでください。火災の原因になります。
- タバコの火などを商品に落とさないでください。火災の原因となります。
- 商品で電化製品の電源コードを踏まないでください。コードが破損し、感電や火災の原因となるおそれがあります。
- 不要になった梱包材は、幼児の手の届くところに置かないでください。頭からかぶるなどしたときに、口や鼻をふさぎ、窒息するおそれがあります。
- 屋外では使用しないでください。変形や著しい劣化が起こりケガをするおそれがあります。
- フィッティングパーツは小さな部品です。幼児の手の届くところには置かないでください。また、紛失しないでください。誤飲した場合、窒息などのおそれがあります。



注意



禁止

- 多湿な場所（目安：湿度70%以上でかつ室温20℃以上）に長期間設置はしないでください。カビやダニなどが発生し、健康を害することがあります。

⚠ 注意

<div data-bbox="145 589 217 696" data-label="Image"> </div> <div data-bbox="148 660 212 692" data-label="Text"> <p>禁止</p> </div>	<ul style="list-style-type: none"> ●移動する際は、引きずったり落としたりしないでください。商品の破損、床面へのキズの原因となります。 ●直射日光や照明、ストーブやエアコンなどの冷暖房器具の熱や風を商品に直接あてないでください。反りやゆがみ、割れ、変色などの原因になります。 <div data-bbox="815 356 1449 685" data-label="Image"> </div> <ul style="list-style-type: none"> ●製品に乗った状態で、押したり引っ張ったりしないでください。転倒や破損によりケガをするおそれがあります。また、フェルトなどを貼っていても床面へのキズの原因となります。 ●本来の用途以外では使用しないでください。思わぬ事故やケガの原因となります。 ●破損、変形、ひび割れなど生じた状態では使用しないでください。思わぬケガをする原因となります。 ●修理および改造はしないでください。製品の強度が弱くなりケガをするおそれがあります。 ●フェルトを貼った状態で、凹凸や継ぎ目などの段差のある床面では使用しないでください。フェルトがはがれて、床面を汚したり、キズつけたりする原因となります。
<div data-bbox="145 1133 217 1240" data-label="Image"> </div> <div data-bbox="148 1205 212 1236" data-label="Text"> <p>行う</p> </div>	<ul style="list-style-type: none"> ●使い始める時は、室内の換気を十分にしてください。接着剤などに含まれるホルムアルデヒドが残っている可能性があり、化学物質に敏感な体質の方や乳幼児などアレルギー症状をおこすおそれがあります。 ●使用時は、脚の底面にフェルトなどの保護材を貼るか、敷物を敷くなどしてご使用ください。そのまま使用すると、床面をキズつける原因となります。また、クッションフロアなどの場合は、木部の塗料とクッションフロアの反応により変色するおそれがあります。 ●ボルトは、ゆるみやグラつきがないか定期的に点検し、ゆるみはじめたら、しっかり締め直してください。ケガや破損、床面のキズの防止になります。

お願い (その他 注意)

	<ul style="list-style-type: none"> ●フェルトは適切な位置に貼ってください。また、使用中にずれたり、はがれたりしていないか定期的に確認してください。ずれたり、はがれたりすると床面がキズつく原因となります。 ●高温（目安：35℃以上）や乾燥した場所（目安：湿度 30%以下）で長期間設置はしないでください。製品の反りやゆがみ、割れなどが生じる原因となります。 ●暖房器具を使用する場合は、室内温湿度は適正に保つようにしてください。冬場などの暖房器具による室内の極端な乾燥は、天然木材の割れや反りの原因となります。 ●平らで安定した場所に設置してください。不安定な場所での使用は、製品がゆがんだり、破損の原因となるおそれがあります。 ●直射日光の当たる部屋へ設置する場合はカーテンなどを利用し、直射日光が当たらないようにしてください。 ●シンナーなどの有機溶剤や漂白剤などの薬剤でお手入れしないでください。変色や変形の原因となります。 ●フレームの上にビニール製品を長時間置かないでください。変色したり塗装がはがれる原因となります。 ●化学雑巾を長時間接触させたままにしないでください。変色したり、表面がはがれたりするおそれがあります。 ●開封後の梱包材は、居住地域の自治体のルールに従い、処分してください。
--	--

パーツリスト

オーク材 ウォールナット材 共通

※各リストはオーク材、ウォールナット材ともに共通です。

<p>① 本体</p> <p>×1</p>	<div> <p>② 座クッション</p> <p>※表裏、前後があります。 ※ファスナーのある方が裏面・後側です。</p> <p>×1</p> </div> <div> <p>③ 背クッション</p> <p>※表裏、上下があります。 ※ファスナーのある方が裏面・下側です。</p> <p>×1</p> </div>
<p>フィッティングパーツ</p> <div> <p>④ a フェルト</p> <p>×6</p> </div> <div> <p>④ b 六角レンチ (M4用)</p> <p>※メンテナンス用です。</p> <p>×1</p> </div>	


各部の名称

<p>ソファチェア(本体)</p> <p>(完成図)</p>	<p>クッション取り付け時</p> <p>※クッション用カバーを装着して使用してください。 ※クッション用カバーは別売です。</p>
--------------------------------	--

※組み立て方法は、オーク材、ウォールナット材ともに共通です。

⚠ 注意 使用前に点検してください

- 座面裏のパーツ取り付けボルト及び、座フレームと脚フレームの接合部ボルトにゆるみがないか確認し、ゆるんでいる場合は⑥六角レンチでしっかり締めてください。万が一、輸送時の振動によりボルトにゆるみが生じていた場合、そのままの状態で使用すると、商品の破損やケガの原因となります。

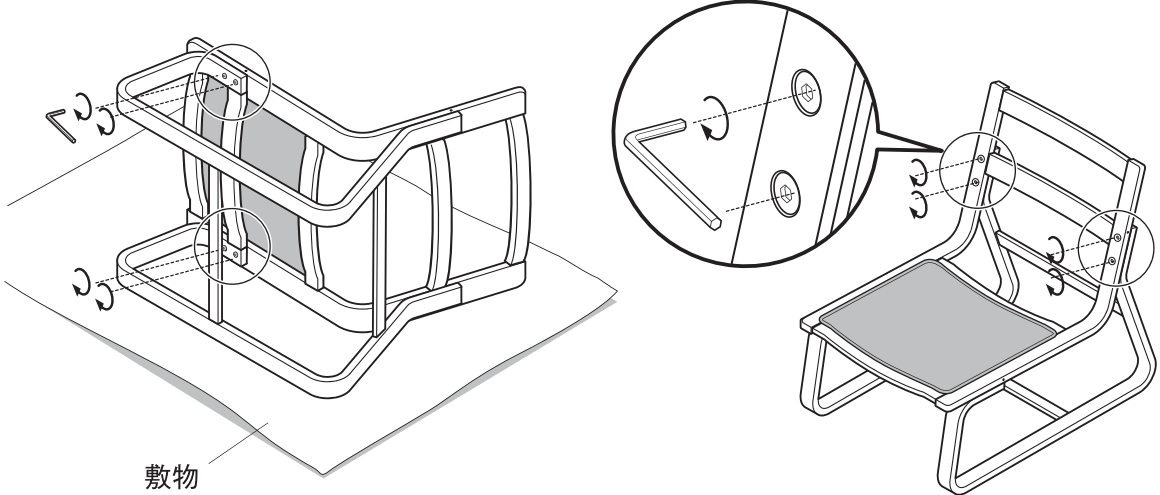

⚠ 注意

- ⊘ パーツ取り付けボルトのゆるみを調整する際には締めすぎにご注意ください。
- ❗ 商品を裏返したり起こしたりする際は、脚に負担がかからないように2人以上でしっかり持ち上げてください。破損の原因となります。

- 1週間程度経過しましたら、ボルトを締め直してください。使い始めはゆるんでいる場合があり、そのまま使用すると商品の破損、ケガの原因となります。
- 作業の際は、床や既存の家具がキズつかないようにご注意ください。


禁止

- 電動工具は使用しないでください。無理に負荷がかかると、商品破損によりケガをするおそれがあります。

1

はじめに、④本体の下に敷物などを敷きます。右下のイラストを参考に床との接地面を確認します。

④本体を横に倒した状態で、⑤フェルトを床との接地面に4ヶ所貼ってください。次に、中央部へ2ヶ所貼ってください。

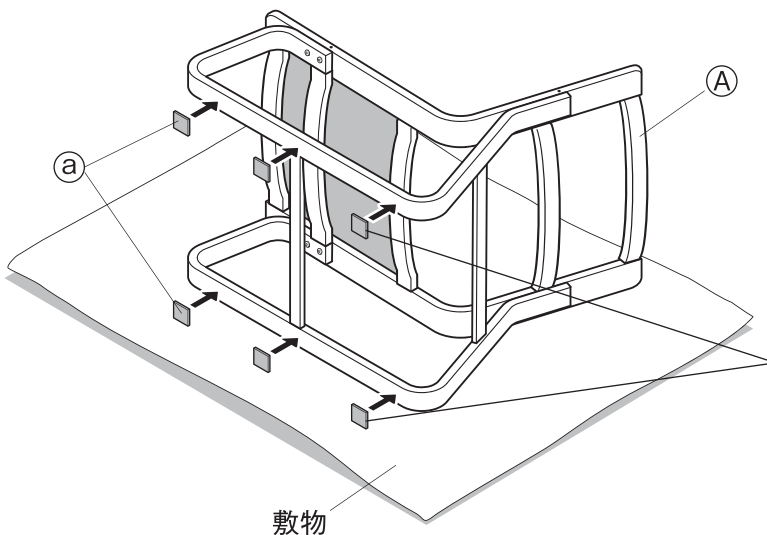


⚠ 注意

- ❗ ご使用前に必ず点検してください。万が一ゆるんでいる場合、そのまま使用するとケガや脚・本体の破損、床面のキズの原因となります。

お願い (その他 注意)

貼る前に貼る面のホコリなどの付着物をふき取ってください。付着物があると粘着力が低下します。貼った後は全体をしっかり押さえて、ムラなく接着してください。

側面図

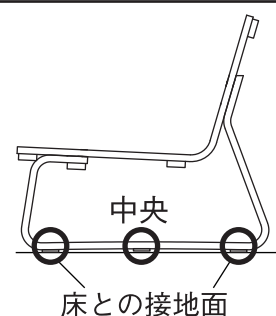


2

クッション用カバー（別売り）を⑧座クッション、⑨背クッションに装着してから
①本体の上に⑧座クッション、⑨背クッションをのせて完成です。



※座クッションには表裏・前後の方向性があります。（詳しくは、パーツリストをご確認ください。）

※背クッションには表裏・上下の方向性があります。（詳しくは、パーツリストをご確認ください。）

※クッション用カバーには別売り「リビングでもダイニングでもつかえるソファチェア用カバー」を使用してください。

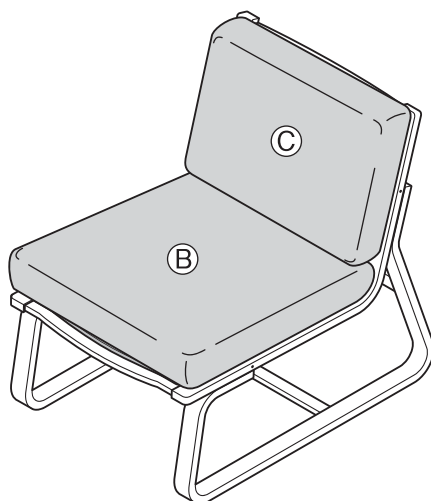**完成**

※別売り「リビングでもダイニングでもつかえるソファチェア用アーム」を取り付ける際は、下記の止めネジをはずしてください。

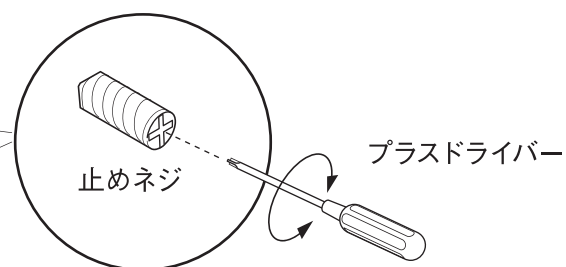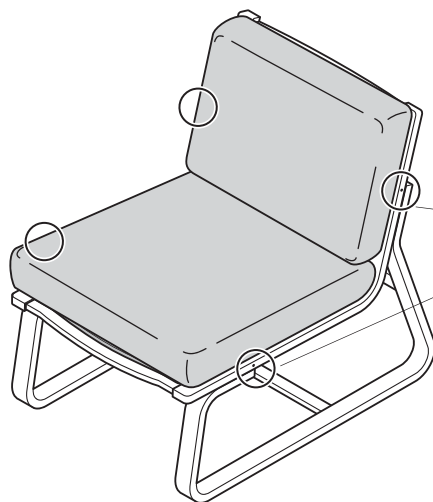

※アームなしでご使用の場合、止めネジがゆるんできたらプラスドライバーで締め直してください。

移動について

- 移動する際は、床面を引きずらず、必ず商品の下に手を掛け、大人2人以上で同時に持ち上げて運んでください。ケガや破損、床面へのキズの防止となります。

廃棄について

- 廃棄の際は、居住地域の自治体のルールに従い、処分してください。

お手入れ方法

保守・点検

- 破損、変形した状態では使用しないでください。製品の強度が弱くなりケガをするおそれがあります。
- ボルトは、ゆるみやグラつきがないか定期的に点検し、ゆるみはじめたら⑥六角レンチ（メンテナンス用）を用いて、しっかり締め直してください。ゆるんだままだと、ケガや脚・本体の破損、床面のキズの原因となります。また、ガタつきや異常音の発生の原因となります。
- 脚の裏面に保護用のフェルトを貼った場合は、ずれやはがれがないか定期的に点検し、ずれやはがれが生じていたら、市販の新しいものに貼りかえてください。ずれやはがれが生じたままだと床面がキズつく原因となります。
- 害虫を発見した場合は、直ちに殺虫や防虫処理をしてください。放置すると虫害が拡大するおそれがあります。

木部のお手入れ

- 塗装面のホコリはやわらかい布、またはハタキで軽く払ってください。硬い布でホコリのあるままでこすると、細かなキズがついてしまい逆効果です。
- 汚れのひどい時は、3～5％に薄めた中性洗剤を浸した布で汚れを落とし、その後、水で浸した布で洗剤分をよくふき取ってください。次に乾いた布で軽くふいた後、自然乾燥させてください。

生地のお手入れ

- 通常のお手入れはやわらかい布で乾ぶきしてください。ほこりなどはブラシや掃除機（弱設定）などを使って取り除いてください。
- コーヒーなどの汚れがひどい時は、ぬるま湯を使って3～5％程度に薄めた中性洗剤に、やわらかい布を浸し、よく絞って表面を叩くようにふき取ってください。その後、水を浸した布で洗剤をよくふき取り、自然乾燥してください。
- クッションカバーの洗濯方法については、カバーの品質表示ラベルに従い、正しく取り扱いください。（インナーカバーは取りはずして洗濯することはできません。）

ご使用に際して

天然木製品についてのおことわり

- 本商品は天然木を使用しているため、木目や色合いなど、商品ごとに天然木材特有の個体差があります。そのため、商品として木目や色調に差がありますが、あらかじめご了承ください。
- 天然木（突板）は下記の条件により、割れや反りなどが発生するおそれがありますので、ご注意ください。
 - ①直射日光の当たる場所でのご使用は出来る限りお避けください。どうしても直射日光が当たる場合は、カーテンなどで出来る限り避けてご使用ください。
 - ②冷暖房器具の近くでのご使用は出来る限りお避けください。必ず冷暖房の風が直接当たらないようにしてご使用ください。
 - ③特に冬の暖房による室内の極端な乾燥は、天然木の割れ、反りを発生させる原因になります。

ホルムアルデヒドの対策について

- ホルムアルデヒドとは
シックハウス症候群の原因物質の一つといわれています。常温で気化する、無色で刺激臭のある化学物質で、家具はもとより建築資材・壁紙を貼る接着剤などに含まれています。少しずつ放散されるため、ホルムアルデヒドに汚染された室内に長期間いると目がチカチカしたり、喉に不快な刺激を感じたりすることがあります。濃度が高いと呼吸困難を起こす場合もあります。
- お部屋の換気について



注意

- ❗ 家具を設置の際は、室内の換気を十分にしてください。
化学物質に敏感な体質の方や乳幼児などアレルギー症状を起こすことがあります。

ホルムアルデヒドは空気中に放散されやすいので、普段からこまめに室内の換気を行うようにしてください。特に複数の家具を同時に設置した場合は、窓をできるだけ広く開け、十分な換気を行ってください。室内の温度が高くなると、ホルムアルデヒドは多く放散される傾向がありますので、夏季に室内を長時間閉め切っている場合は、特に換気をするようにご注意ください。換気効率をあげるため複数の窓を開けたり、換気扇、扇風機、サーキュレーターの利用をおすすめします。

- 化学物質に敏感な体質のお客さまへ
ホルムアルデヒドに限らず、シックハウス症候群に該当する化学物質の許容量には個人差があります。よって、室内濃度指針値（健康上望ましいとされるホルムアルデヒドの室内濃度値）以下の濃度であっても反応する体質の方もいらっしゃいます。現段階の無印良品の家具におきましても、ホルムアルデヒド放散量の少ない材料を極力使用しておりますが、まったく放散されないわけではありませんので、ご注意ください。アレルギー症状が起きた際は、医師にご相談されることをおすすめします。
- ホルムアルデヒド吸着・分解シートについて
狭い空間ではホルムアルデヒドは逃げ場がなく、材料に再吸着する可能性があります。そこで、お手元に届くまで少しでもホルムアルデヒド濃度を低下させるために、無印良品の家具には、ホルムアルデヒド吸着・分解シートを同梱しています。
※同梱の「ホルムアルデヒド吸着・分解シート」は効力が落ちておりますので、燃えるゴミとして処分してください。

製品仕様

品名	リビングでもダイニングでもつかえる ソファチェア・オーク材	リビングでもダイニングでもつかえる ソファチェア・ウォールナット材
J A N	4550344910870	4550344910887
製品寸法	幅550×奥行780×高さ770 mm（座面高410 mm）	
製品重量	約 9 kg	
用途	チェア（1人用）	
材質 （オーク材）	本体フレーム：天然木化粧積層材（オーク材突板） 天然木化粧合板（オーク材突板） 座面張り材：ポリエステル 100% クッション材：ウレタンフォーム インナーカバー：ポリエステル 100% 表面加工：ウレタン樹脂塗装	
材質 （ウォールナット材）	本体フレーム：天然木化粧積層材（ウォールナット材突板） 天然木化粧合板（ウォールナット材突板） 座面張り材：ポリエステル 100% クッション材：ウレタンフォーム インナーカバー：ポリエステル 100% 表面加工：ウレタン樹脂塗装	
原産国	ベトナム	

お問い合わせ先

製品のお問い合わせは、お買い上げの販売店もしくは下記お客様相談室までご連絡ください。

株式会社 良品計画

〒170-8424

東京都豊島区東池袋 4-26-3

お客様相談室でんわ



0120-14-6404

LIVING DINING SOFA CHAIR / OAK
LIVING DINING SOFA CHAIR / WALNUT

User Guide

Thank you for your purchase.
Read the User Guide before use to ensure correct use of this product.
Please store this User Guide in an easily accessible place for future reference.

Table of Contents	Pages
Important Information (Safety Advice)	11 - 12
Parts	13
Part Names	13
Directions for Use	14 - 15
Care Instructions	16
Usage	17
Specifications	18
Contact Information	18

Important Information (Safety Advice)



The instructions
must be followed.

This User Guide contains important information for safe use of the product in order to prevent harm to users and other individuals as well as damage to property.

Please note the following contents (indications and graphic symbols) before reading the main contents of this guide and follow the given instructions.


- Explanations of Indications

The extent of injury and damage that may arise when the product is used incorrectly is classified and explained with the following symbols.

 WARNING	Indicates a hazard with a level of risk which, if not avoided, could result in death or serious injury ^{*1} to the user.	 CAUTION	Indicates a hazard with a level of risk which, if not avoided, could result in injury ^{*2} to the user or property damage ^{*3} .
--	---	--	--

- Explanations of Graphic Symbols



Instructions are given in the form of the following graphic symbols. (Examples of graphic symbols are as follows.)


 Actions that are prohibited.	 Actions that must be taken.
--	---

*1 "Serious injury" indicates injuries, such as blindness, traumas, burns, bone fractures, poisoning, or electric shocks, that have long-term effects and require hospitalisation and/or long-term hospital visits for treatment.


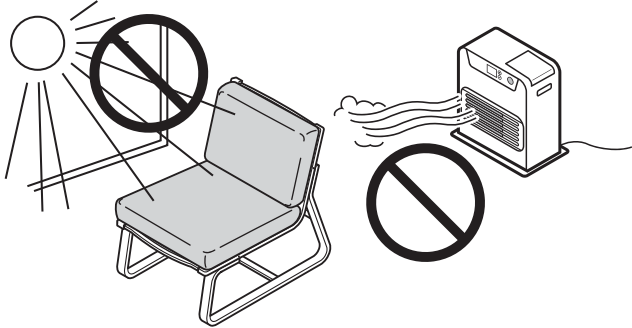

*2 "Injury" indicates traumas or burns that do not require hospitalisation or long-term hospital visits for treatment.

*3 "Property damage" indicates extended damage that involves the house or household property.

 WARNING	
 DON'Ts	<ul style="list-style-type: none">• Do not lay small children on the product. Doing so may cause them to suffocate or fall on the floor.• Do not let children use the product without supervision. Doing so may result in unexpected injury.• Do not stand or jump on the seat or use the product as a stepladder. Doing so may cause it to lose balance and tip over or become damaged, resulting in injury.• Do not use in an unstable condition, such as tilting the product while sitting on it. Doing so may cause tip-over or damage to the product, resulting in scratches on the floor or injury.• Do not sit near the edge of the seat. Doing so may cause tip-over, resulting in injury.• Do not sit on any part of the chair other than the seat. Doing so may result in unexpected injury.• Do not allow more than the specified number of people to use at the same time. Doing so may cause damage to the product, resulting in injury.• Do not use in an unstable state or location. Doing so may result in injury due to tip-over.• Do not place near a heat source such as a room heater. Doing so may cause a fire.• Do not drop lit cigarettes, etc. onto the product. Doing so may cause a fire.• Do not place on the power cord of an electrical appliance. Doing so may damage the cord, resulting in electric shock or a fire.• Do not leave unnecessary packaging materials within reach of small children. Small children may accidentally pull them over their heads and cover their mouth and/or nose, causing suffocation.• Do not use outdoors. Doing so may cause deformation or severe degradation, resulting in injury.• Do not keep the fitting parts within reach of small children as they are small. Be careful not to lose them. Accidental swallowing of small parts by children may cause choking.

 CAUTION	
 DON'Ts	<ul style="list-style-type: none">• Do not install in a room with high humidity (approx. humidity of 70% or higher and room temperature of 20°C or higher) for a long time. Doing so may cause mould and mites, resulting in health hazards.

⚠ CAUTION (Continued)

<p> DON'Ts</p>	<ul style="list-style-type: none"> Do not drag or drop when moving the product. Doing so may cause damage to the product or scratches on the floor. Do not expose to direct sunlight or lighting, or heat or air from heating and cooling appliances such as air conditioner and heater. Doing so may cause warping, deformation, cracks, or discolouration.  <ul style="list-style-type: none"> Do not push or pull the product while sitting on it. Doing so may cause tip-over or damage to the product, resulting in injury. Also this may cause scratches on the floor, even if felt pads are attached. Do not use for other than its intended purpose. Doing so may cause unexpected accident or injury. Do not use this product if it is damaged, deformed or cracked. Doing so may result in unexpected injury. Do not attempt to repair or modify. Doing so may reduce the strength of the product, resulting in injury. Do not use on an uneven floor when the felt pads are attached to the product. Doing so may cause the felt pads to come off, resulting in dirt or scratches on the floor surface.
<p> DOs</p>	<ul style="list-style-type: none"> Ventilate the room well at the early stage of use. Formaldehyde contained in adhesive may still remain, and those with chemical sensitivity or small children may experience allergic reactions. Attach protective material such as felt pads to the bottom of the legs, or use a protective underlay. Not doing so may cause scratches on the floor. Also using on cushioned vinyl flooring may cause discolouration of the floor due to a reaction between the coating on the wooden parts and the floor. Periodically check for any looseness in the bolts, and retighten them if any looseness is found. Doing so will prevent injury, or damage or scratches to the floor.







Note (Other Caution)

	<ul style="list-style-type: none"> Attach felt pads in appropriate positions. Also check periodically that they are in place and have not come off. The floor may be scratched if the pads come off or get out of place. Do not place in a room with a high temperature (approx. 35°C or higher) or low humidity (approx. humidity of 30% or less) for a long time. Doing so may cause warping, distortion, or cracks in the product. Keep the room at an appropriate temperature and humidity level when using a heating appliance. Using heating appliances in winter may cause the room to become extremely dry, resulting in cracking or warping of natural wood. Install on a flat and stable surface. Using on an unstable surface may cause distortion of or damage to the product. When installing the product in a room that is subject to direct sunlight, use a curtain, etc. to protect the product from direct sunlight. Do not use bleach or organic solvents such as thinner for cleaning. Doing so may cause discolouration or deformation. Do not place plastic objects on the frame for a long period of time. Doing so may result in discolouration or peeling of the coating. Do not leave a chemically treated cloth in contact with the product for a long time. Doing so may cause discolouration or peeling of the surface material. To dispose of the packaging material after unpacking, follow the rules implemented by your local government.
--	--



Parts

Applies to both OAK / WALNUT types.

* Each list applies to both oak and walnut types.
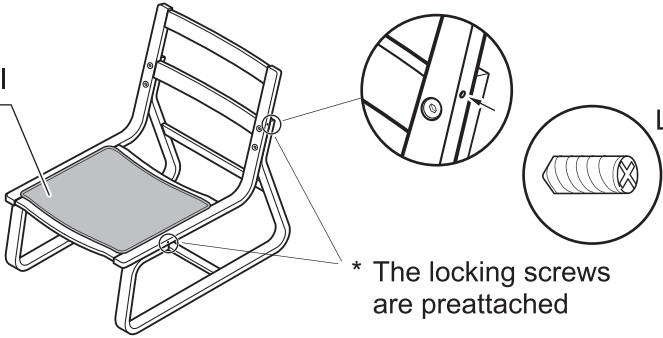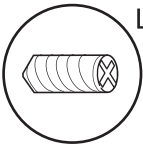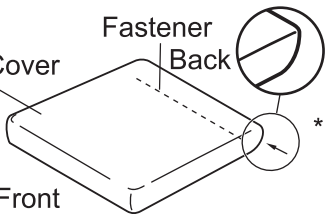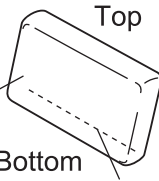
<div><div>Ⓐ Main Unit</div><div><div>Seat Covering Material</div><div></div><div><div>Locking Screw</div><div></div></div><div><div>* The locking screws are preattached</div><div>×1</div></div></div></div>	
<div><div>Ⓑ Seat Cushion</div><div><div>Inner Cover</div><div>Fastener</div><div>Back</div><div>Front</div><div></div><div><div>* The rear side has rounded edge</div><div>×1</div></div><div><div>* It has front / back and top / bottom orientation.</div><div>* The fastener is on the bottom rear side.</div></div></div></div>	<div><div>Ⓒ Back Cushion</div><div><div>Top</div><div>Inner Cover</div><div>Bottom</div><div>Fastener</div><div></div><div>×1</div><div><div>* It has front / back and top / bottom orientation.</div><div>* The fastener is on the bottom rear side.</div></div></div></div>
<div>Fitting Parts</div>	
<div><div>Ⓐ Felt Pad</div><div></div><div>×6</div></div>	<div><div>Ⓑ Hexagonal Wrench (for M4)</div><div></div><div><div>* For product maintenance</div><div>×1</div></div></div>

Part Names
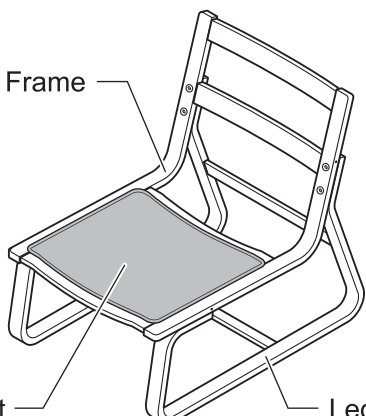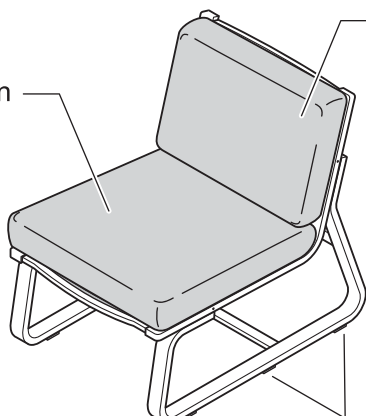
<div><div>Sofa Chair (Main Unit)</div><div><div>Seat Frame</div><div>Seat</div><div>Leg Frame</div><div></div></div></div>	<div><div>When Cushions Are Attached</div><div><div>Back Cushion</div><div>Seat Cushion</div><div>Felt Pads</div><div></div></div><div><div>* Put on cushion covers before using this product.</div><div>* Cushion covers are sold separately.</div></div></div>
---	--


(Completion Image)



Directions for Use

Applies to both OAK / WALNUT types.

* Directions for use apply to both oak and walnut types.

CAUTION Check before use

- Check that the fixing bolts on the bottom of the seat and the bolts joining the seat frame and leg frame are not loose. If they are loose, tighten them securely with the  hexagonal wrench. If the bolts become loose due to vibration during transportation, continued use under this condition may cause injury or damage to the product.

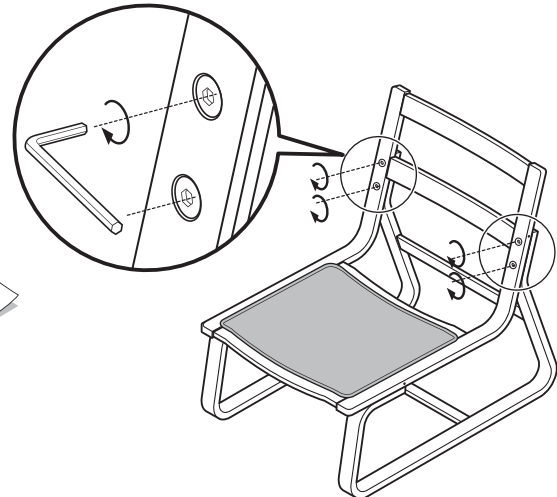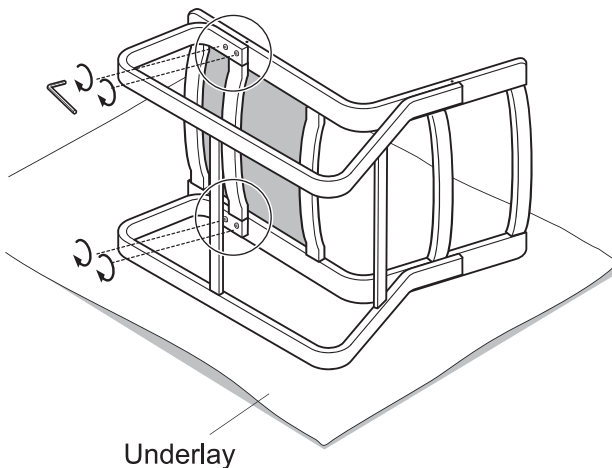

DOs



CAUTION

- ⊘ Do not overtighten the fixing bolts when adjusting them.
- ⚠ This product should be turned over and lifted by at least two people so as not to place excessive strain on the legs. Failure to do so may cause damage to the product.




- Retighten all bolts after approximately one week. Bolts may be loose at the start of use, and continued use of this product with loose bolts may result in damage or injury.
- Be careful not to scratch the floor and furniture during assembly.




DON'Ts

- Do not use power tools. Placing unnecessary strain on the product may result in injury due to damage to the product.

1

Place an underlay underneath  main unit. Referring to the right illustration below, check the contact surfaces between the leg frames and the floor. Lay  main unit on its side and attach three pieces of  felt pads to each leg frame (two on the contact surfaces and one in the middle of these two).

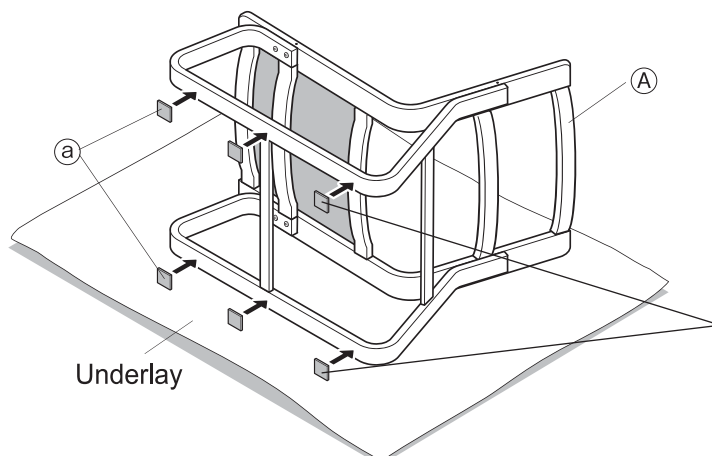


CAUTION

- ⚠ Be sure to check before use. If any part of this product is loose, continued use may result in injury, damage to the legs or body or scratches to the floor.

Note
(Other Cautions)

Wipe away dust and other substances from the bottom surfaces of the leg frames before attaching felt pads to ensure sufficient adhesiveness. Firmly press the whole felt pad so it adheres evenly.

SIDE VIEW

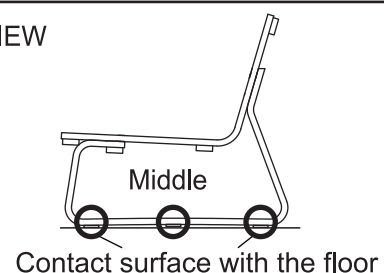


Directions for Use (Continued)

Applies to both OAK / WALNUT types.

2


Put cushion covers (sold separately) on the ② seat cushion and ③ back cushion and then place the ② seat cushion and ③ back cushion on the ① main unit.

- * Seat cushion has front / back and top / bottom orientation. (See the part list for details.)
- * Back cushion has front / back and top / bottom orientation. (See the part list for details.)
- * Use the COVER FOR LIVING DINING SOFA CHAIR (sold separately) to cover the cushions.

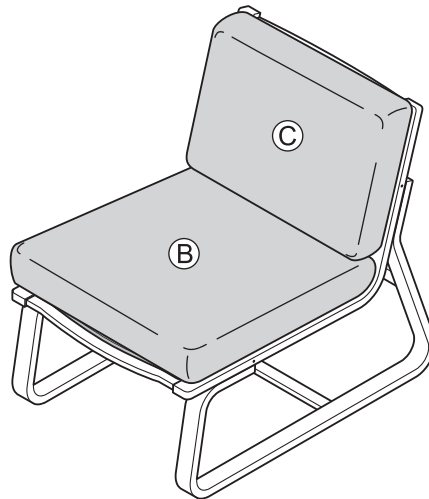

Completed

* Remove the locking screws when attaching LIVING DINING ARM FOR SOFA CHAIR (sold separately).

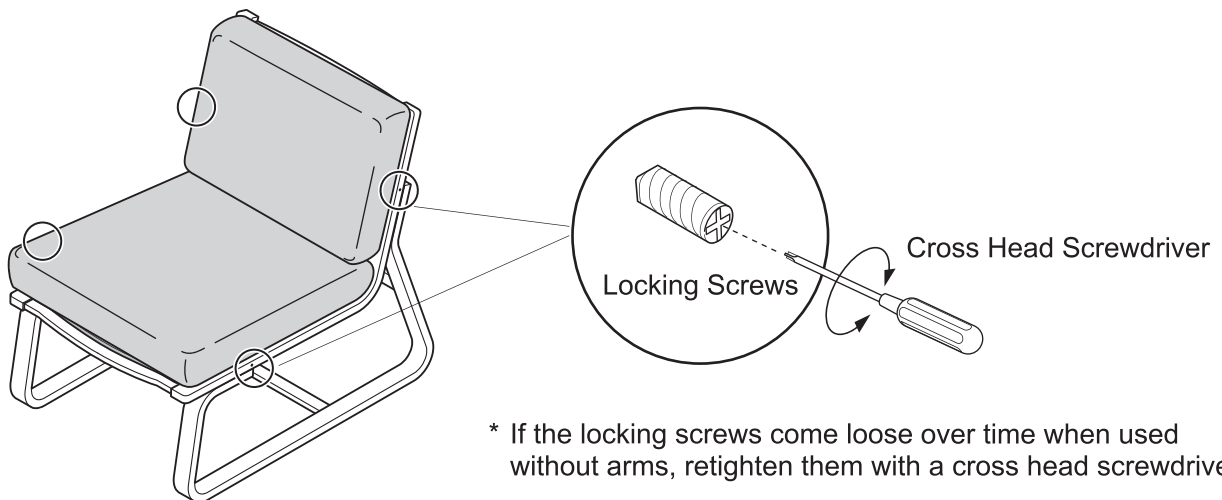

* If the locking screws come loose over time when used without arms, retighten them with a cross head screwdriver.

Moving the Product

- When moving the product, do not drag it on the floor. It must be simultaneously lifted by two or more adults holding the bottom side of the product with both hands.
Doing so will prevent injury, or damage or scratches to the floor.

Disposal

- To dispose of the product, follow the rules implemented by your local government.

Care Instructions

Maintenance and Inspection

- Do not use if damaged or deformed. Doing so may reduce the structural strength of the product, resulting in injury.
- Periodically check for any looseness or wobbling in bolts, and retighten them with the ⑥ hexagonal wrench (for product maintenance) if any looseness is found. Continued use with loose bolts or legs may result in injury, damage to the legs or product or scratches to the floor. It may also cause wobbling or abnormal noises to occur.
- If you have attached felt pads to the bottom of the leg frames, check periodically that they are in place and have not come off. If they have come off or are out of place, replace the pads with new ones that are commercially available. The floor may be scratched if used under this condition.
- Take insecticidal measures immediately if any type of pest is found. If left untreated, pest damage may worsen.

Maintenance for Wooden Parts

- Gently wipe off dust from coated surfaces using a soft cloth or duster. Rubbing dusty surfaces with a hard cloth is counterproductive as it may cause small scratches to occur.
- If the product is heavily soiled, clean it with a cloth soaked in a 3% to 5% neutral detergent solution and wipe off any detergent residue with a damp cloth. Then gently wipe with a dry cloth and let the product dry naturally.

Maintenance for Fabric

- For regular maintenance, wipe with a soft, dry cloth. Remove dust with a brush or a vacuum cleaner (at low setting).
- If the product is particularly dirty, such as with coffee stains, soak a soft cloth in a warm 3% to 5% solution of neutral detergent, wring it out thoroughly and pat the stained surface with the cloth to remove the stains. Then, wipe off any detergent residue with a damp cloth and let the product dry naturally.
- For instructions on how to wash the cushion cover, see the care label on the cover. (Note that the inner cover cannot be taken off for washing.)

Usage

Cautions for Natural Wood Products


- As this product is manufactured using natural wood, there are differences in grain and colour of individual wood. Therefore, note that grain and colour vary between products.
- Please note that cracks and warping may occur in natural wood (sliced veneer) in the following conditions.
 - ① Avoid use at locations exposed to direct sunlight. If exposure to direct sunlight is unavoidable, reduce sunlight using curtains, etc.
 - ② Avoid use near heaters or air conditioners. Make sure that the air from heater or air conditioner does not come into direct contact with the product.
 - ③ In particular, the use of heating appliances during winter may cause the room to become extremely dry, resulting in cracking or warping of natural wood.

Formaldehyde Countermeasures

- What is Formaldehyde?

Formaldehyde is said to be one of the causes of sick house syndrome. It is a colourless, pungent-smelling chemical often found in furniture, building materials, wallpaper adhesives, etc. that vaporises at room temperature. As it is gradually released into the air, spending a long time in a room contaminated with formaldehyde can result in eye and throat irritation. Also, exposure to a high concentration of formaldehyde may cause breathing difficulties.

- Room Ventilation

 CAUTION	! Ventilate the room well when installing the furniture. Some individuals sensitive to chemicals and small children may experience allergic symptoms.
--	--

Be sure to frequently ventilate the room regularly as formaldehyde is easily released into the air. Especially when multiple pieces of furniture are installed at the same time, open the windows wide enough to allow adequate ventilation. Formaldehyde emission tends to increase with temperature rise of the room. Therefore, be sure to ventilate thoroughly after the room has been closed up for a long time during summer. It is recommended that you open multiple windows and use a ventilation fan or an air circulator to increase ventilation efficiency.

- For Individuals Sensitive to Chemicals

There are individual differences in resistance to chemicals other than formaldehyde that are related to sick house syndrome. Therefore, even if the actual concentration in the room is equal to or lower than the indoor concentration guideline value (acceptable safe level of formaldehyde indoors), some people may react to formaldehyde. MUJI furniture are made with materials that contain as little formaldehyde as possible, but note this does not guarantee that no formaldehyde is emitted. It is recommended that you seek medical attention if you experience any allergic symptoms.

- Formaldehyde Adsorption/Decomposition Sheet

Formaldehyde is readsorbed onto materials when there is nowhere for it to dissipate in a confined space. Therefore, a formaldehyde adsorption/decomposition sheet is included in the packaging to reduce formaldehyde concentration as much as possible before the product reaches the customer.

* The effect of the sheet will be diminished by the time the product reaches the customer. Dispose of the sheet as burnable waste after unpackaging.

Specifications

Product Name	Living dining Sofa chair / Oak	Living dining Sofa chair / Walnut
JAN	4550344910870	4550344910887
Product Dimensions	W550 × D780 × H770 mm (Seat Height: 410 mm)	
Product Weight	Approx. 9 kg	
Usage	Chair (for 1 person)	
Materials (Oak)	Main Unit Frame: Natural Wood Laminated Board (Oak Veneer) Natural Wood Laminated Plywood (Oak Veneer) Seat Covering Material: Polyester 100% Cushioning Material: Urethane Foam Inner Cover: Polyester 100% Surface Finish: Urethane Resin Coating	
Materials (Walnut)	Main Unit Frame: Natural Wood Laminated Board (Walnut Veneer) Natural Wood Laminated Plywood (Walnut Veneer) Seat Covering Material: Polyester 100% Cushioning Material: Urethane Foam Inner Cover: Polyester 100% Surface Finish: Urethane Resin Coating	
Place of Origin	Vietnam	

Contact Information

For inquiries regarding the product, please contact the store of purchase.