

リクライニングソファベッド Reclining sofa bed

組立・取扱説明書 User Guide

日本語

この度は本製品をお買い上げいただき、誠にありがとうございます。
1ページからお読みください。

English

Thank you for your purchase.
Read these instructions from Page 9.

4550512047216 Reclining sofa bed

リクライニングソファベッド

組立・取扱説明書

この度は本製品をお買い上げいただき、誠にありがとうございます。
ご使用前に本書をよくお読みいただき、内容を理解した上で、正しく組み立て、正しくお使いください。
また、本書はいつでも確認できるように大切に保管してください。

もくじ	ページ
重要なお知らせ（安全上のご注意）	2 ～ 3
パーツリスト	4
各部の名称	4
組立方法	5
ご使用方法	6 ～ 8
製品仕様	8
お問い合わせ先	8

重要なお知らせ（安全上のご注意）

必ずお守りください。

本書には、お使いになる方や他の人への危害と財産への損害を未然に防ぎ、安全に正しくお使いいただくために、重要な内容を記載しています。

次の内容（表示・図記号）をよく理解してから本文をお読みになり、記載事項をお守りください。

●表示の説明

誤った使い方をしたときに生じる危害や損害の程度を区分して説明しています。



警告

使用者が死亡または重傷（※1）を負うことが想定される内容です。



注意

使用者が傷害（※2）を負うことや物的損害（※3）が発生することが想定される内容です。

●図記号の説明

お守りいただく内容を次の図記号で説明しています。（次は図記号の例です。）



してはいけない「禁止」の内容です。



実行しなければならない内容です。

※1 重傷とは、失明やケガ、やけど、骨折、中毒、感電などで後遺症が残るもの及び治療に入院、長期の通院を要するものをさします。

※2 傷害とは、治療や入院や長期の通院を要しない、ケガ、やけどをさします。

※3 物的損害とは、家屋、家財にかかわる拡大損害をさします。



警告



禁止

- 乳幼児を寝かさないうでください。床へ落下したり、窒息したりする原因となることがあります。
- 一部に片寄る過度な荷重は加えないでください。部材の破損の原因となり、ケガをするおそれがあります。
- ベッドの上で立ったり、飛びはねたりしないでください。転倒や破損、ケガをするおそれがあります。
- 製品で電化製品の電源コードを踏まないでください。コードが破損し、感電や火災の原因となります。
- 不要になった梱包材は、幼児の手の届くところに置かないでください。頭からかぶるなどしたときに、口や鼻をふさぎ、窒息するおそれがあります。



行う

- ソファの背もたれを下す倒す際に、背もたれを持ったままゆっくりと倒してください。手を離すと、背もたれが勢よく落下し、ケガや製品破損のおそれがあります。
- 照明器具点灯時は、布団やシーツが器具に触れないようにしてください。発熱により火災の原因となることがあります。



注意






禁止

- ベッドの設置場所の上部に物を置かないでください。地震時などにその物が落下してケガをする原因となります。
- 組み立てが不完全なまま使用しないでください。固定部分がはずれてケガの原因になることがあります。
- 修理や改造はしないでください。製品の強度が弱くなり、ケガをするおそれがあります。
- 破損や変形した状態では使用しないでください。製品の強度が弱くなりケガをするおそれがあります。


⚠ 注意 (つづき)	
 禁止	●規定を超える人数では使用しないでください。破損してケガをするおそれがあります。(詳しくは製品仕様をご確認ください。) ●指定の用途以外で使用しないでください。破損してケガをするおそれがあります。 ●転倒する可能性のある家具などはベッドの周囲に置かないでください。地震時などに倒れ、ケガをする原因となります。 ●屋外では使用しないでください。変形や著しい劣化が起こり、ケガをする原因となります。 ●無印良品の木製脚(別売り)以外は取り付けしないでください。転倒や破損、ケガをするおそれがあります。 ●一部の脚に片寄る過度な荷重は加えないでください。部材の破損の原因となり、ケガをするおそれがあります。
 行う	●直射日光や冷暖房器具などの熱や風が製品に直接当たらないようにしてください。反りやゆがみ、割れ、変色などの原因になります。 ●壁から少し離して設置してください。空気の滞留や壁側の結露を防ぎ、カビの発生防止になります。また、壁に直接触れないことで、壁紙の変色防止にもなります。 ●組み立ては、大人2人以上で行ってください。1人で作業すると、転倒や破損、床をキズつける、ケガの原因となります。 ●各部にゆるみがないか定期的に点検し、ゆるんでいたらしっかり締め直してください。ケガや製品の破損防止になります。 ●組み立て時は、組み立てに必要なスペースを十分に確保し、敷物を敷いてください。床や既存の家具のキズ防止になります。

お願い (その他 注意)	
	●平らで安定した場所に設置してください。不安定な場所での使用は、製品のゆがみ、破損の原因になることがあります。 ●シンナーなどの有機溶剤や漂白剤などの薬剤でお手入れしないでください。変色や変形の原因となります。 ●開封後の梱包材は、居住地域の自治体のルールに従い、処分してください。 ●組み立ての際は、手袋などをつけて作業してください。思わぬケガの防止になります。

パーツリスト

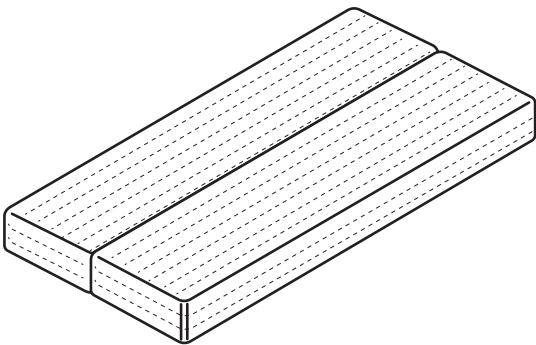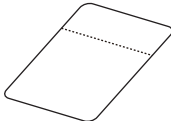① 本体×1  カバーが掛かった状態でお届けしています。 ※木製脚は付属しておりません。	② 保護用テープ×2  ②は付属の③に入れて保管し、洗濯などでカバーを着脱する際には、面ファスナーに貼り合わせてください。 ③ 保護用テープ保存袋×1 	木製脚（別売り）×4  ※無印良品の木製脚（別売り）が必要です。
---	--	---

各部の名称

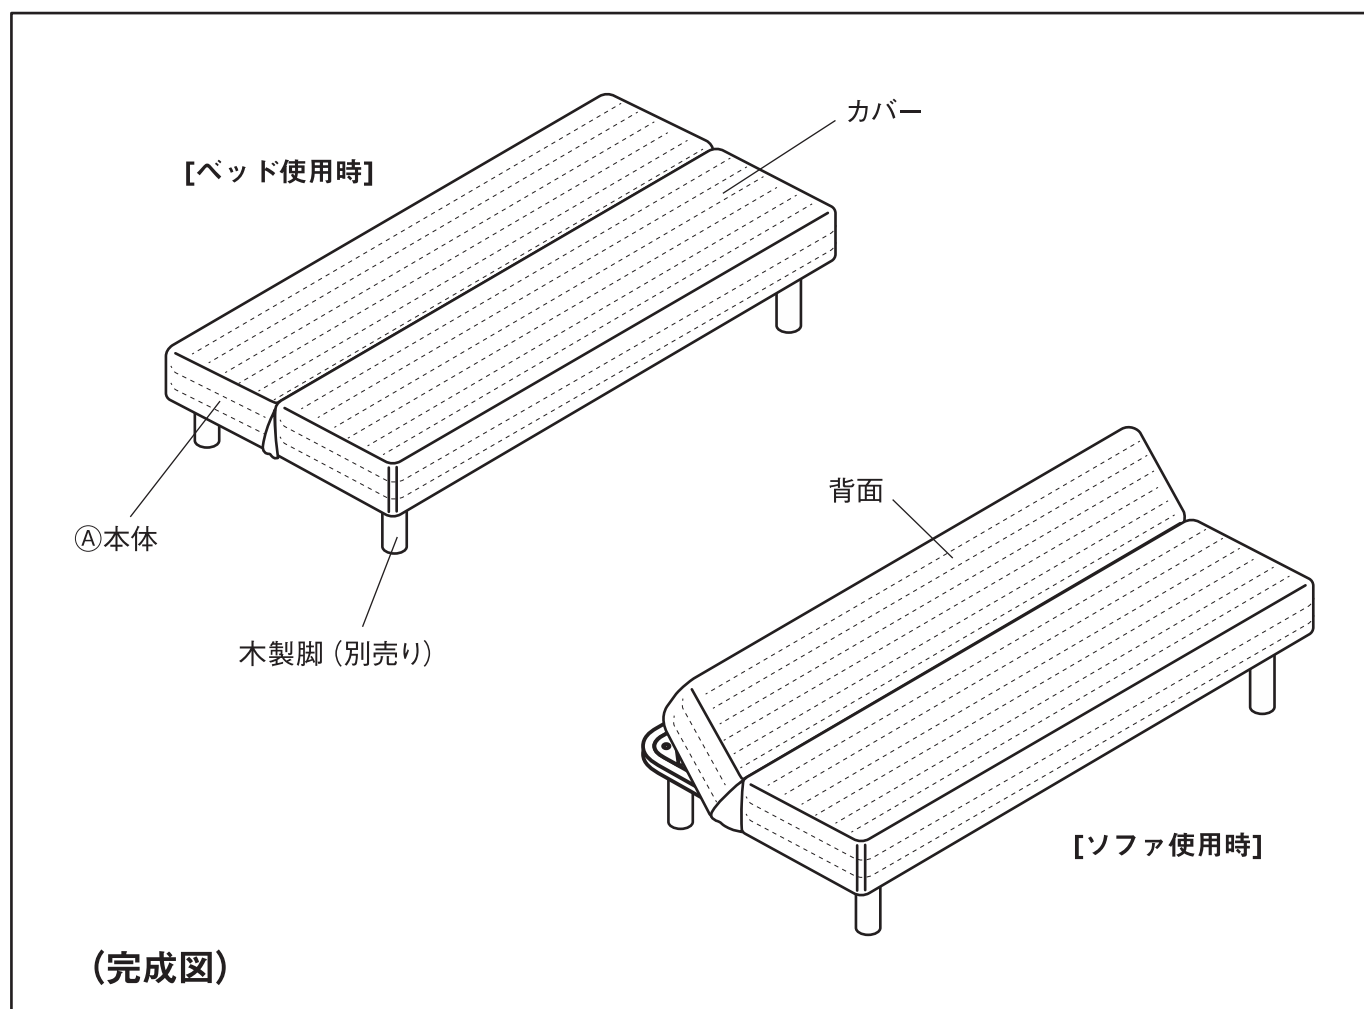

組立方法



注意

- ❶ 組み立ては、大人2人以上で行ってください。1人で作業すると、転倒や破損、床をキズつける、ケガの原因となります。
- ❷ 組み立て時は、組み立てに必要なスペースを十分に確保し、敷物を敷いてください。床や既存の家具のキズ防止になります。

組み立て後の移動を避けるため、なるべく設置場所の近くで行ってください。


1

本体を裏返し、底部のスチールフレームが上になるように床に置きます。




注意

- ❸ 裏返す際はスチールフレームを直接持たず、必ず製品の下に両手を掛け、持ち上げてください。スチールフレームを持ち上げると破損、ケガをするおそれがあります。

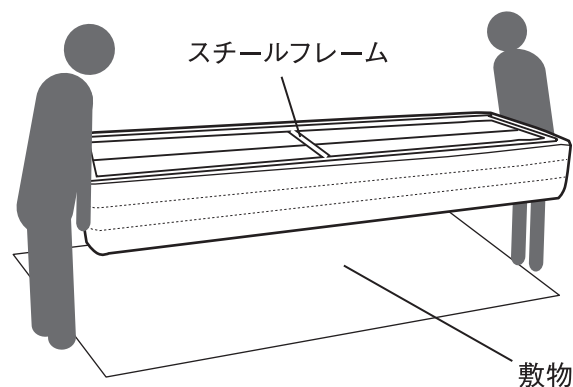

2

本体の裏側四隅の脚取り付け穴に両手で木製脚（別売り）を支えながら脚取り付け穴に垂直にまっすぐ入るよう回して取り付けてください。
※木製脚は別売りです。

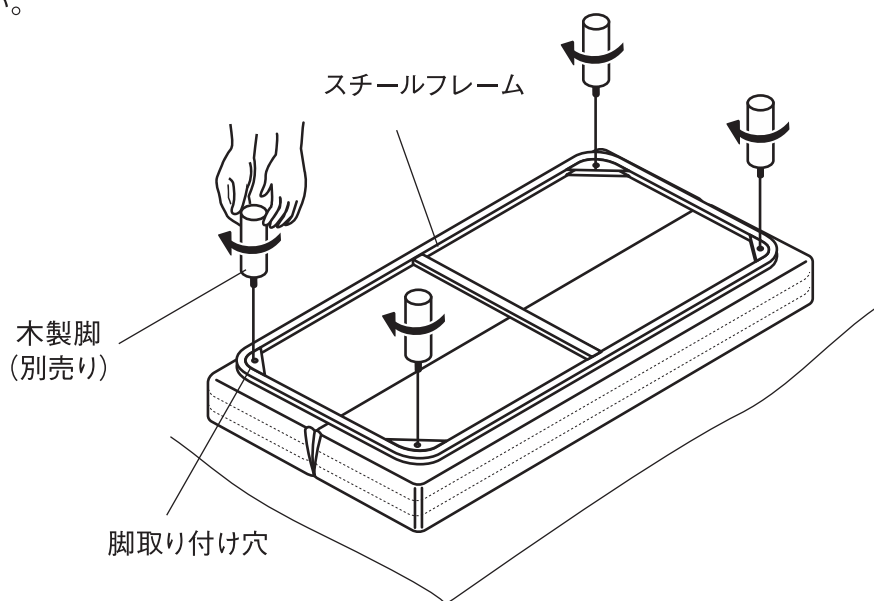


3

木製脚（別売り）取り付け後、再度本体を裏返し、ご使用される場所に設置してください。



注意

- ❹ この製品は、必ずカーペットなど敷物を敷くか、脚にフェルトなどを貼ってから使用してください。製品を長期間同じ場所に設置する場合の、畳や床の凹み、木部の塗料と床との化学反応による変色を防止してくれます。

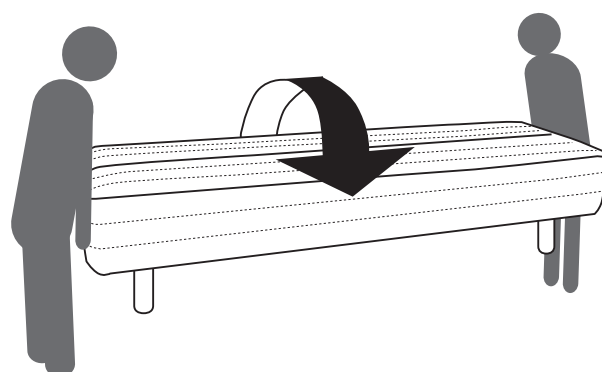


ご使用方法

背面のリクライニング方法

手動操作により 14 段階（フラット時含む）に背の角度調整が可能です。
お好みの角度でご使用いただけます。

操作手順

- ①のフラット時に背面を持ち上げ
- ②の位置まで角度調整ができます。
- ③の位置でロック解除され、再び①の位置に戻りフラットになります。

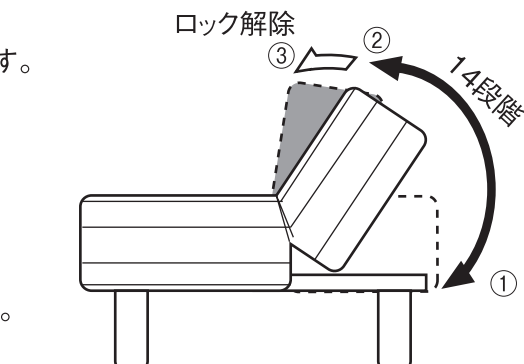

⚠ 注意

- ❶ 背面は重量がありますので、リクライニング操作は 2 人で背面の端部を持って行ってください。（図 1）
- ❷ やむを得ず、リクライニングを 1 人で行う際は背面端部は持たず、背面の中央部を持って行ってください。転倒や破損、ケガをするおそれがあります。（図 2）
- ❸ 背面を起こす時はしっかり持ってください。バランスをくずして転倒、ケガをするおそれがあります。
- ❹ 背面を倒す時は、手や指が可動部や隙間に触れないようにしてください。指や手がはさまれて、ケガをするおそれがあります。
- ❺ リクライニング操作は無理な体勢でしないでください。無理に行おうとすると、ギア破損の原因になります。

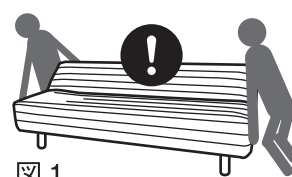


図 1

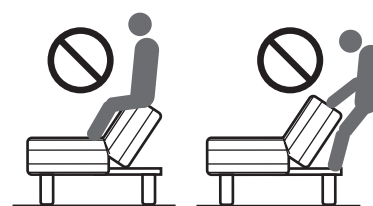


図 2

使用上のご注意

⚠ 警告

- ❶ 本体の上に立つ、背面に腰掛ける、一部分に荷重が集中するご使用や、飛びはねたりしないでください。変形や破損、スプリングコイルの寿命を縮めることになります。
- ❷ 背面側の木製脚やスチールフレーム上に乗らないでください。破損してケガをするおそれがあります。
- ❸ ソファの背もたれを下す倒す際に、背もたれを持ったままゆっくりと倒してください。手を離すと、背もたれが勢いよく落下し、ケガや製品破損のおそれがあります。



⚠ 注意

- ❶ 移動させる際は、大人 2 人以上で、必ずスチールフレームの下に両手を掛け、床面を引きずらないように持ち上げて運んでください。床や既存の家具のキズ防止になります。



お願い（その他 注意）

- ベッドパットを使用してお使いいただくことお勧めします。

ご使用方法 (つづき)

カバーの脱着方法


カバーの取りはずし方

- 1** ソファベッド本体の裏側の面ファスナーをはずします。


カバーは面ファスナーで本体に固定されています。
取り付けられている面ファスナーを全てはがしてから、
カバーをはずしてください。

お願い (その他 注意) ●面ファスナーをはがす際は生地が破れないようゆっくりとはがしてください。

本体裏側

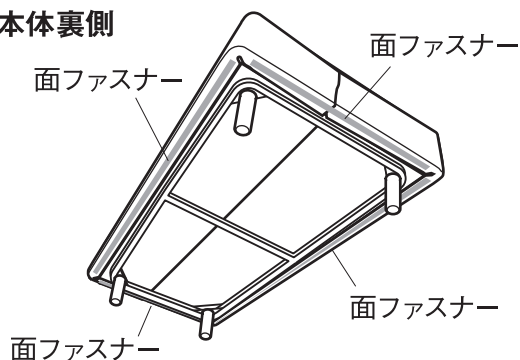


- 2** カバーの両側を持ち上げてください。

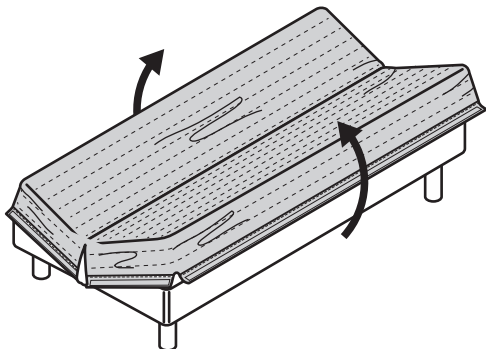

- 3** ソファベッド本体とカバーは下図のようにファスナーで連結されています。

ゆっくりとファスナーをずらし、
本体からはずしてください。

ファスナーを
取りはずす。

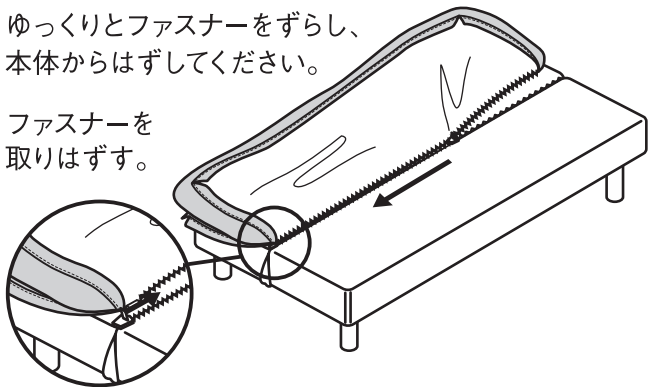


注意

- カバーをはずした状態では使用しないでください。本体のチップウレタンが透けて見えますが、ウレタン特有の色でありカビなどではありません。
※クッション材は、素材の特性上、黄変します。

カバーの取り付け方


- カバー装着の際は本体表側の面ファスナーを取り付けてから本体裏側の面ファスナーを取り付けます。
- 面ファスナーの位置に注意して取り付けてください。

- 1** カバー側ファスナーとソファベッド側ファスナーをゆっくりと留めてください。

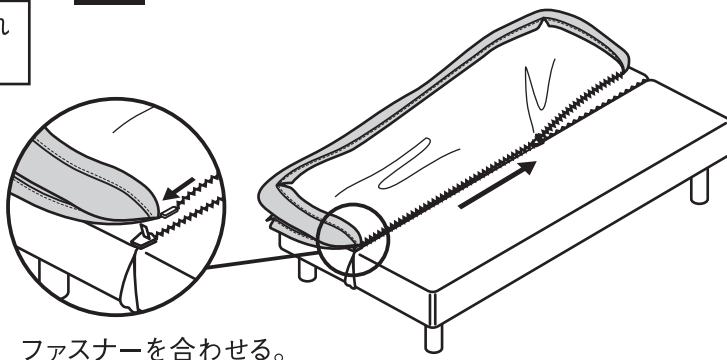


ファスナーを合わせる。

- 2** カバーの両側をソファ本体に添うように徐々に取り付けます。

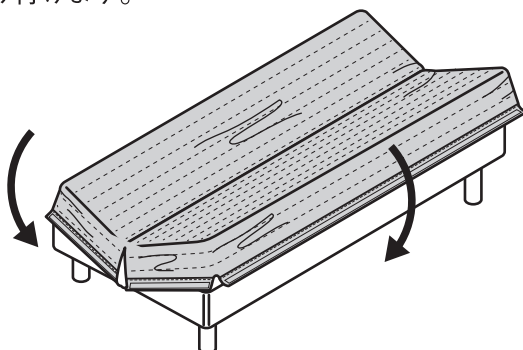

- 3** 図の方向に全体のしわを取りながら、カバーの面ファスナーと本体の面ファスナーを合わせます。

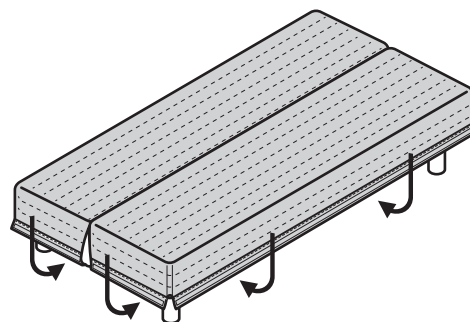

ご使用方法（つづき）

保守・点検

- 破損や変形した状態では使用しないでください。
- 脚にゆるみやグラつきがないか定期的に点検し、ゆるんでいたらしっかり締め直してください。ケガや製品の破損、床面へのキズ防止になります。
- 害虫を発見した場合は、直ちに殺虫や防虫処理をしてください。放置すると虫害が拡大するおそれがあります。

金属部のお手入れ

- 通常のお手入れはやわらかい布で乾ぶきしてください。
- 汚れのひどい時は、3～5%に薄めた中性洗剤を浸した布で汚れを落とし、その後、水で浸した布で洗剤分をよくふき取ってください。次に乾いた布で軽くふいた後、自然乾燥させてください。

製品仕様

品 名	リクライニングソファベッド
J A N	4550512047216
製品寸法 (脚を除く)	幅980×奥行/長さ1980×高さ230～590 mm ※
座面の高さ ベッド時の高さ	230 mm ※
製品重量	約 44 kg
用 途	ソファベッド（1～2 人用）
材 質	構造部材 スチールフレーム：金属（鋼） 座部・背部：積層材 クッション材 / 材料：鋼製ばね（コイルスプリング） 詰め物：ウレタンフォーム 張り材：ポリエステル100% 表面加工：スチールフレーム エポキシポリエステル樹脂粉体塗装
原 産 国	中国

※ 実際の製品高さは、木製脚（別売り）の高さを加えたものになります。

お問い合わせ先

製品のお問い合わせは、お買い上げの販売店もしくは下記お客様相談室までご連絡ください。

株式会社 良品計画

お客様相談室でんわ



0120-14-6404

Reclining sofa bed

User Guide

Thank you for your purchase.
Read this User Guide before use to ensure correct assembly and use of the product.
Store this guide in an easily accessible place for future reference.

Table of Contents	Pages
Important Information (Safety Advice)	10 - 11
Parts	12
Part Names	12
Assembly Instructions	13
Directions for Use	14 - 16
Specifications	16
Contact Information	16

Important Information (Safety Advice)

The instructions
must be followed.

This User Guide contains important information for safe use of the product in order to prevent harm to users and other individuals as well as damage to property.

Please note the following contents (indications and graphic symbols) before reading the main contents of this guide and follow the given instructions.

- Explanations of Indications

The extent of injury and damage that may arise when the product is used incorrectly is classified and explained with the following symbols.

 WARNING	Indicates a hazard with a level of risk which, if not avoided, could result in death or serious injury ^{*1} to the user.	 CAUTION	Indicates a hazard with a level of risk which, if not avoided, could result in injury ^{*2} to the user or property damage. ^{*3}
--	---	--	---

- Explanations of Graphic Symbols

Instructions are given in the form of the following graphic symbols.

(Examples of graphic symbols are as follows.)

 Actions that are prohibited.	 Actions that must be taken.
--	---

*1 "Serious injury" indicates injuries, such as blindness, traumas, burns, bone fractures, poisoning, or electric shocks, that have long-term effects and require hospitalisation and/or long-term hospital visits for treatment.

*2 "Injury" indicates traumas or burns that do not require hospitalisation or long-term hospital visits for treatment.




*3 "Property damage" indicates extended damage that involves the house or household property.

 WARNING	
 DON'Ts	• Do not lay small children on the product. Doing so may cause them to suffocate or fall on the floor. • Do not put excessive load only on one side. Doing so may damage the parts and lead to injury. • Do not stand or jump on the product. Doing so may cause tip-over, damage and/or injury. • Do not place on the power cord of an electrical appliance. Doing so may damage the cord, leading to an electric shock or a fire. • Do not leave unnecessary packaging materials within reach of small children. Children may accidentally pull them over their head, cover their mouth and/or nose and suffocate.
 DOs	• When reclining the backrest, lower it slowly while holding onto it. Releasing it makes it fall quickly, and may cause injury and/or product damage. • Make sure that the bedding does not come in contact with lighting fixtures when they are turned on. Otherwise the heat may cause a fire.


 CAUTION	
 DON'Ts	• Do not place any objects above the product. They may fall and cause injury in the event of an earthquake, etc. • Do not use unless fully assembled. Doing so may cause the fixed parts to come off and lead to injury. • Do not attempt to repair or modify. Doing so reduces the strength of the product and may lead to injury. • Do not use if damaged or deformed. Doing so may cause insufficient strength and may lead to injury. • Do not allow more than the specified number of people to use at the same time. Doing so may cause damage, resulting in injury. (See Specifications for details.) • Do not use for other than its intended purpose. Doing so may cause damage, resulting in injury. • Do not place furniture or anything that may tip over near the product. It may tip over and cause injury in the event of an earthquake, etc. • Do not use outdoors. Doing so may cause deformation or severe degradation, resulting in injury. • Do not attach any legs other than MUJI's Wooden Legs (sold separately). Doing so may cause tip-over, damage and/or injury. • Do not put excessive load only on one side (of the legs). Doing so may damage the parts and lead to injury.
 DOs	• Avoid exposure to direct sunlight and heat or air from heating and cooling appliances such as an air conditioner and a heater. Otherwise it may cause warping, distortion, cracking, or discolouration. • Install slightly away from the wall. Doing so prevents air stagnation and condensation on the wall, and eventually mould growth. Avoiding direct contact with the wall also prevents discolouration of the wall paper. • The product must be assembled by at least two adults. Assembling alone may cause tip-over, damage, floor scratches, and/or injury. • Regularly check for any looseness in all parts, and retighten them if looseness is found. Doing so prevents injury and product damage. • Secure enough space and place an underlay when assembling the product. This prevents the floor and other furniture from scratches.

Note (Other Caution)	
	• Use the product on a flat and stable surface. Otherwise it may cause distortion or damage. • Do not use bleach or organic solvents, such as thinner, for cleaning. Doing so may cause discolouration or deformation. • To dispose of the packaging materials, follow the rules implemented by your local government. • Wear gloves during assembly of the product. Doing so prevents unexpected injury.

Parts

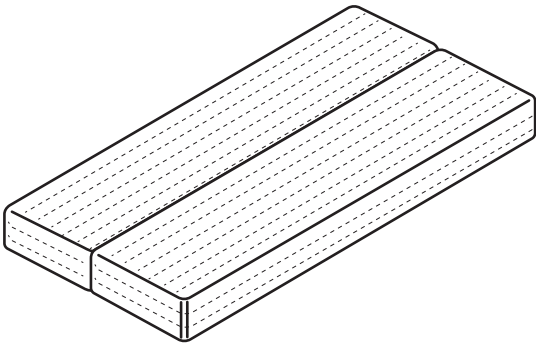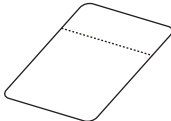Ⓐ Body × 1  The cover is pre-attached. * Wooden legs are not included.	Ⓑ protective tape × 2  Ⓑ protective tape in the provided Ⓒ protective tape storage bag and attach to the hook fastener when moving and putting the cover back on before/after washing, etc. Ⓒ protective tape storage bag × 1 	Wooden Leg (sold separately) × 4  * MUJI Wooden Legs (sold separately) are required.
---	--	---

Part Names

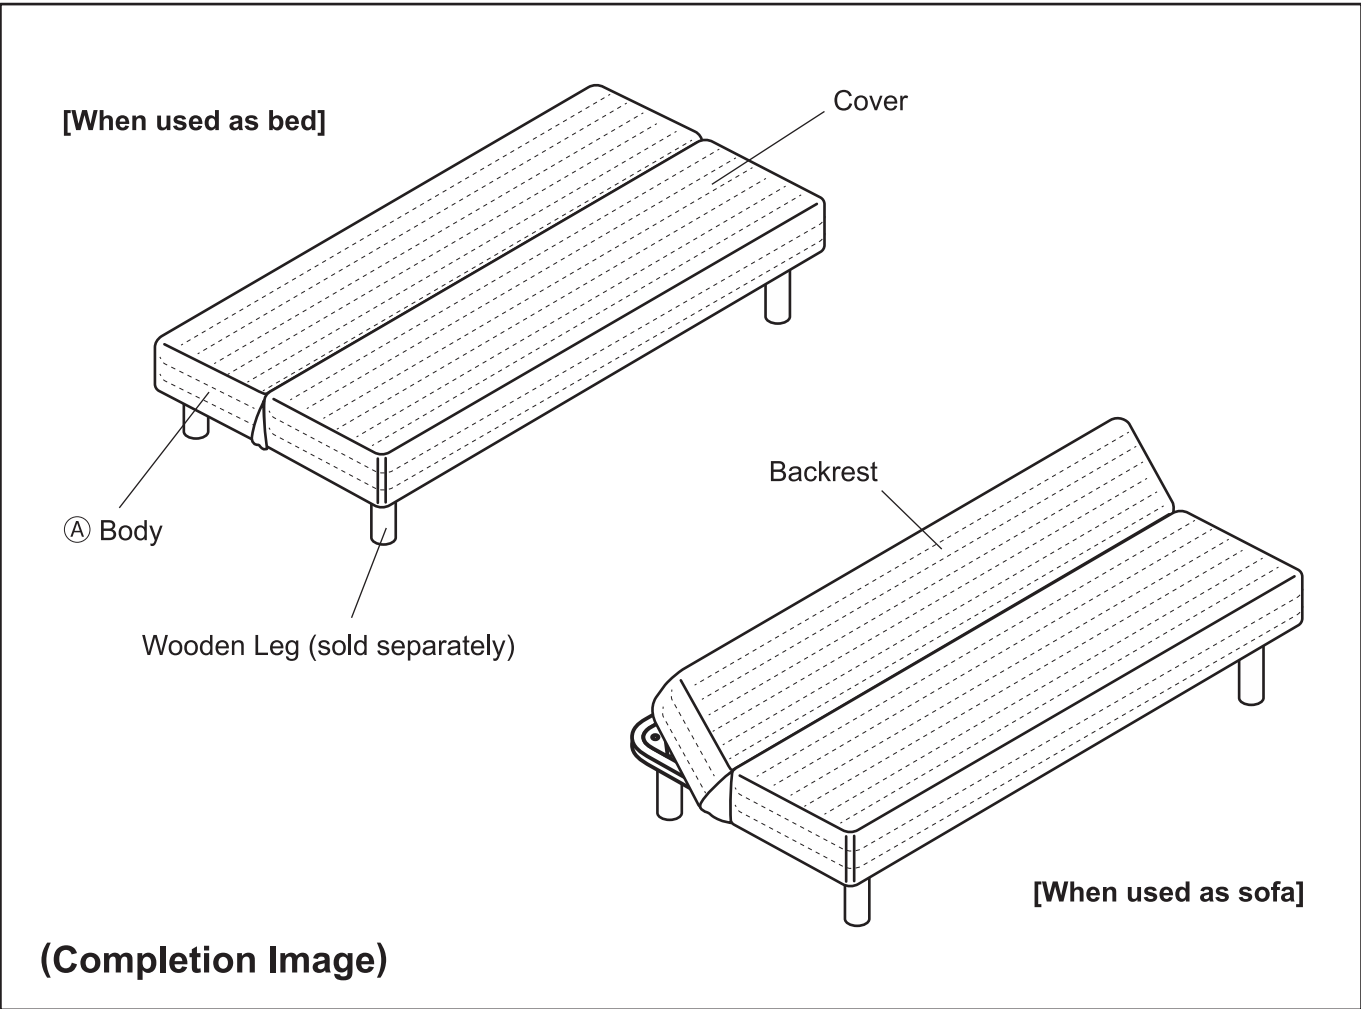

Assembly Instructions



CAUTION

- ❗ The product must be assembled by at least two adults. Assembling alone may cause tip-over, damage, floor scratches, and/or injury.
- ❗ Secure enough space and place an underlay when assembling the product. This prevents the floor and other furniture from scratches.

Assemble the product as close to the installation location as possible to reduce the need to move it afterwards.


1

Turn over the body so the steel frame on the bottom is facing upwards.



CAUTION


- ❗ When turning it over, do not hold the steel frame directly, but hold the bottom of the product with both hands. If the steel frame is held, it may cause damage, resulting in injury.

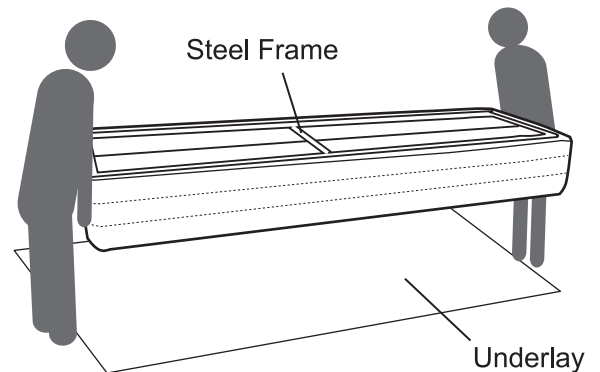

2

Secure the wooden legs (sold separately) firmly into the leg attachment holes located at the corners on the bottom of the body. Hold each leg with both hands and ensure they are straight.

* Wooden legs are sold separately.

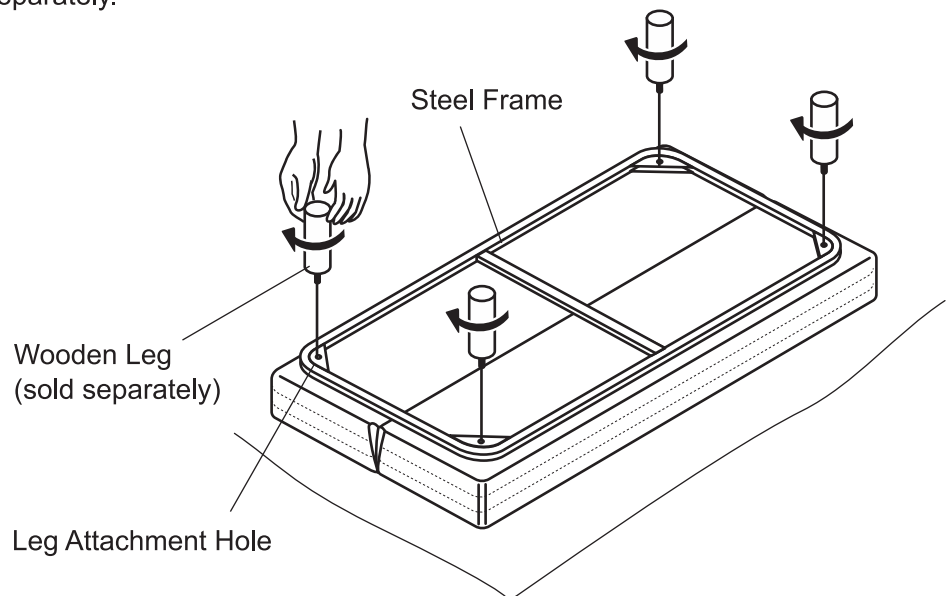


3

After attaching the wooden legs (sold separately), turn over the body again and install it to where it will be used.



CAUTION

- ❗ Make sure to install the product on top of a rug (or any other underlay), or apply felt pads to the bottoms of the legs. This is to prevent the floor from dents and discolouration due to chemical reaction between the coating on the legs and floor when the product is installed in the same location for a long time.

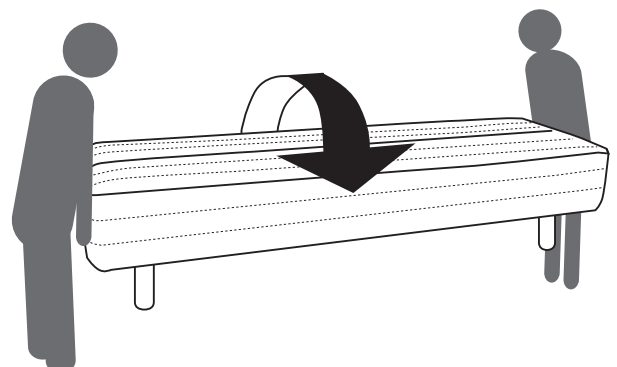

Directions for Use

How to recline the backrest


The backrest can be adjusted manually to 14 angles (including the flat position). It can be adjusted to your desired angle.

Operation

Lift the backrest from its flat position (①).

The angle can be adjusted up to position ②.

The backrest unlocks at position ③ and goes back to its flat position (①).

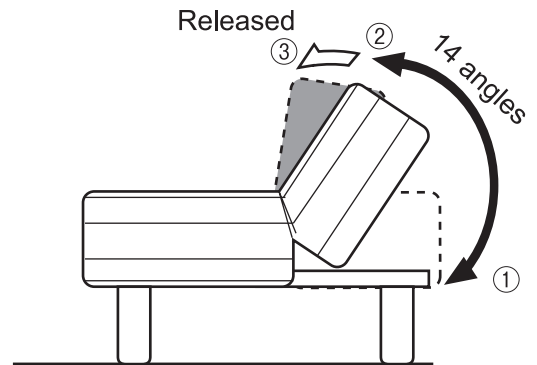

! CAUTION

- ❗ As the backrest is heavy, adjusting the angle of the backrest should be done with two people holding the edges of the backrest. (Fig. 1)
- ❗ When adjusting the angle of the backrest alone is unavoidable, hold the middle part of the backrest, not the edge. Otherwise it may cause tip-over, damage and/or injury. (Fig. 2)
- ❗ Hold the backrest firmly when lifting it. Not doing so may cause losing balance, leading to falling or getting injured.
- ❗ Be careful not to touch the moving parts and gaps when reclining the backrest. Not doing so may cause your hands or fingers to get caught and injured.
- ⊘ Do not recline the backrest in an uncomfortable posture. Forcing it may cause damage in the gears.

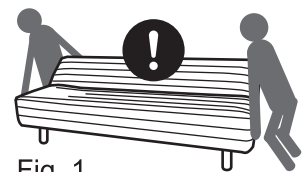


Fig. 1


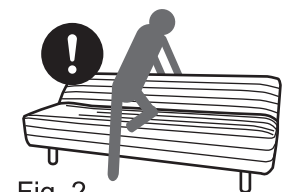


Fig. 2

Precautions


! WARNING

- ⊘ Do not stand or jump on the product, sit on the backrest, or apply load only on one area. Doing so may cause deformation, damage and/or shortening of the life of the spring coils.
- ⊘ Do not stand on the wooden legs or the steel frame on the back side. Doing so may cause damage, resulting in injury.
- ❗ When reclining the backrest, lower it slowly while holding onto it. Releasing it makes it fall quickly, and may cause injury and/or product damage.

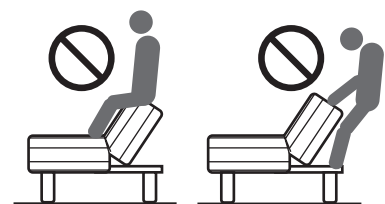

! CAUTION

- ❗ When moving the product, do not drag it on the floor. It must be lifted and carried by at least two adults holding the underside of the steel frame with both hands. This prevents the floor and other furniture from scratches.

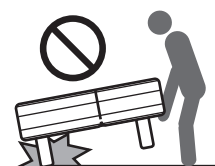

Note (Other Caution)

- Use of a bed pad is recommended.

Directions for Use (Continued)

Removing/Attaching the Cover

Removing the Covers


- 1 Detach the hook-and-loop fasteners on the back of the body.

The cover is secured to the body with hook-and-loop fasteners. Detach the cover once all the hook-and-loop fasteners are detached.


Note (Other Caution)

- Be careful not to tear the fabric when detaching the hook-and-loop fasteners.

Bottom of the body

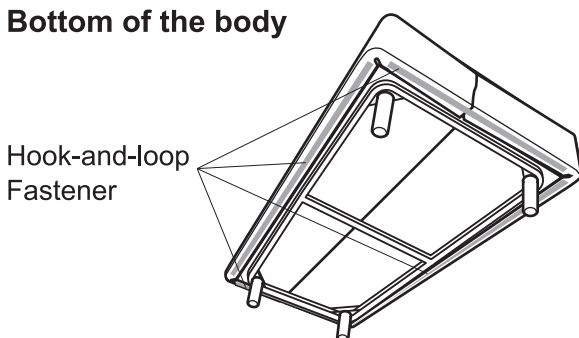


- 2 Lift up the both sides of the cover.

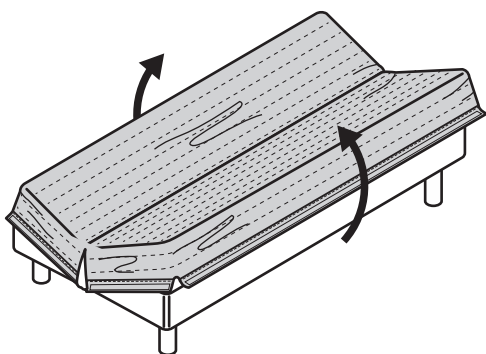

- 3 The body and cover are secured with a fastener as shown below.


Slowly unfasten the fastener to remove the cover from the body.

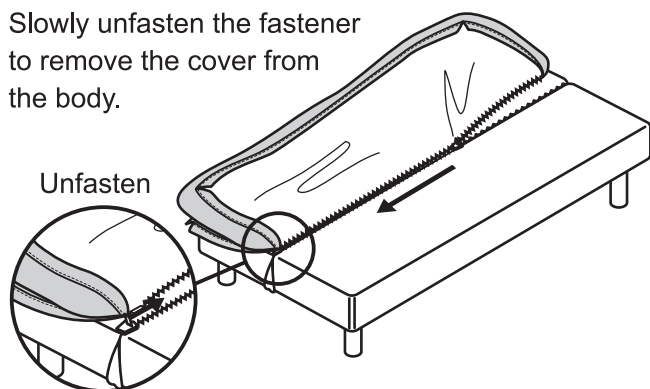


Attaching the Covers

- When attaching the cover, first secure the hook-and-loop fasteners of the front side, and then secure the ones of the backside.
- Be careful of the positions of the hook-and-loop fasteners.


- 1 Slowly fasten the fasteners on the cover and the body.

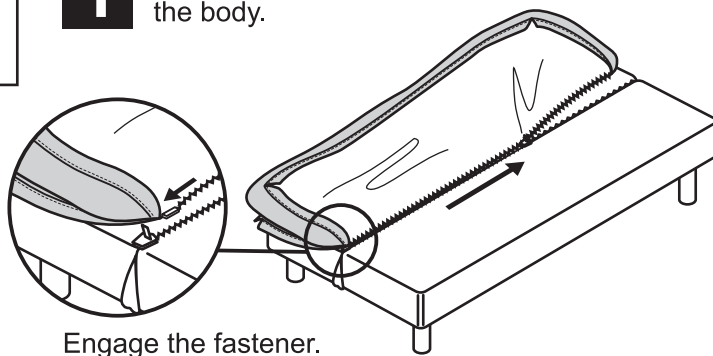

- 2 Gradually attach both sides of the cover to the sofa body, ensuring they fit snugly.

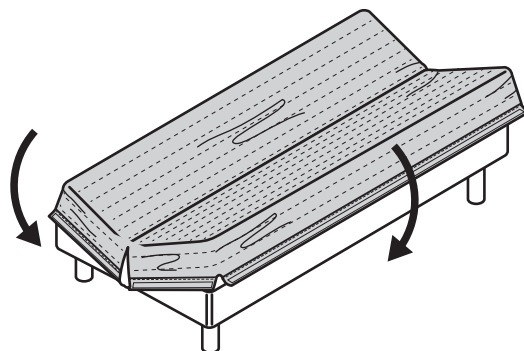

- 3 While smoothing out any wrinkles in the direction of arrows in the image below, put together the hook-and-loop fasteners on the cover with the ones on the body.

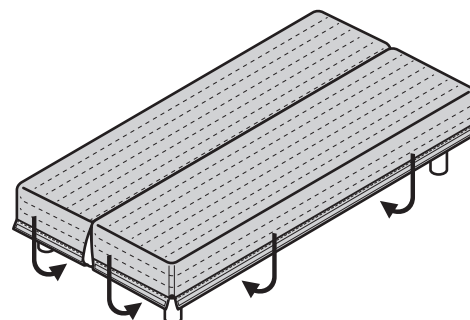

- ⊘ Do not use without the cover. The chip urethane on the main body can be seen through, but it is due to the unique colour of urethane and not due to mould or other issues.
- * The cushioning material will turn yellow due to the characteristic of the material.

Directions for Use (Continued)

Maintenance and Inspection

- Do not use if damaged or deformed.
- Regularly check for any looseness or wobbling in the product, and retighten them if any looseness is found. Doing so prevents injury, product damage and floor scratches.
- Take insecticidal measures immediately if any type of pest is found. If left untreated, pest damage may worsen.

Maintenance for Metal Parts

- For regular cleaning, wipe with a soft, dry cloth.
- If the legs are heavily soiled, clean them with a cloth soaked in 3-5% neutral detergent solution and wipe off any detergent residue with a damp cloth. Then gently wipe with a dry cloth and let the legs dry naturally.

Specifications

Product Name	Reclining sofa bed
JAN	4550512047216
Product Dimension (excluding legs)	W980 × D / L1980 × H230~590 mm *
Seat Height	230 mm *
Product Weight	Approx. 44 kg
Usage	Sofa bed (for 1 or 2 persons)
Material	Steel Frame : Metal (Steel) Seat / Back : Plywood Cushioning Material : Steel Spring (coil spring) Wadding : Urethane Foam Cover (Outer Shell) : 100% Polyester Surface Finish Steel Frame : Epoxy Polyester Resin Power Coating
Place of Origin	CHINA

* The actual height of the product includes the height of wooden legs (sold separately).

Contact Information

For enquiries regarding the product, please contact the store of purchase.