MUJI 無印良品 保存用 製品仕様

木製コンパクトデスク



組立·取扱説明書

この度は本製品をお買い上げいただき、 誠にありがとうございます。 ご使用前に本書をよくお読みいただき、 内容を理解した上で正しくお使いください。 また、本書はいつでも確認できるように 大切に保管してください。

2023年10月18日

名木製コンパクトデスク

約幅800×奥行500

×高さ700 mm

甲板の表面材

天然木(ラバーウッド)

脚部、幕板:天然木(ラバーウッド)

J A N 4550583706272

製品重量 約9.5 kg

耐荷重約20 kg

質

表面加工 ラッカー塗装

原 産 国 ベトナム

途 デスク

移動	につ	117
----	----	-----

ご使用方法

●移動をする際は、引きずらず、落とした りしないでください。製品の破損、床面 へのキズの原因となります。

廃棄について

●廃棄の際は、居住地域の自治体の ルールに従い、処分してください。

お手入れ方法

保守・点検

- ●各部にゆるみがないか定期的に点検 お問い合わせ先 し、ゆるみはじめたらしっかり締め直し てください。ゆるんだまま使用すると、 ケガや破損のおそれがあります。
- ●害虫を発見した場合は、直ちに殺虫や 防虫処理をしてください。放置すると 虫害が拡大するおそれがあります。

木部のお手入れ

- ●塗装面のほこりはやわらかい布また は、はたきで軽く払ってください。
- ●汚れのひどい時は、3~5%に薄めた 中性洗剤を浸した布で汚れを落とし、 その後、水で浸した布で洗剤分をよく ふき取ってください。次に乾いた布で 軽くふいた後、自然乾燥させてください。

お手入れ方法(つづき)

●長時間、化学雑巾を接触させたままに しないでください。変色や表面がはが れる原因となります。

製品のお問い合わせは、お買い上げの 販売店もしくは下記お客様相談室まで ご連絡ください。

株式会社(良品計画)

お客様相談室でんわ 00,0120-14-6404

重要なお知らせ(安全上のご注意)

ここに示した警告・注意事項はお使いになる方や他の人への 危害や損害を未然に防ぐためのものです。必ずお守りください。

○ してはいけない「禁止」 の内容です。

↑ 注意(つづき) 傷害を負う可能性や物的損害が生じるおそれがあるもの

●小さなお子さまのいるご家庭では角部に市販の保護材を使用してくだ

さい。転倒などした場合に、ケガを防いでくれます。

実行しなければ ならない内容です。

│ ↑ 警告 死亡や重傷などに結びつくおそれがあるもの

- ●乳幼児を寝かさないでください。床へ落下したり、窒息したりする原因と なることがあります。
- ●保護者の目の届かない場所で、お子さまだけで使用させないでください。 思わぬケガの原因となります。
- ●製品の上にのらないでください。バランスをくずして転倒する、製品の 破損によりケガをするおそれがあります。特に天板の端には負荷がかかると 安定性を欠くおそれがありますので、絶対に乗らないでください。
- ●製品で電化製品の電源コードを踏まないでください。コードが破損し、 感電や火災の原因となります。
- ●不要になった梱包材は、幼児の手の届くところに置かないでください。 頭からかぶるなどしたときに、口や鼻をふさぎ、窒息するおそれがあります。
- ●フィッティングパーツは幼児の手の届くところには置かないでください。 また、なくさないでください。これらは小さく、誤飲してしまうと窒息などの おそれがあります。
- ●耐荷重を超えて物をのせたり、耐荷重内でも一部に片寄ってのせたりしない でください。変形や破損の原因となり、ケガをするおそれがあります。

↑ 注意 傷害を負う可能性や物的損害が生じるおそれがあるもの


- ●高温多湿な場所に長期間設置しないでください。カビやダニなどが発生し 健康を害することがあります。
- ●指定の用途以外で使用しないでください。破損してケガをするおそれが あります。
- ●組み立てが不完全なまま使用しないでください。固定部分がはずれてケガの 原因になることがあります。 ●修理や改造はしないでください。製品の強度が弱くなり、ケガをするおそれ

| お願い(その他 注意)

- ●使い始めは室内の換気を十分に行ってください。製品に微量にホルムアル デヒドが含まれることがあります。敏感な方や乳児などはアレルギー症状 を起こすおそれがあります。
- ●直射日光を避け、冷暖房具の熱や風に当たらないようにしてください。 反り、割れ、変色の原因になります。
- ●製品に直接熱い物や濡れた物を置かないでください。反りやゆがみ、割れ、 変色、カビなどの原因となります。 ●天然木の上にビニール製品(塩化ビニル樹脂など)を直接、長期間置か
- ないでください。変色や表面がはがれる原因となります。 ●製品の上で筆記などの作業を行う時は、必ずマットなどを敷いてください。
- 天板に凹みやキズがつく原因となります。 ●飲食時は、ランチョンマットやコースターなどを敷いてお使いください。 濡れた物、熱い物が置かれると、変形や変色の原因となります。
- ●塗装やプラスチック部にアルコールを含む消毒剤などが垂れた場合には すぐにふき取ってください。また、過度なアルコール消毒剤でのふき掃除は お避けください。表面が変色や変質することがあります。
- ●組み立ての際は、手袋などをつけて作業してください。思わぬケガの防止

パーツリスト

があります。

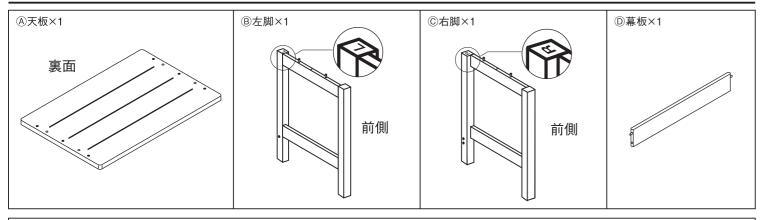

フィッティングパーツ



⑥丸ナット×2








45×25×1 mm








4 mm

※ 予備1つを含んでいます。

組立方法


注意

- ◇組み立てには電動工具は使用しないでください。無理な負荷がかかると、製品破損によりケガをするおそれがあります。
- 組み立て時は、組み立てに必要なスペースを十分に確保し、敷物を敷いてください。床や既存の家具のキズ防止になります。

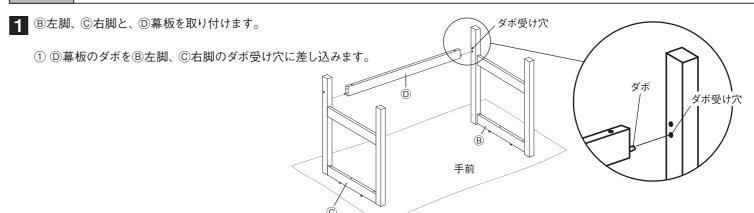


② D幕板のダボとB左脚、C右脚のダボ受け穴を接合した後、 ⑥を⑥に差し込み、お手持ちのマイナスドライバーを **⑤**の溝に合わせ、**⑥**のボルト穴が側面に向くように 調整してください。

③ @に@、@を通し、fを使って@を2か所 ゆるく締め込んでください。



- ① 1 の脚部のダボが合うように A天板を 1 の下に置きます。
- ② @にe、@を通し、fを使って@を 6 か所 ゆるく締め込んでください。
- ③ 全ての (全 8 か所)を取り付けてから ① (1) を使って全ての②を締め込みます。

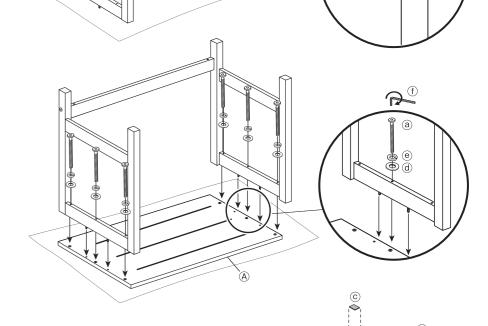

3 2 にⓒを貼ります。

お願い (その他 注意)

貼る前に貼る面のほこりなどの付着物をふき取ってください。付着 物があると粘着力が低下します。貼った後は全体をしっかり押さえて、 ムラなく接着してください。

本体を起こして完成です。

ガタつきがある場合は、12に戻り、

②をゆるめた後、調整しながらf)を使って締め込んでください。

⚠注意

●製品にゆるみやグラつきがないか定期的に点検し、ゆるんで いたらしっかり締め直してください。ケガや製品の破損、床面 へのキズ防止になります。

お手持ちのマイナスドライバーを

®のボルト穴が側面に向くように

⑥の溝に合わせ、

調整してください。

Retain for future reference

Wooden Compact desk



User Guide

Thank you for your purchase

Read this User Guide before use to ensure correct use of the product.

Store this guide in an easily accessible place for future reference

Important Information (Safety Advice)

18 October 2023

Specifications

Product Name	Wooden Compact desk
JAN	4550583706272
Product Dimension	Approx. W800 × D500 × H700 mm
Product Weight	Approx. 9.5 kg
Usage	Desk
Withstand Load	Approx. 20 kg
Material	Surface Material Desktop: Natural Wood (Rubberwood) Leg, Apron: Natural Wood (Rubberwood)
Surface Finish	Lacquer Coating
Place of Origin	VIETNAM

Directions for Use

Moving the Product

• Do not drag or drop when moving the product. Doing so may cause product damage and/or floor scratches.

store of purchase by your local government

prevent harm to the users and other individuals or damage

Care Instructions

Maintenance and Inspection

Maintenance for Wooden Parts

cloth or duster.

• Regularly check for any looseness in all parts, and

retighten them if looseness is found. Continued use in this state may result in injury or damage to the product. • Take insecticidal measures immediately if any type of

pest is found. If left untreated, pest damage may worsen.

• Gently wipe off dust from coated surfaces using a soft

• If the product is heavily soiled, clean it with a cloth

wipe with a dry cloth and let the product dry naturally. • Do not leave a chemically treated cloth in contact with

the product for a long time. Doing so may cause discolouration or peeling of the surface material.

For enquiries regarding the product, please contact the

soaked in 3-5% neutral detergent solution and wipe off any detergent residue with a damp cloth. Then gently

> Actions that must be taken

NARNING Hazards that may lead to death or serious injury

- Do not lay small children on the product. Doing so may cause them to suffocate or fall on the floor.
- Do not let children use without supervision. Doing so may cause unexpected injury.
- Never sit/stand on the product. Doing so may cause you to fall, the product to become unstable and fall over or become damaged, leading to injury. In particular, applying load on the edges of the desktop makes the product
- Do not place on the power cord of an electrical appliance. Doing so may damage the cord, leading to an electric shock or a fire.
- Do not leave unnecessary packaging materials within reach of small children. Children may accidentally pull them over their head, cover their mouth and/or nose and suffocate.
- Do not keep the fitting parts within reach of small children, and do not lose them. Children may accidentally swallow small parts and choke.
- Do not place anything exceeding the withstand load or anything only on one side even if it is within the withstand load. Doing so may cause product deformation or damage and lead to injury.

↑ CAUTION Hazards that may result in injury or damage to the property

 Do not install in locations with high temperatures and humidity for a long time. Doing so may cause mould and mites to grow, leading to health hazards



 Do not use for other than its intended purpose. Doing so may cause damage, resulting in injury.

Do not use unless fully assembled. Doing so may cause the fixed parts to come off and lead to injury.

To dispose of the product, follow the rules implemented

to the property. The instructions must be followed.

The warnings and cautions indicated here are intended to

Actions that are prohibited.

⚠ CAUTION (Continued) Hazards that may result in injury or damage to the property

Contact Information



Do not attempt to repair or modify. Doing so reduces the strength of the product and may lead to injury.




If there are small children, use commercially available corner quards. This is to prevent children from injuring themselves in case they fall against the product.

Note (Other Caution)

- Ventilate the room well at the early stage of use. The product may contain a small amount of Formaldehyde, and those with chemical sensitivity or small children may experience allergic reactions.
- Avoid exposure to direct sunlight and heat or air from heating and cooling appliances such as an air conditioner and a heater. Not doing so may cause warping, cracking and discolouration.
- Do not place hot or wet items directly on the product. Doing so may cause warping, distortion, cracking, discolouration or mould growth
- Do not place plastic products (vinyl chloride resin, etc.) directly on natural wood for a long time. Doing so may cause discolouration or peeling of the surface material
- Be sure to use a mat, etc. when writing or drawing on the product. Not doing so may cause dents or scratches on the desktop
- Lay place mats and coasters on the product when eating. Placing wet or hot items directly on the product may cause deformation or discolouration.
- · Wipe off immediately when alcohol-containing disinfectant is spilled on the coating or plastic parts. Avoid wiping excessively with alcohol disinfectant, Otherwise it may cause discolouration or deterioration of the surface.
- Wear gloves during assembly of the product. Doing so prevents unexpected

Parts

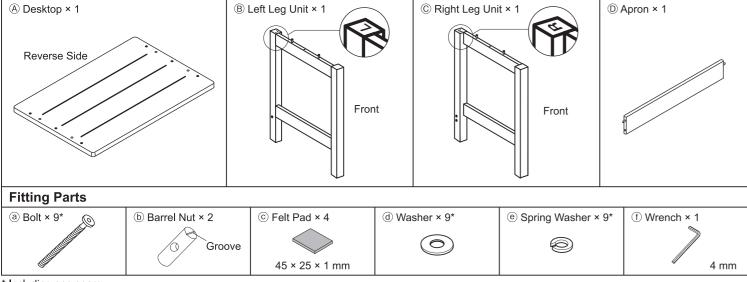

* Including one spare

Assembly Instructions




On Do not use power tools to assemble the product. Placing excessive load on the product may cause it to become damaged and lead to injury. CAUTION Secure enough space and place an underlay when assembling the product. This prevents the floor and other furniture from scratches.


Dowel Hole

1 Attach ® left leg unit, © right leg unit and D apron.

① Insert the dowels on ① apron into the dowel hole on each B left leg unit and C right leg unit.

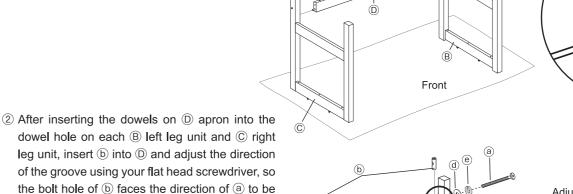


3 Put @ and @ around @, and loosely tighten @ using f (2 places).

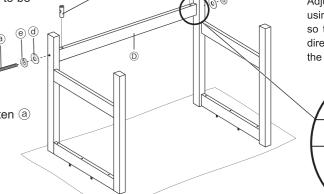

Adjust the direction of the groove using your flat head screwdriver, so the bolt hole of (b) faces the direction of a to be inserted from the side

Dowel Hole

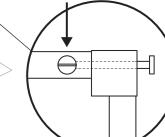


Attach the leg units to A desktop.

inserted from the side.


1) Insert the dowels on the leg units assembled in 1 into the dowel holes on (A) desktop to join 1 and (A) desktop.

2 Put @ and @ around @, and loosely tighten @ using (f) (6 places).

3 Fully tighten all a using () (8 places in total).

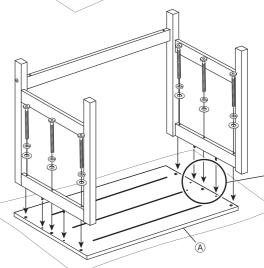



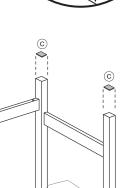

3 Apply © to 2.

Note

Remove any dust and other debris from the attachment surface before attaching ©. It may not adhere well if there is anything on the surface. Press the whole © firmly so it adheres evenly.

Finally, turn the product upright.

If the product wobbles, go back to step 1 and 2 and loosen 3. Then retighten (a) using (f) while adjusting the tightness of each (a).



Regularly check for any looseness or wobbling in the product, and retighten the bolts if any looseness is found. Doing so prevents injury, product damage and floor scratches.

