

スチールパイプテーブル Steel pipe Table

取扱説明書 User Guide

日本語

この度は本製品をお買い上げいただき、誠にありがとうございます。
1ページからお読みください。

English

Thank you for your purchase.
Read these instructions from Page 14.

4550512132233 Steel pipe Table Folding type

スチールパイプテーブル

取扱説明書

この度は本製品をお買い上げいただき、誠にありがとうございます。
ご使用前に本書をよくお読みいただき、内容を理解した上で、正しくお使いください。
また、本書はいつでも確認できるように大切に保管してください。

もくじ	ページ
重要なお知らせ（安全上のご注意）	2 ～ 4
パーツリスト	5
各部の名称	5
ご使用方法	6 ～ 11
お手入れ方法	11
ご使用に際して	12
製品仕様	13
お問い合わせ先	13

重要なお知らせ（安全上のご注意）

必ずお守りください。

本書には、お使いになる方や他の人への危害と財産への損害を未然に防ぎ、安全に正しくお使いいただくために、重要な内容を記載しています。

次の内容（表示・図記号）をよく理解してから本文をお読みになり、記載事項をお守りください。

●表示の説明

誤った使い方をしたときに生じる危害や損害の程度を区分して説明しています。



警告

使用者が死亡または重傷（※1）を負うことが想定される内容です。



注意

使用者が傷害（※2）を負うことや物的損害（※3）が発生することが想定される内容です。

●図記号の説明

お守りいただく内容を次の図記号で説明しています。（次は図記号の例です。）



してはいけない「禁止」の内容です。



実行しなければならない内容です。

※1 重傷とは、失明やケガ、やけど、骨折、中毒、感電などで後遺症が残るもの及び治療に入院、長期の通院を要するものをさします。

※2 傷害とは、治療や入院や長期の通院を要しない、ケガ、やけどをさします。

※3 物的損害とは、家屋、家財にかかわる拡大損害をさします。



警告



禁止

- 保護者の目の届かない場所で、お子さまだけで使用させないでください。思わぬケガの原因となります。
- 製品の上にのらないでください。バランスをくずして転倒する、製品の破損によりケガをするおそれがあります。
- 製品で電化製品の電源コードを踏まないでください。コードが破損し、感電や火災の原因となります。
- 修理や改造はしないでください。製品の強度が弱くなり、ケガをするおそれがあります。
- 不要になった梱包材は、幼児の手の届くところに置かないでください。頭からかぶるなどしたときに、口や鼻をふさぎ、窒息するおそれがあります。



行う


- 本体が破損した場合、直ちに使用を中止してください。破損したまま使用すると、ケガをするおそれがあります。

⚠ 注意




禁止

- 耐荷重を超えて物をのせたり、耐荷重内でも一部に片寄ってのせたりしないでください。変形や破損の原因となり、ケガをするおそれがあります。
- 一部(の脚)に片寄る過度な荷重は加えないでください。部材の破損の原因となり、ケガをするおそれがあります。
- 移動させる際は、製品を引きずらないでください。製品破損や床面へのキズ、ケガしたりするおそれがあります。
- 移動する際は、脚を持って運ばないでください。ベルトから脚がはずれたり、製品が破損したりして、ケガをするおそれがあります。
- 保管時に製品の上に乗ったり、落としたりしないでください。変形や破損によりケガのおそれがあります。
- 高温多湿な場所に長期間設置しないでください。カビやダニなどが発生し、健康を害することがあります。
- 組み立てが不完全なまま使用しないでください。固定部分がはずれてケガの原因になることがあります。
- 屋外では使用しないでください。変形や著しい劣化が起こり、ケガをする原因となります。
- 指定の用途以外で使用しないでください。破損してケガをするおそれがあります。
- バックルがしっかり固定できていない時は、使用しないでください。ケガをするおそれがあります。

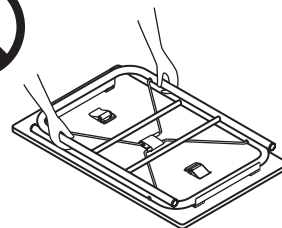

行う

- 平らで安定した場所に設置してください。不安定な場所での使用は、製品のゆがみ、破損の原因になることがあります。
- 使い始める時は、室内の換気を十分にしてください。接着剤などに含まれるホルムアルデヒドが残っている可能性があり、化学物質に敏感な体質の方や乳幼児などアレルギー症状をおこすおそれがあります。
- 長時間ご使用の場合バックルのロックにゆるみなどがいないか確認し、ゆるんでいたらしっかり固定してからご使用ください。使用中にたたまれてケガをするおそれがあります。
- 各部にグラつきや破損がないか定期的に点検し、異常が認められたら使用を中止してください。そのまま使用すると、ケガや破損の原因となります。
- 組み立てや設置の際には指や手をはさまないようにしてください。ケガの原因になります。
- 小さなお子さまのいるご家庭では角部に市販の保護材を使用してください。転倒などした場合に、ケガを防いでくれます。
- 使用時は、脚底面にフェルトなどの保護材を貼ったり、敷物を敷いたりしてご使用ください。床面へのキズ防止になります。
- 移動させる際は、天板の上のものを移動させてから、大人2人以上で同時に天板を持ち上げて運んでください。また、部屋を移動させるなど長い距離を移動させる場合は、脚を折り畳んでから運んでください。床や既存の家具のキズ防止になります。
- 手袋をして作業をしてください。ケガの防止になります。

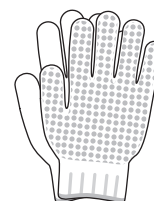


お願い (その他 注意)

- 直射日光や冷暖房器具などの熱や風が製品に直接当たらないようにしてください。反りやゆがみ、割れ、変色などの原因になります。
- 暖房器具使用時は、室内温湿度を適正に保ってください。冬場などの暖房器具による室内の極端な乾燥は、天然木材の割れや反りの原因となります。
- テーブルの上で筆記などの作業を行う時は、必ずマットなどを敷いてください。天板に凹みやキズがつく原因となります。
- 飲食時は、ランチョンマットやコースターなどを敷いてお使いください。濡れた物、熱い物が置かれると、変形や変色の原因となります。
- 製品に直接熱い物や濡れた物を置かないでください。反りやゆがみ、割れ、変色、カビなどの原因となります。
- 製品の上で陶器など底のざらついた物を直接置いて引きずらないでください。天板がキズがつく、凹む原因となります。
- 突板や天然木の上にビニール製品（塩化ビニル樹脂など）を直接、長期間置かないでください。変色や表面がはがれる原因となります。
- 長時間、化学雑巾を接触させたままにしないでください。変色や表面がはがれる原因となります。
- 濡れたままにしないでください。そのままにしておくと脚部にサビが生じる原因となります。
- シンナーなどの有機溶剤や漂白剤などの薬剤でお手入れしないでください。変色や変形の原因となります。
- 塗装やプラスチック部にアルコールを含む消毒剤などが垂れた場合にはすぐにふき取ってください。また、過度なアルコール消毒剤でのふき掃除はお避けください。表面が変色や変質することがあります。
- 組み立て時は、組み立てに必要なスペースを十分に確保し、敷物を敷いてください。
- 廃棄の際は、居住地域の自治体のルールに従い、処分してください。


パーツリスト・各部の名称

本体 ×1

(折りたたみ時)

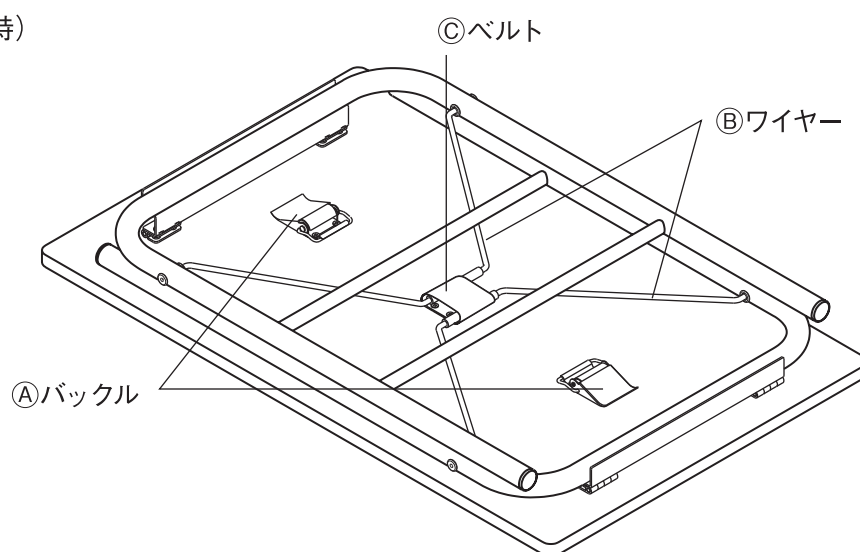

(使用時)

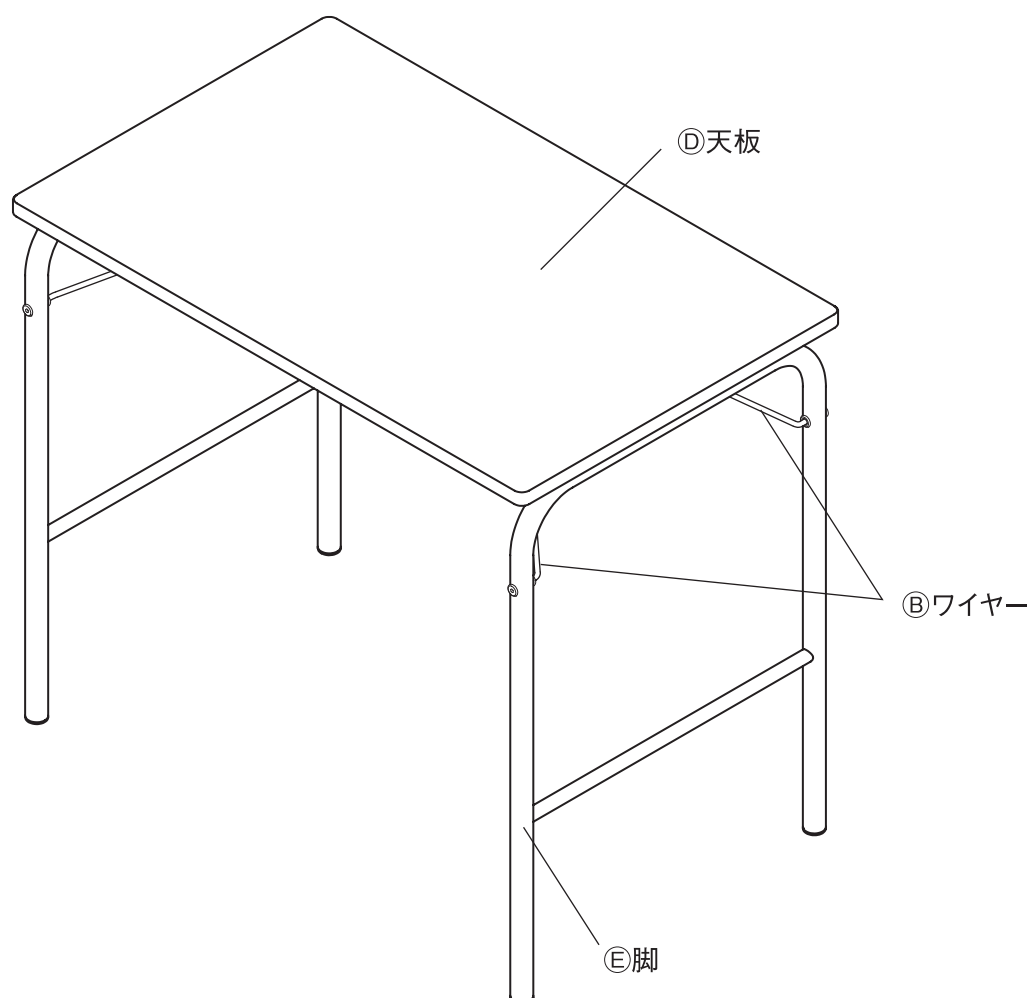

(完成図)

ご使用方法



注意

❗ 組み立て時は、組み立てに必要なスペースを十分に確保し、敷物を敷いてください。床や既存の家具のキズ防止になります。

脚部の開き方について


1

本体を裏返しにし、④天板を下にして置き、⑥ワイヤーを留めている中央の③ベルトをはずしてください。



注意


❗ ベルトからワイヤーをはずしたら、ベルト自身を丸めるように面ファスナーで留めてください。面ファスナーが貼りついて、ストッキングなどをキズつける原因となります。

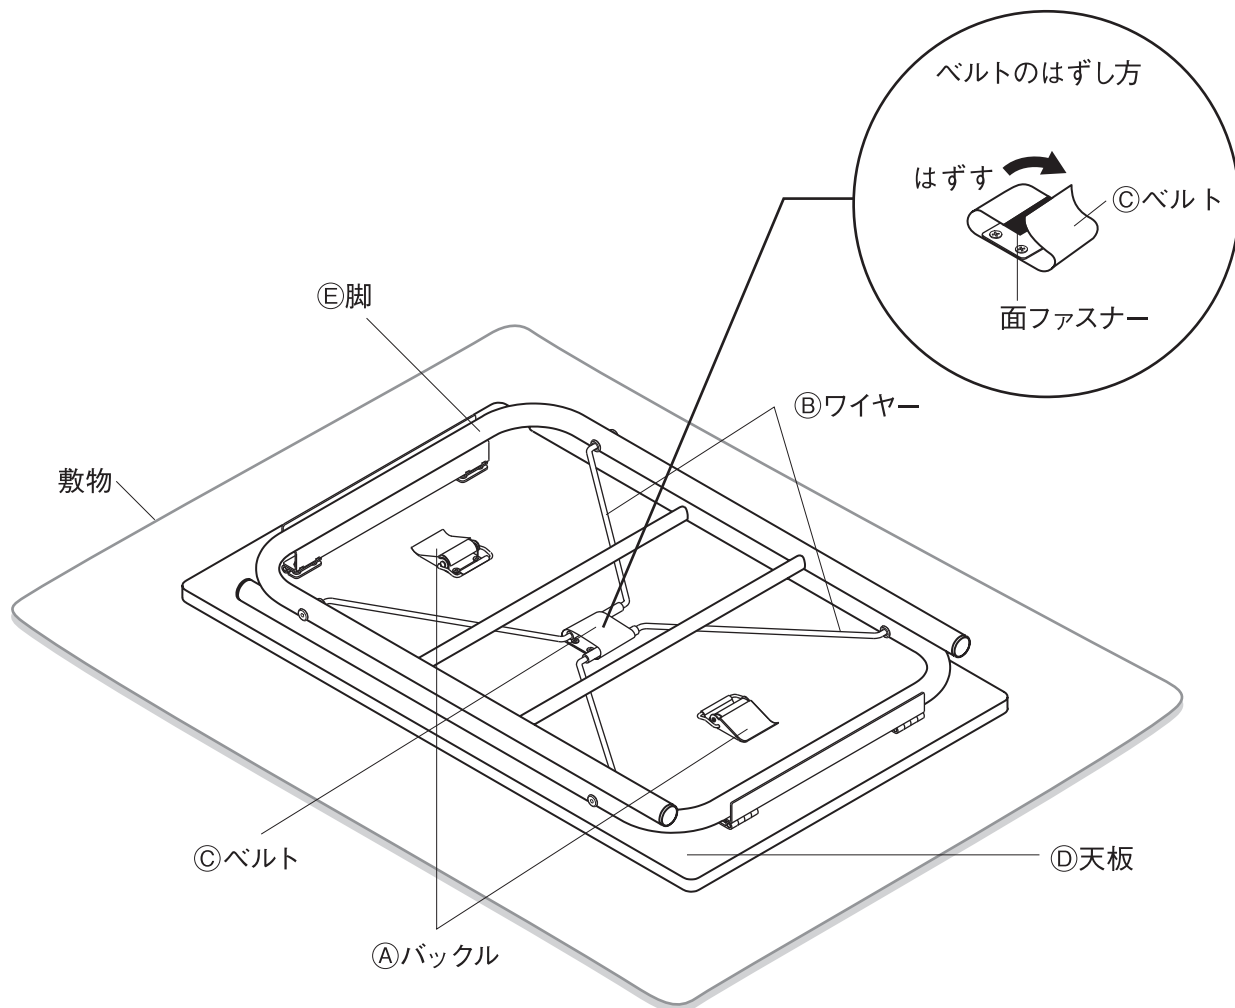

ご使用方法（つづき）

2



上側の⑤脚の先端を手で持ち、外側90度以上に立ててください。

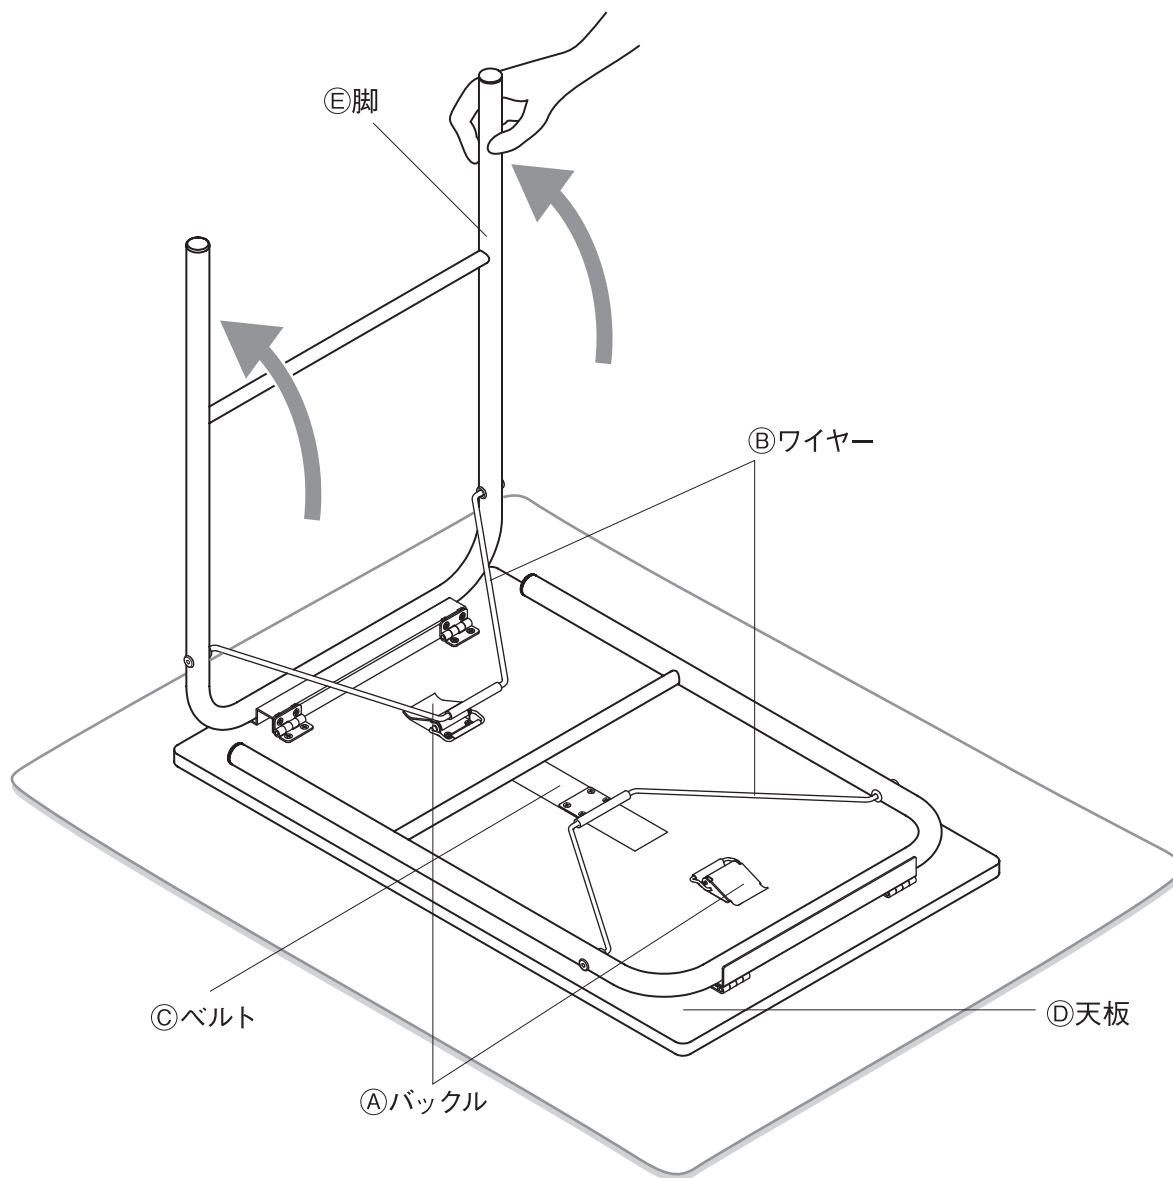

⚠
注意

⊘ 脚の開閉時には、可動部に触れないでください。
手や指などはさみ、ケガをするおそれがあります。

❗ 手袋をして作業をしてください。
ケガの防止になります。

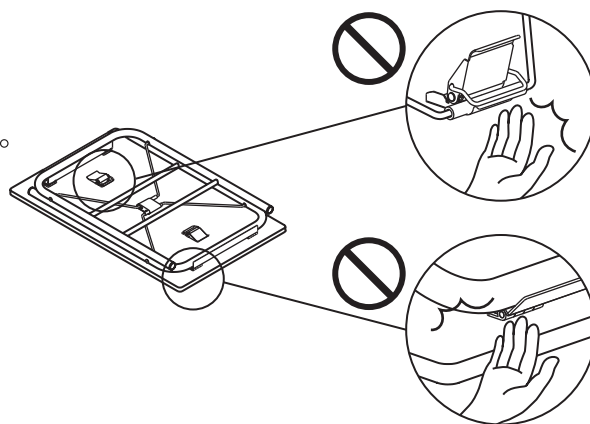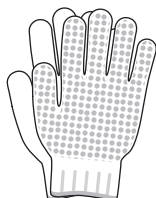

ご使用方法（つづき）

3


「バックルの留め方について」を参照してバックルを開き、①バックルのくぼみ位置に②ワイヤーをはさみ込み、バックルを留めてください。

お願い
(その他 注意)



ワイヤーはバックルの内側のくぼみにはさんで掛けてください。外側には絶対に掛けないでください。バックルの破損の原因となります。



内側

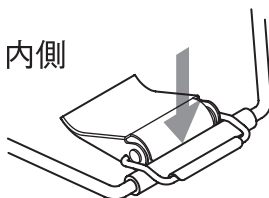


外側

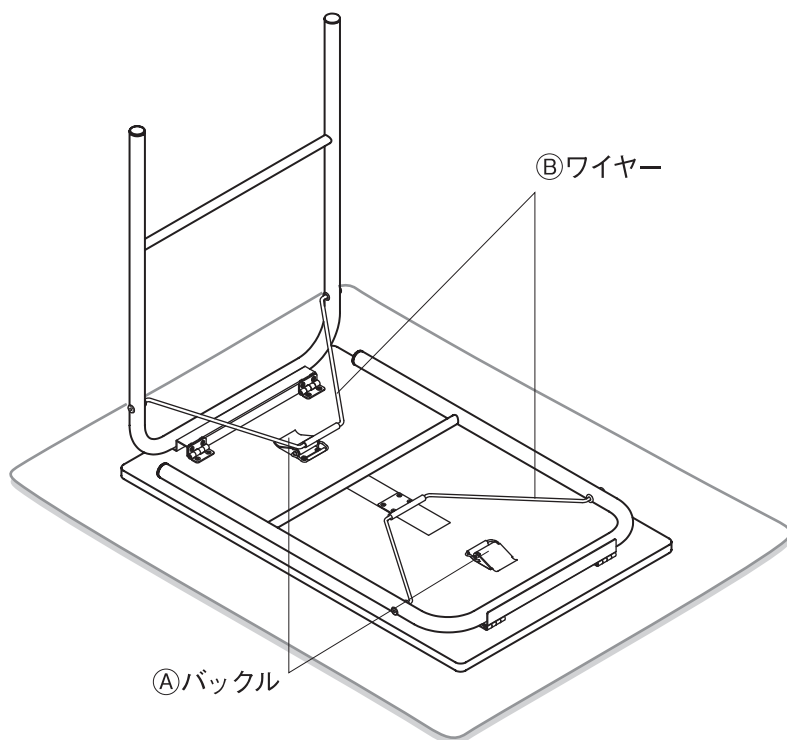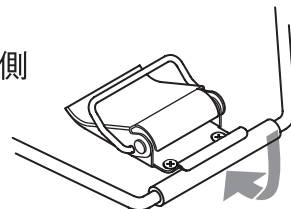

お願い
(その他 注意)


ワイヤーをバックルに装着する際、きつく感じられる場合は、下図のように脚部を矢印の方向（外側）に軽く押しながらワイヤーを押し込み装着してください。金具類は、横揺れを防ぐため、取り付けの設定をきつめにしています。

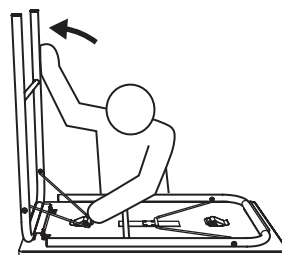

①バックルの留め方について


1

①バックルの②を持ち上げ①をはずしてください。

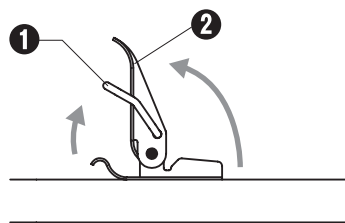


2

①バックルのくぼみに②ワイヤーをはめ込みます。

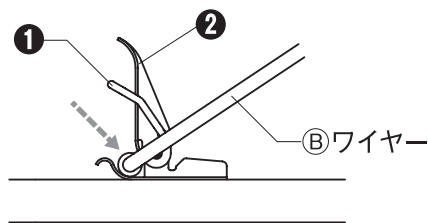


3

はじめに①をかけてから②を押し留めてください。

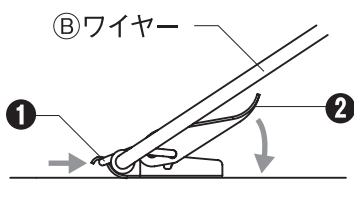

4

しっかりロックされているか確認してください。

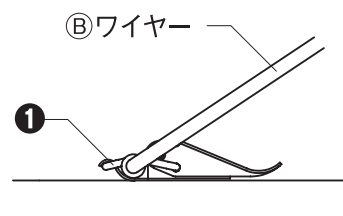


ご使用方法（つづき）



注意

- ⓪ 脚の開閉時、ロックがされていない状態では脚をはなさないでください。途中で手をはなすと、脚が倒れ、ケガをするおそれがあります。

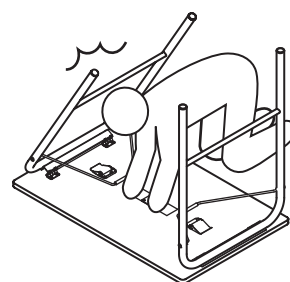

4


もう一方の下側の脚も立てて、**3**と同様の手順でバックルを留めてください。

5

本体をゆっくりと起こしてください。

お願い
(その他 注意)

脚がしっかり固定されているか確認してください。脚が内側に傾いている場合は、正しく固定されていない可能性がありますので、やり直してください。
※多少、外側に傾いている場合は、製品特性上、問題ございません。

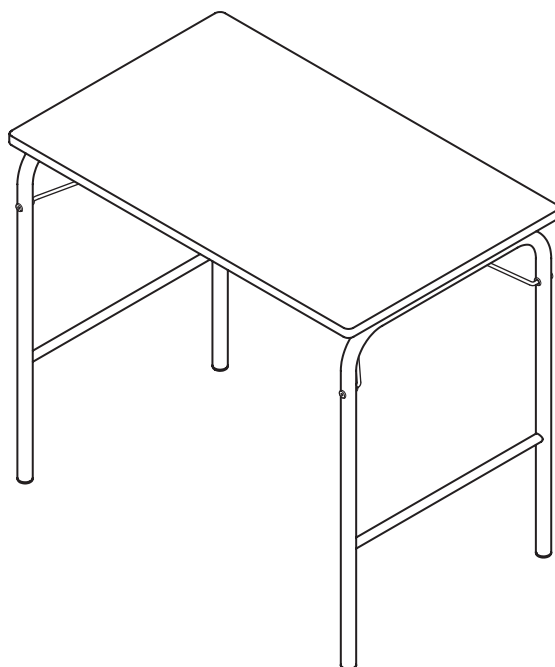

完成



注意


- ❗ 長時間ご使用の場合、**④**バックルのロックにゆるみなどがいないか確認し、ゆるみが生じている場合はしっかり固定してからご使用ください。使用中に**⑤**脚がたたまれてケガをするおそれがあります。
- ❗ バックルがしっかり固定できていない場合は、ご使用を中止してください。ケガをするおそれがあります。

ご使用方法（つづき）


脚部の折りたたみ方について

「脚部の開き方について」の逆手順を行います。

- ① はじめに、敷物などを敷いた上に本体を裏返しにし、④天板を下にして置きます。
- ② たたんだ際に下になる（下図点線で示した金具がないほう）⑤脚を持って①バックルをはずし、ゆっくりと折りたたみます。その後、もう一方の脚も同様にたたみます。
- ③ ③ベルトの面ファスナーを開き、②ワイヤーをしっかり留めてください。

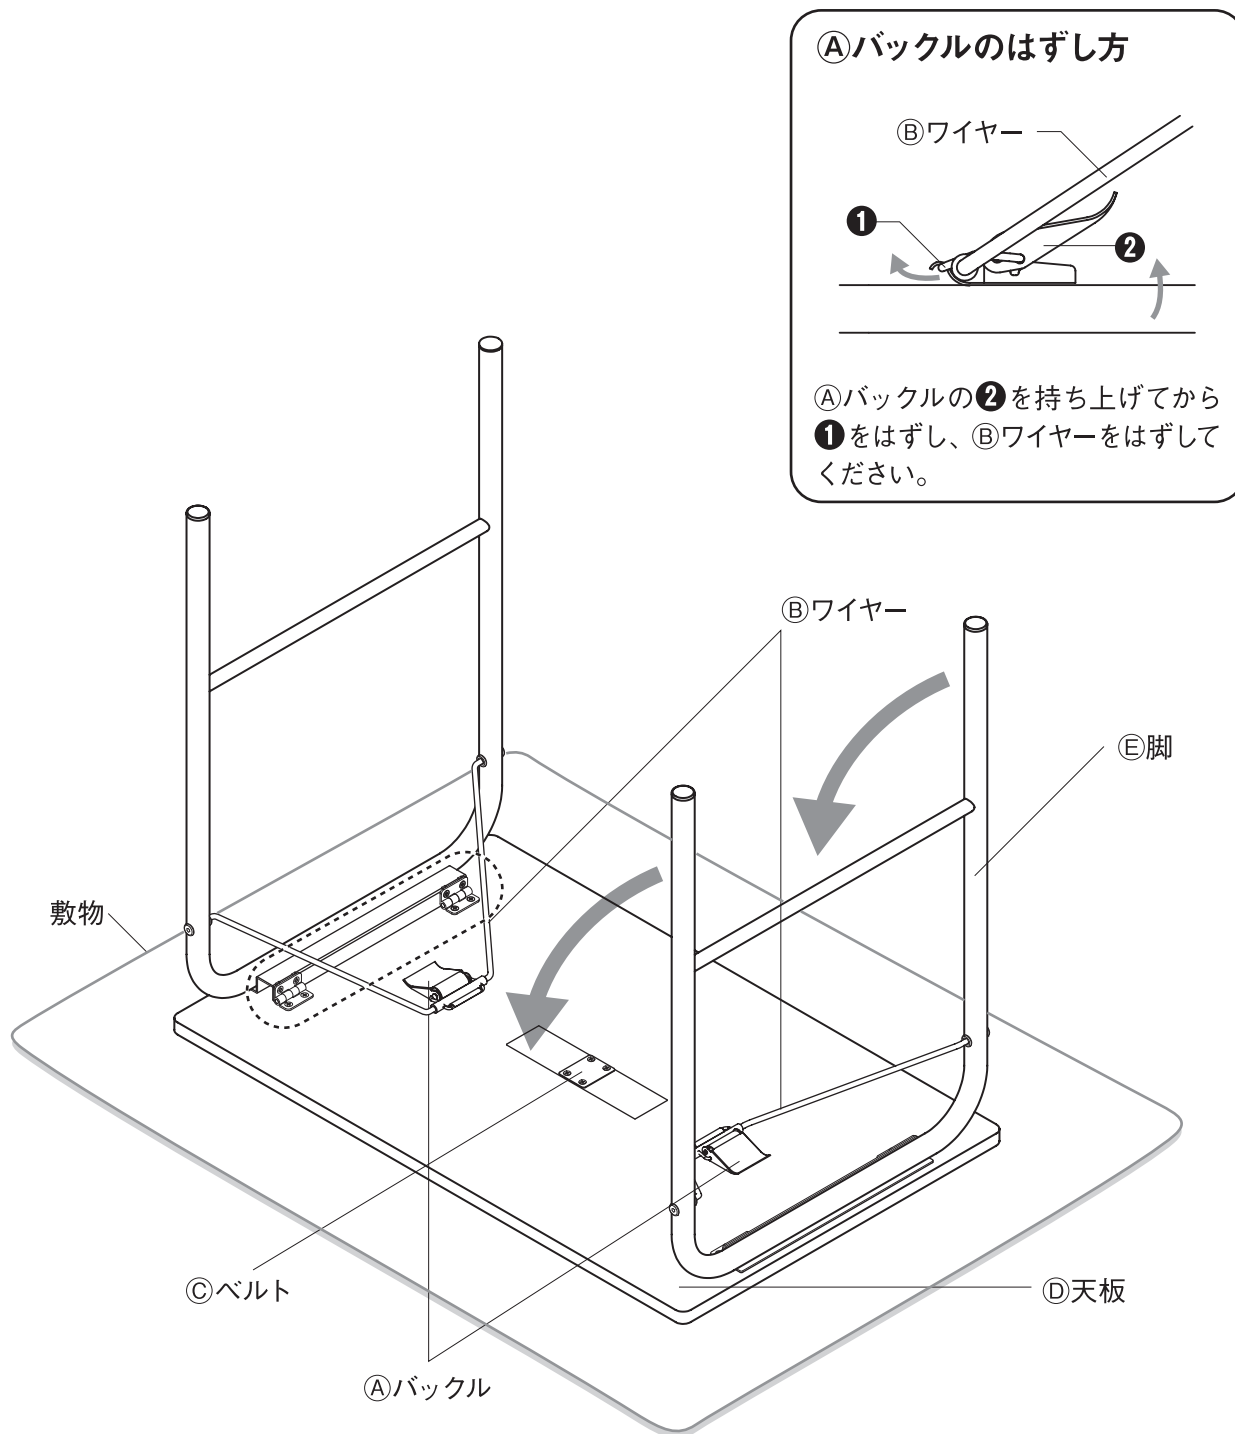
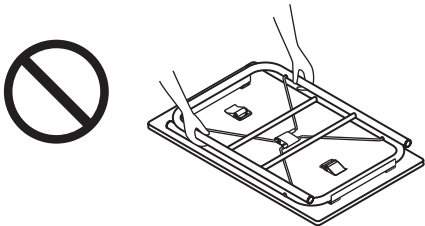


ご使用方法（つづき）

お願い (その他 注意)	<ul style="list-style-type: none">●直射日光や冷暖房器具などの熱や風が製品に直接当たらないようにしてください。反りやゆがみ、割れ、変色などの原因になります。●製品に直接熱い物や濡れた物を置かないでください。反りやゆがみ、割れ、変色、カビなどの原因となります。	
-------------------------	---	---

移動について

- 移動させる際は、天板の上のものを移動させてから、大人2人以上で同時に天板を持ち上げて運んでください。また、部屋を移動させるなど長い距離を移動させる場合は、脚を折り畳んでから運んでください。床や既存の家具のキズ防止になります。

 注意	<ul style="list-style-type: none">○移動する際は、脚を持って運ばないでください。ベルトから脚がはずれたり、製品が破損したりして、ケガをするおそれがあります。	
---	---	--

廃棄について

- 廃棄の際は、居住地域の自治体のルールに従い、処分してください。

お手入れ方法

保守・点検

- 各部にグラつきや破損がないか定期的に点検し、異常が認められたら使用を中止してください。そのまま使用すると、ケガや破損の原因となります。
- 破損や変形した状態では使用しないでください。
- 害虫を発見した場合は、直ちに殺虫や防虫処理をしてください。放置すると虫害が拡大するおそれがあります。

木部のお手入れ

- 塗装面のほこりはやわらかい布または、はたきで軽く払ってください。
- 汚れのひどい時は、3～5%に薄めた中性洗剤を浸した布で汚れを落とし、その後、水で浸した布で洗剤分をよくふき取ってください。次に乾いた布で軽くふいた後、自然乾燥させてください。
- 長時間、化学雑巾を接触させたままにしないでください。変色や表面がはがれる原因となります。

金属部のお手入れ

- 毎日のお手入れはやわらかい布で乾ぶきしてください。
- 汚れのひどい時は、3～5%に薄めた中性洗剤を浸した布で汚れを落とし、その後、水で浸した布で洗剤分をよくふき取ってください。次に乾いた布で軽くふいた後、自然乾燥させてください。

ご使用に際して

天然木について

- 本製品は天然木（突板）を使用しているため、製品ごとに天然木材特有の個体差（木目や色合いなど）がありますが、あらかじめご了承ください。
- 天然木（突板）は下記の条件により、割れや反りなどが発生することがありますので、ご注意ください。
 - ・直射日光の当たる場所でのご使用は出来る限りお避けください。どうしても直射日光が当たる場合は、カーテンなどで出来る限り避けてご使用ください。
 - ・冷暖房器具の近くでのご使用は出来る限り避け、必ず冷暖房の風が直接当たらないようにしてください。
 - ・特に冬の暖房による室内の極端な乾燥は、天然木の割れ、反りを発生させる原因となります。

ホルムアルデヒドの対策について

- ホルムアルデヒドとは
シックハウス症候群の原因物質の一つといわれています。常温で気化する、無色で刺激臭のある化学物質で、家具はもとより建築資材・壁紙を貼る接着剤などに含まれています。少しずつ放散されるため、ホルムアルデヒドに汚染された室内に長時間いると目がチカチカしたり、喉に不快な刺激を感じたりすることがあります。濃度が高いと呼吸困難を起こす場合もあります。
- お部屋の換気について



注意

❗ 家具を設置の際は、室内の換気を十分にしてください。
化学物質に敏感な体質の方や乳幼児などアレルギー症状を起こすことがあります。

ホルムアルデヒドは空気中に放散されやすいので、普段からこまめに室内の換気を行うようにしてください。特に複数の家具を同時に設置した場合は、窓をできるだけ広く開け、十分な換気を行ってください。室内の温度が高くなると、ホルムアルデヒドは多く放散される傾向がありますので、夏季に室内を長時間閉め切っている場合は、特に換気をするようにご注意ください。換気効率をあげるため複数の窓を開ける、換気扇、扇風機、サーキュレーターの利用をおすすめします。

- 化学物質に敏感な体質のお客さまへ
ホルムアルデヒドに限らず、シックハウス症候群に該当する化学物質の許容量には個人差があり、室内濃度指針値（健康上望ましいとされるホルムアルデヒドの室内濃度値）以下の濃度であっても反応する体質の方もいらっしゃいます。現段階の無印良品の家具においても、ホルムアルデヒド放散量の少ない材料を極力使用しておりますが、まったく放散されないわけではありませんので、ご注意ください。
- ホルムアルデヒド吸着・分解シートについて
狭い空間ではホルムアルデヒドは逃げ場がなく、材料に再吸着する可能性がありますので、お手元に届くまで少しでもホルムアルデヒド濃度を低下させるために、無印良品の家具には、ホルムアルデヒド吸着・分解シートを同梱しています。
※同梱の「ホルムアルデヒド吸着・分解シート」は効力が落ちておりますので、燃えるゴミとして処分してください。

製品仕様

品 名	スチールパイプテーブル
規 格	折りたたみ式
J A N	4550512132233
製 品 寸 法	幅800×奥行500×高さ700 mm 折りたたみ時の高さ約77 mm
製 品 重 量	約8 kg
耐 荷 重	15 kg
用 途	テーブル
材 質	甲板の表面材：天然木化粧合板（シナ材突板） 脚 部：金属（鋼） 表 面 加 工 天板：ウレタン樹脂塗装 脚部：エポキシ樹脂粉体塗装
原 産 国	中国

お問い合わせ先

製品のお問い合わせは、お買い上げの販売店もしくは下記お客様相談室までご連絡ください。

株式会社 良品計画

お客様相談室でんわ
 **0120-14-6404**

Steel pipe Table

User Guide

Thank you for your purchase.
Read this User Guide before use to ensure correct use of the product.
Store this guide in an easily accessible place for future reference.

Table of Contents	Pages
Important Information (Safety Advice)	15 - 17
Parts	18
Part Names	18
Directions for Use	19 - 24
Care Instructions	24
General Notes	25
Specifications	26
Contact Information	26



Important Information (Safety Advice)

The instructions must be followed.

This User Guide contains important information for safe use of the product in order to prevent harm to users and other individuals as well as damage to property.

Please note the following contents (indications and graphic symbols) before reading the main contents of this guide and follow the given instructions.





- Explanations of Indications
The extent of injury and damage that may arise when the product is used incorrectly is classified and explained with the following symbols.





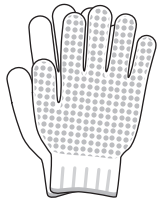
 WARNING Indicates a hazard with a level of risk which, if not avoided, could result in death or serious injury ^{*1} to the user.	 CAUTION Indicates a hazard with a level of risk which, if not avoided, could result in injury ^{*2} to the user or property damage ^{*3} .
---	--

- Explanations of Graphic Symbols
Instructions are given in the form of the following graphic symbols.
(Examples of graphic symbols are as follows.)

 Actions that are prohibited.	 Actions that must be taken.
--	---

- *1 "Serious injury" indicates injuries, such as blindness, traumas, burns, bone fractures, poisoning, or electric shocks, that have long-term effects and require hospitalisation and/or long-term hospital visits for treatment.
- *2 "Injury" indicates traumas or burns that do not require hospitalisation or long-term hospital visits for treatment.
- *3 "Property damage" indicates extended damage that involves the house or household property.

 WARNING	
 DON'Ts	<ul style="list-style-type: none">• Do not let children use without supervision. Doing so may result in unexpected injury.• Do not sit/stand on the product. Otherwise it may cause you to fall, the product to become unstable and fall over or become damaged, leading to injury.• Do not place on the power cord of an electrical appliance. Doing so may damage the cord, leading to an electric shock or a fire.• Do not attempt to repair or modify. Doing so reduces the strength of the product and may lead to injury.• Do not leave unnecessary packaging materials within reach of small children. Children may accidentally pull them over their head, cover their mouth and/or nose and suffocate. 
 DOs	<ul style="list-style-type: none">• Stop use immediately if the product is damaged. Not doing so may cause injury.
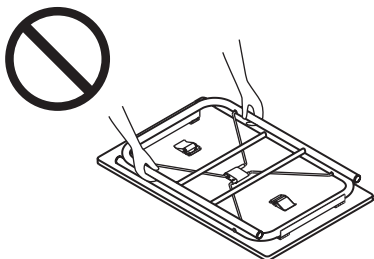
<div>  CAUTION </div>	
<div>  <p>DON'Ts</p> </div>	<ul style="list-style-type: none"> Do not place anything exceeding the withstand load or anything only on one side even if it is within the withstand load. Doing so may cause product deformation or damage and lead to injury. Do not put excessive load only on one side (of the legs). Doing so may damage the parts and lead to injury. Do not drag to move the product. Doing so may cause product damage, floor scratches and/or injury. Do not hold the legs to move the product. Doing so may cause the legs to come off the belt or the product to become damaged and result in injury. Do not handle the product roughly when stored, such as climbing on it or dropping it. Doing so may cause deformation or damage to the product, resulting in injury. Do not install in locations with high temperatures and humidity for a long time. Doing so may cause mould and mites to grow, leading to health hazards. Do not use unless fully assembled. Doing so may cause the fixed parts to come off and lead to injury. Do not use outdoors. Doing so may cause deformation or severe degradation, resulting in injury. Do not use for other than its intended purpose. Doing so may cause product damage and lead to injury. Do not use if the buckles are not securely locked. Otherwise it may cause injury. <div>  </div>
<div>  <p>DOs</p> </div>	<ul style="list-style-type: none"> Use on a flat and stable surface. Otherwise it may cause product distortion or damage. Ventilate the room well at the early stage of use. Formaldehyde contained in adhesive may still remain, and those with chemical sensitivity and small children may experience allergic reactions. Check that there are no loose buckles after using for a long time, and retighten them if any looseness is found. Otherwise the product may become folded during use, resulting in injury. Regularly check for any looseness or damage in all parts, and stop use if any abnormalities are found. Continued use under this condition may cause injury or damage. Be careful not to get your fingers and hands caught when assembling or installing the product. Not doing so may cause injury. If there are small children, attach commercially available corner guards. This is to prevent children from injuring themselves in case they fall against the product. Apply felt pads or any protective materials to the bottoms of the legs, or use an underlay. Doing so prevents scratches on the floor. When moving the product, remove the items on the tabletop, and then carry it by holding the tabletop together with at least two adults. Also be sure to fold the legs when moving the table to another room or other distant locations. This prevents the floor and other furniture from scratches. Wear gloves when unfolding/folding the table. Doing so prevents injuries. <div>  </div>


Note (Other Caution)

- Do not expose to direct sunlight and heat or air from heating and cooling appliances such as an air conditioner and a heater. Doing so may cause warping, distortion, cracking, or discolouration.
- Keep the room at an appropriate temperature and humidity level when using a heating appliance. Using heating appliances in winter may cause the room to become extremely dry, resulting in cracking or warping of natural wood.
- Be sure to use a mat, etc. when writing or drawing on the table. Not doing so may cause dents or scratches on the tabletop.
- Lay place mats and coasters on the product when eating. Placing wet or hot items directly on the product may cause deformation or discolouration.
- Do not place hot or wet items directly on the product. Doing so may cause warping, distortion, cracking, discolouration or mould growth.
- Do not place and drag items with rough bottom surfaces, such as ceramics, directly on the product. Doing so may cause scratches and dents on the tabletop.
- Do not place plastic items (vinyl chloride resin, etc.) directly on veneer or natural wood for a long time. Doing so may cause discolouration or peeling of the surface material.
- Do not leave a chemically treated cloth in contact with the product for a long time. Doing so may cause discolouration or peeling of the surface material.
- Do not leave wet. Leaving it wet can cause rust to develop on the legs.
- Do not use bleach or organic solvents, such as thinner, for cleaning. Doing so may cause discolouration or deformation.
- Wipe off immediately when alcohol-containing disinfectant is spilled on the coating or plastic parts. Do not excessively wipe with alcohol disinfectant. Doing so may cause discolouration or deterioration of the surface.
- Secure enough space and place an underlay when assembling the product.
- To dispose of the product, follow the rules implemented by your local government.


Parts / Part Names

Body × 1

(When folded)

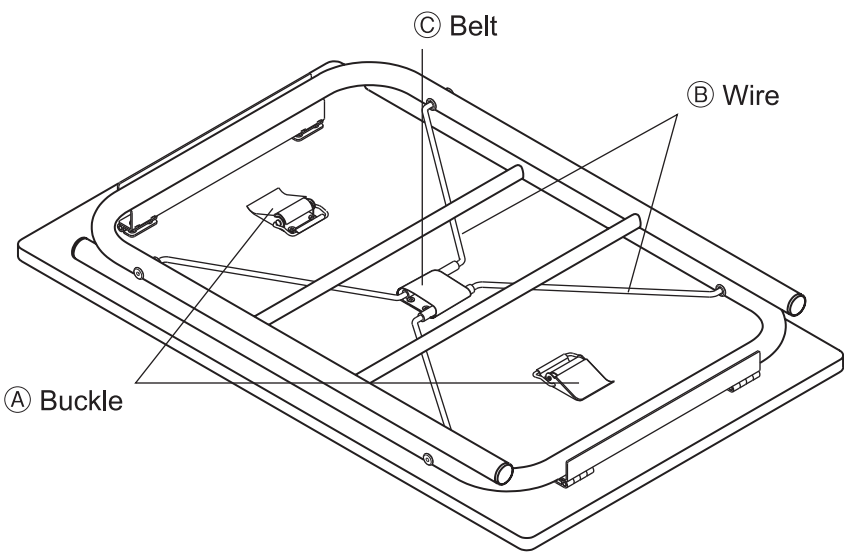

(When unfolded)

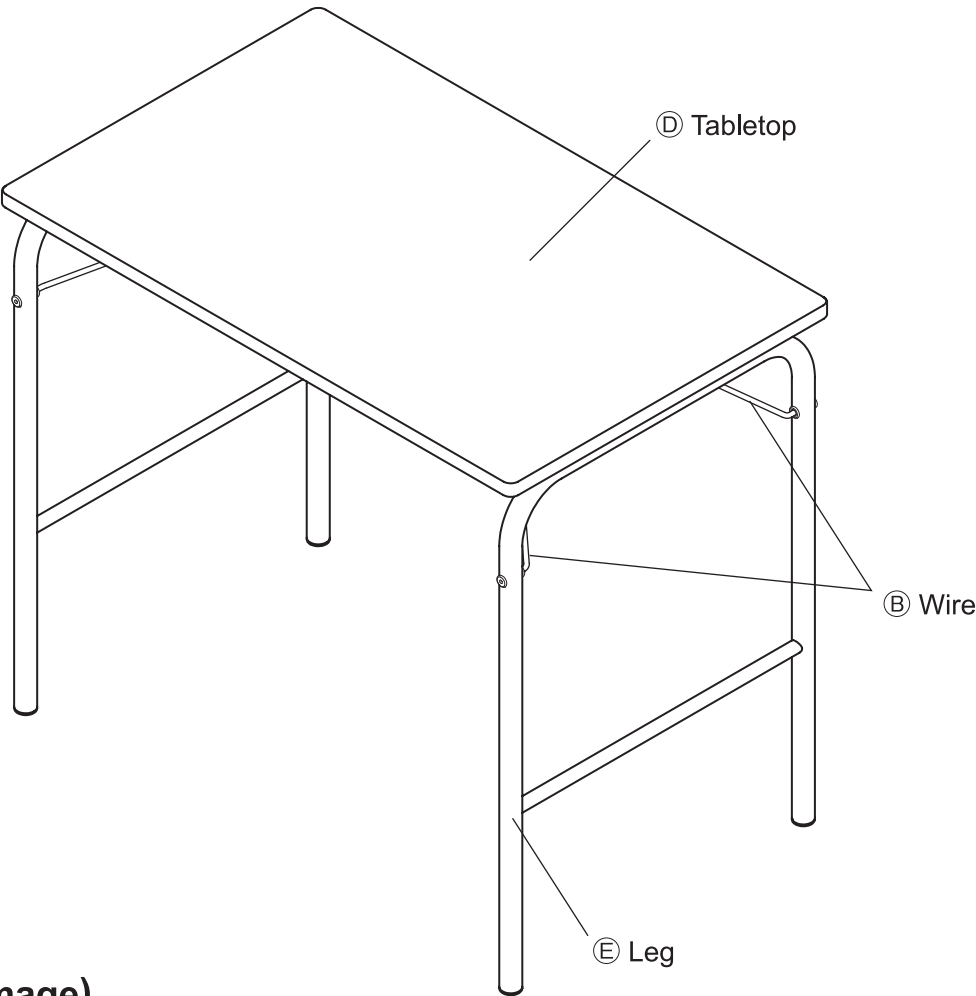

(Completion Image)

Directions for Use



❗ Secure enough space and place an underlay when assembling the product. This prevents the floor and other furniture from scratches.


How to unfold the legs

1

Turn over the table and place it with ① tabletop facing down. Take off ③ belt in the centre holding ② wires.




❗ After taking the wires off the belt, roll and fasten the belt with the hook-and-loop fastener. This is to avoid your clothing such as pantyhose from getting caught in the fastener and damaged.

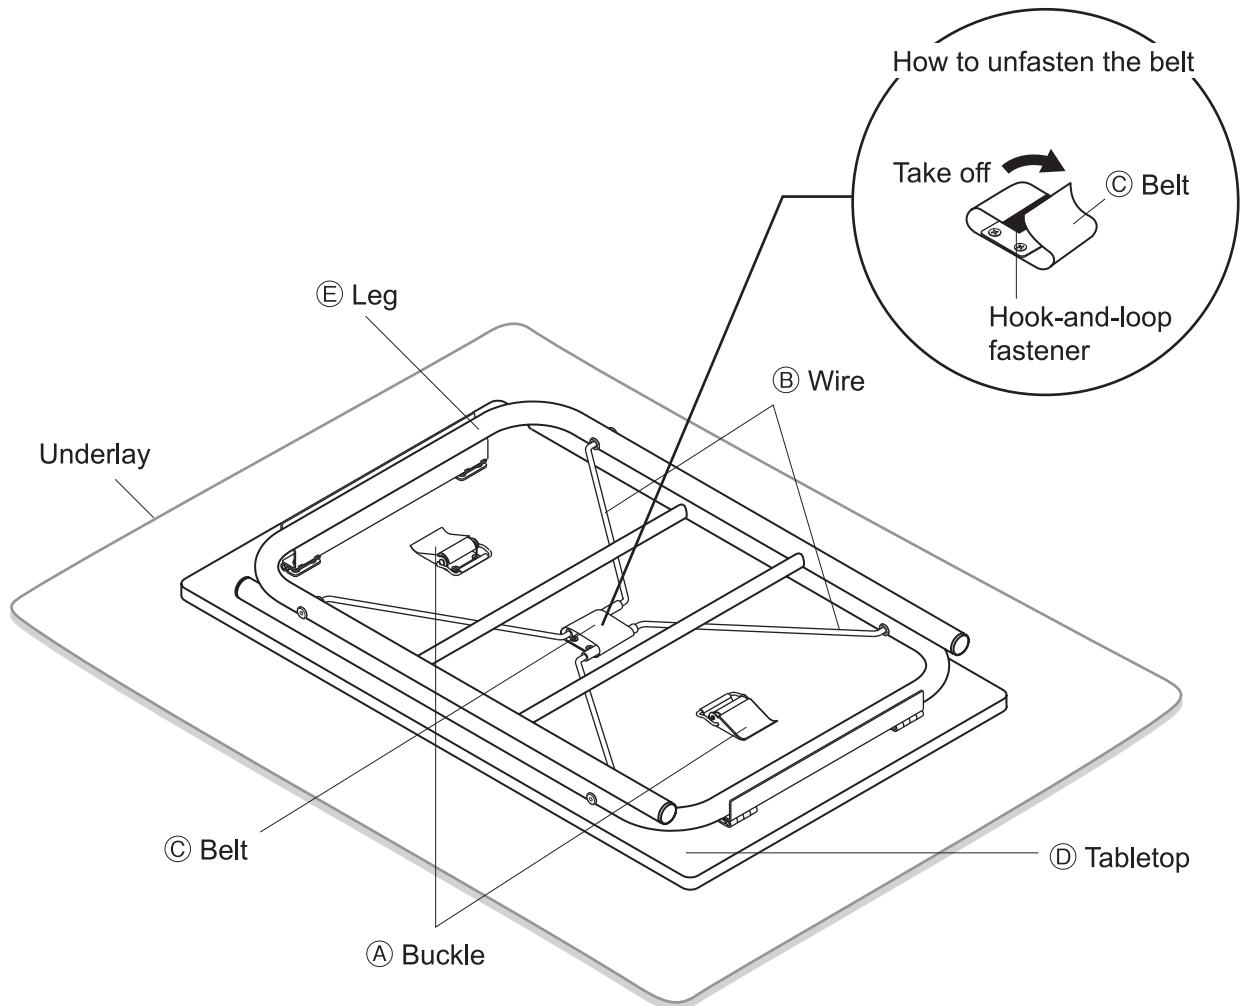

Directions for Use (Continued)



2

Hold the end of ⑤ Leg that is on top of the other leg and unfold it outward slightly over 90 degrees.

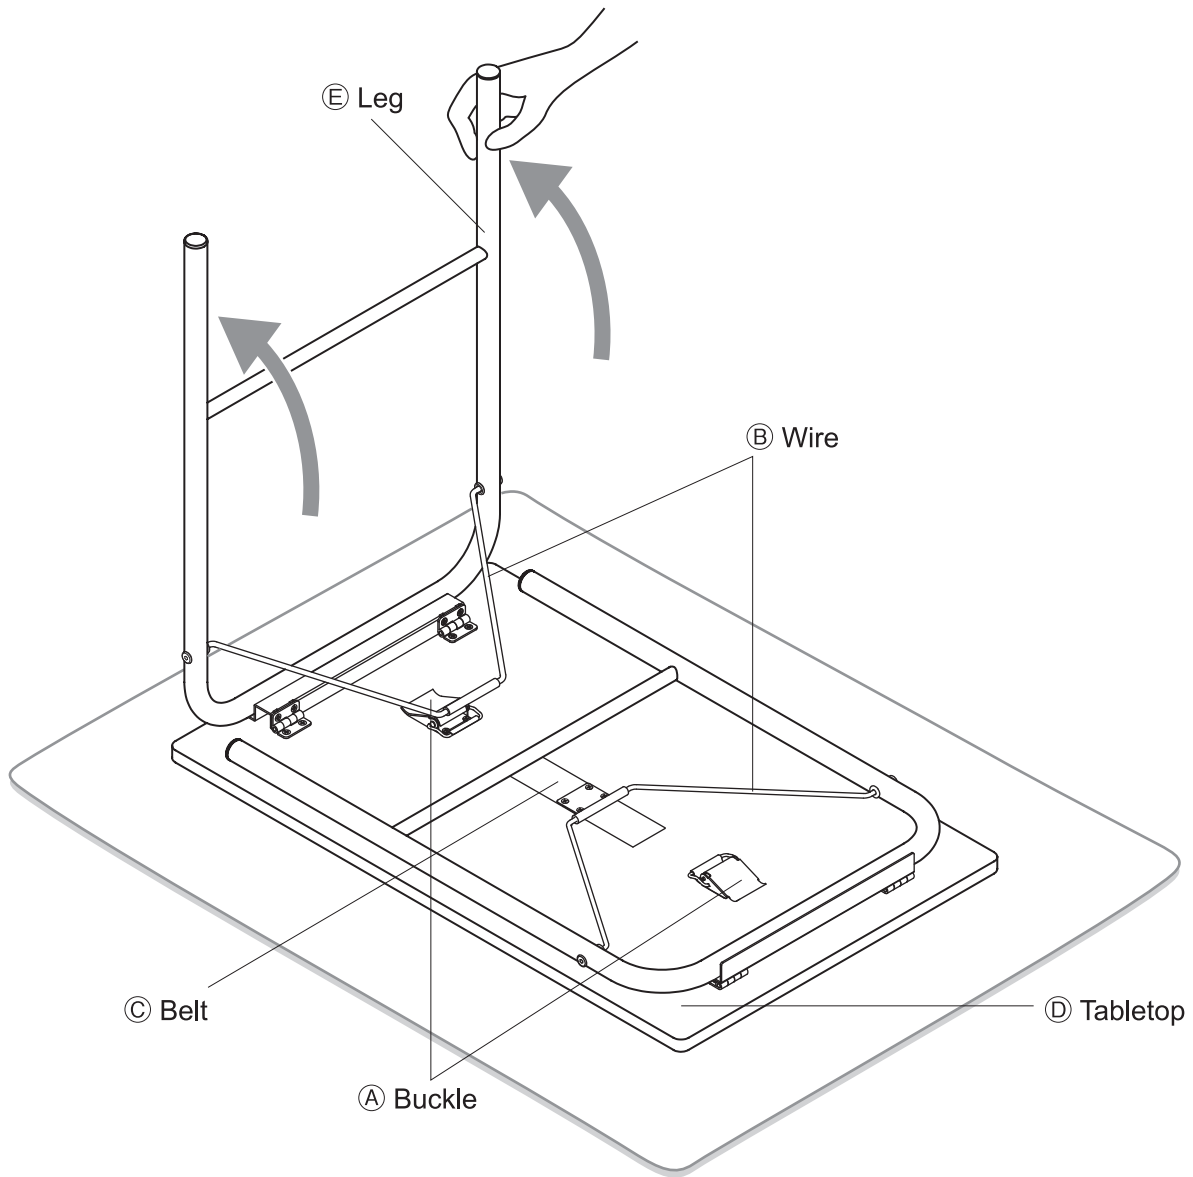

⊘ Do not touch the moving parts when folding/unfolding the legs. Otherwise, you can get your hands or fingers caught and injured.

❗ Wear gloves when unfolding/folding the table. Doing so prevents injuries.

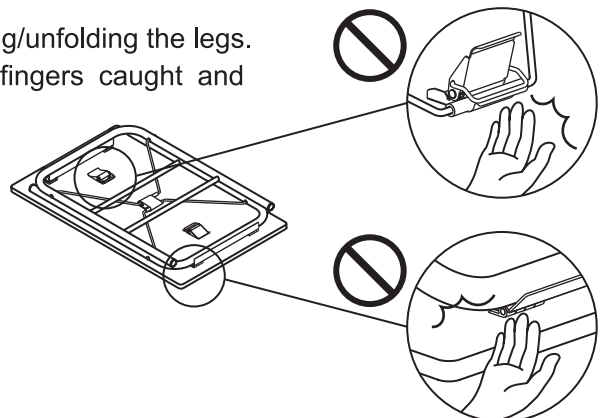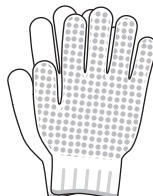



CAUTION

Directions for Use (Continued)


3 Referring to "How to lock Ⓐ buckles" below, unlock the buckle, press Ⓑ wire into the groove of Ⓐ buckle, and lock the buckle.


Note
(Other Caution)

Make sure the wire is set on the inner side of the buckle. Never hook the wire outside of the buckle. Otherwise the buckle may become damaged.





Inside

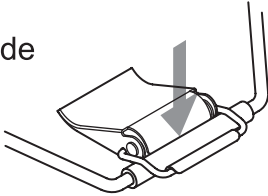




Outside

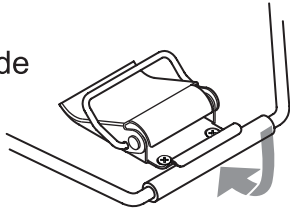

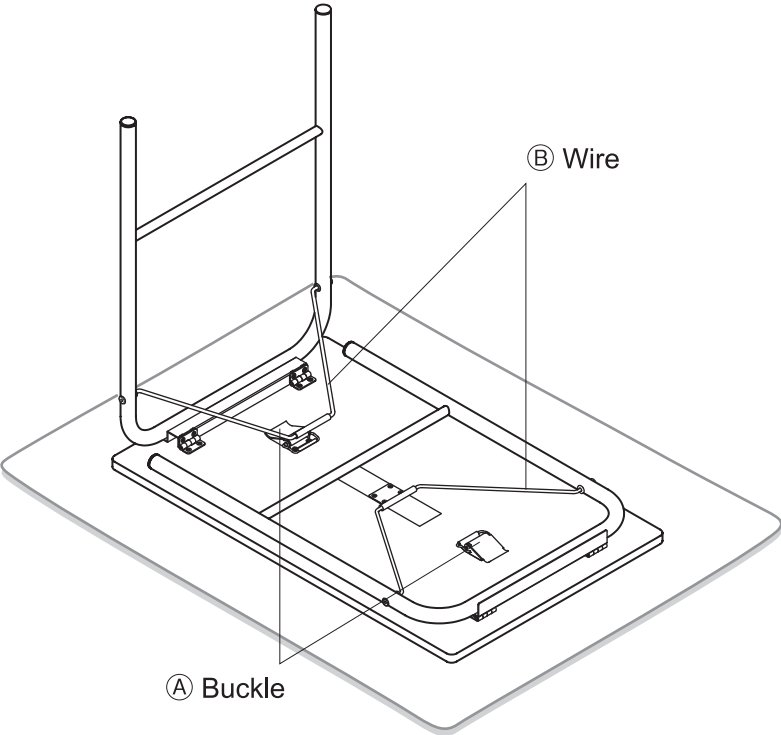


Note (Other Caution)

If it feels too tight to attach the wire to the buckle, push the legs in the direction of the arrow (outward) lightly while pushing the wire in, as shown in the image below. The metal fittings are set tightly to prevent lateral movement.

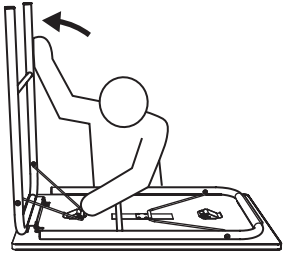


How to lock Ⓐ buckles


1 Lift up **2** of Ⓐ buckle to detach **1**.

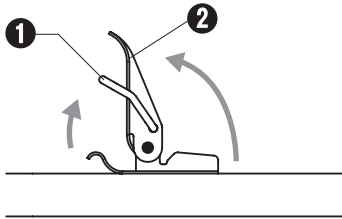


2 Place Ⓑ wire on the groove of Ⓐ buckle.

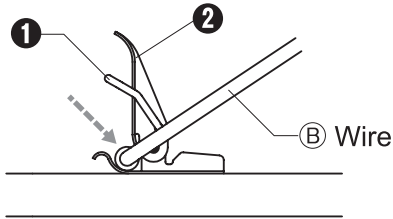


3 Hook **1** and press **2** down.

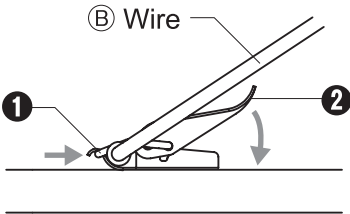

4 Check that Ⓐ buckle is securely locked.

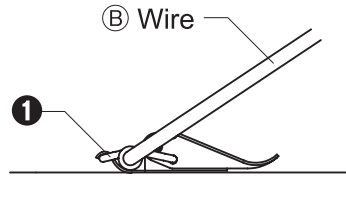


Directions for Use (Continued)



CAUTION

⊘ Do not take your hands off the legs, unless the buckles are securely locked in place, when folding/unfolding the legs. Otherwise the legs may fall and lead to injury.

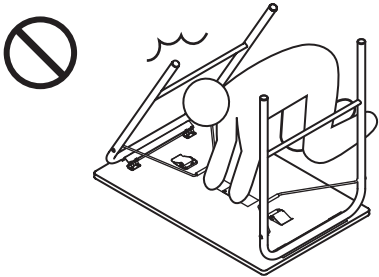


4 Following the same procedure as step **3**, unfold the leg on the other side and lock the buckle.


5 Gently turn the table over.

Note
(Other Caution)

Make sure the legs are securely locked. If the legs are tilted inward, they might not be properly locked. Redo the procedure.
* There is no problem if they are slightly tilted outward.

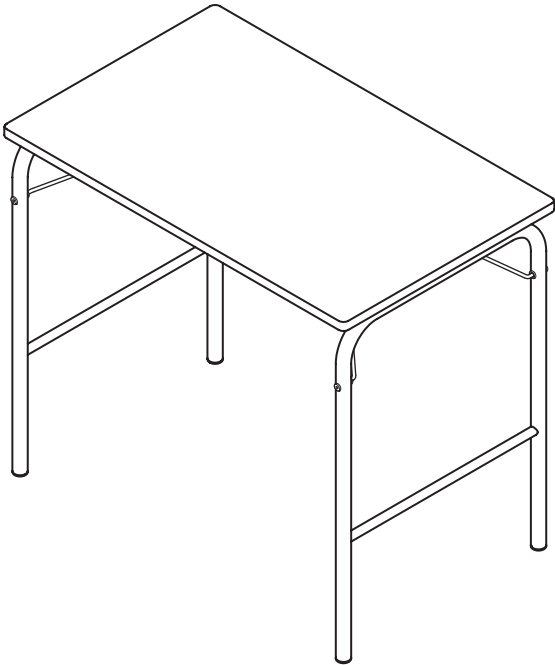

Completed



CAUTION

❗ Check that ① buckles are not loose after using for a long time, and lock them again if any looseness is found. Otherwise the product may become folded during use, resulting in injury.


❗ Stop use if the buckles are not securely locked. Otherwise it may cause injury.

Directions for Use (Continued)


How to fold the legs

Follow the reverse procedure of "How to unfold the legs".

- ① Place the table with ④ tabletop facing down on an underlay.
- ② Hold ⑤ leg that lies on the lower side when folded (the side without the metal part encircled with dotted line in the image below), unlock ① buckle, and gently fold the leg. Then fold the leg on the other side.
- ③ Open the hook-and-loop fastener on ③ belt and make it securely hold ② wires.

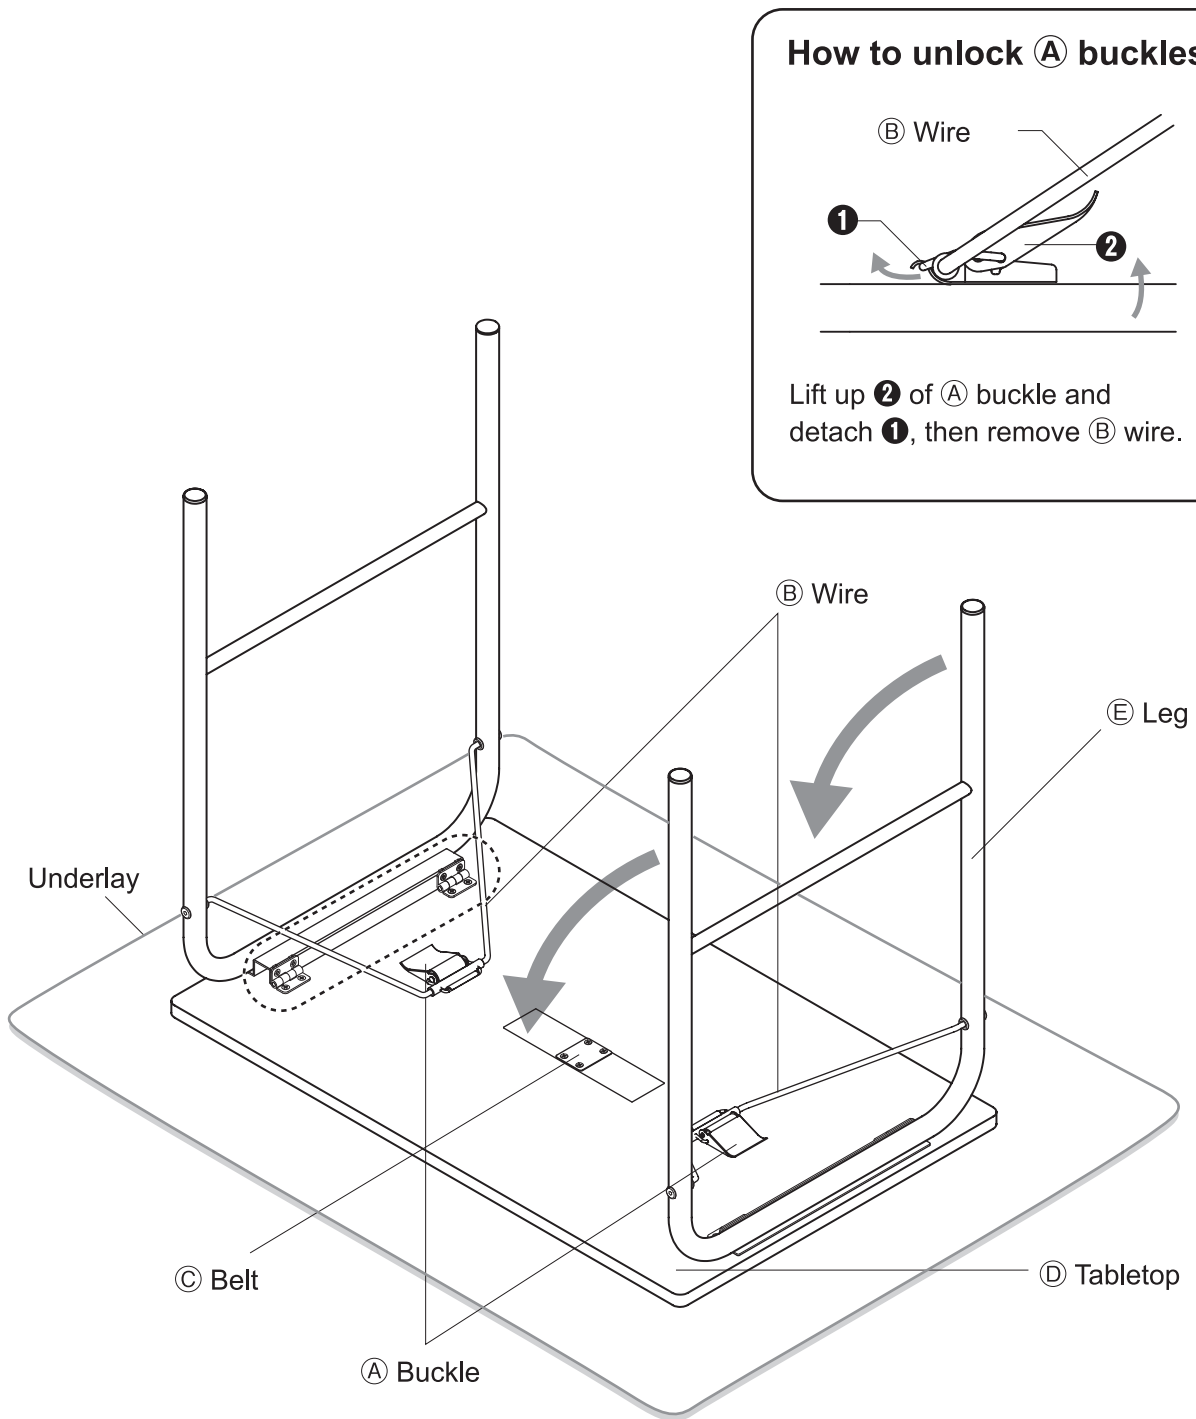
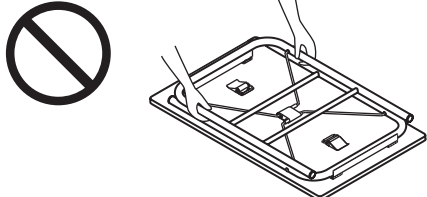


Directions for Use (Continued)

Note (Other Caution)	<ul style="list-style-type: none">• Do not expose to direct sunlight and heat or air from heating and cooling appliances such as an air conditioner and a heater. Doing so may cause warping, distortion, cracking, or discolouration.• Do not place hot or wet items directly on the product. Doing so may cause warping, distortion, cracking, discolouration or mould growth.	
--------------------------------	---	---

Moving the Product

- When moving the product, remove the items on the tabletop, and then carry it by lifting the tabletop together with at least two adults. Also be sure to fold the legs when moving the table to another room or other distant locations. This prevents the floor and other furniture from scratches.

 CAUTION	<p>⊘ Do not hold the legs to move the product. Doing so may cause the legs to come off the belt or the product to become damaged and result in injury.</p>	
---	--	--

Disposal

- To dispose of the product, follow the rules implemented by your local government.

Care Instructions

Maintenance and Inspection

- Regularly check for any looseness or damage in all parts, and stop use if any abnormalities are found. Continued use under this condition may cause injury or damage.
- Do not use if damaged or deformed.
- Take insecticidal measures immediately if any type of pest is found. If left untreated, pest damage may worsen.

Maintenance for Wooden Parts

- Gently wipe off dust from coated surfaces using a soft cloth or duster.
- If the product is heavily soiled, clean it with a cloth soaked in 3-5% neutral detergent solution and wipe off any detergent residue with a damp cloth. Then gently wipe with a dry cloth and let the product dry naturally.
- Do not leave a chemically treated cloth in contact with the product for a long time. Doing so may cause discolouration or peeling of the surface material.

Maintenance for Metal Parts

- For daily care, wipe with a soft, dry cloth.
- If the product is heavily soiled, clean it with a cloth soaked in 3-5% neutral detergent solution and wipe off any detergent residue with a damp cloth. Then gently wipe with a dry cloth and let the product dry naturally.

General Notes

Care Tips for Natural Wood Products


- As this product is manufactured using natural wood (veneer), there are individual differences (grain, colour, etc.) unique to natural wood.
- Cracking and warping may occur in natural wood (veneer) under the following conditions.
 - Avoid use in locations exposed to direct sunlight. If exposure to direct sunlight is unavoidable, use curtains, etc. to reduce the amount of sunlight.
 - Avoid use near heaters or air conditioners and make sure that the air from heater or air conditioner does not come into direct contact with the product.
 - In particular, use of heating appliances during winter causes the room to become extremely dry and may lead to cracking or warping of natural wood.

Formaldehyde Countermeasures

- What is Formaldehyde?

Formaldehyde is said to be a cause of sick house syndrome. It is a colourless, pungent-smelling chemical that vaporises at room temperature, often found in furniture, building materials, wallpaper adhesives, etc. As it is gradually released into the air, spending a long time in a room contaminated with formaldehyde can result in eye/throat irritation. Also, exposure to a high concentration of formaldehyde may cause breathing difficulties.

- Room Ventilation

 CAUTION	❗ Ventilate the room well when installing the furniture. Some individuals sensitive to chemicals and small children may experience allergic symptoms.
---	---

Be sure to frequently ventilate the room on a regular basis as formaldehyde is released into the air. Especially when installing multiple pieces of furniture at the same time, open the windows wide enough to allow adequate ventilation. Formaldehyde release tends to increase with temperature rise of the room. Therefore, be sure to ventilate well after the room has been closed up for a long time during summer. It is recommended that you open multiple windows and use a ventilation fan or an air circulator to increase ventilation efficiency.

- For Individuals Sensitive to Chemicals

There are individual differences in resistance to chemicals that are related to sick house syndrome other than formaldehyde. Therefore, even if the actual concentration in the room is lower than the indoor concentration guideline value (acceptable safe level of formaldehyde indoors), some people may react to formaldehyde. MUJI furniture are made with materials that contain as little formaldehyde as possible, but note this does not guarantee that they are completely formaldehyde-free. It is recommended that you seek medical attention if you experience any allergic symptoms.

- Formaldehyde Adsorption/Decomposition Sheet

Formaldehyde is readsorbed onto materials when there is nowhere for it to dissipate in a confined space. Therefore, a formaldehyde adsorption/decomposition sheet is included in the packaging to reduce formaldehyde concentration as much as possible before the product reaches the customer.

* The effect of the sheet will be diminished by the time the product reaches the customer. Dispose of the sheet as burnable waste after unpackaging.

Specifications

Product Name	Steel pipe Table
Specification	Folding type
JAN	4550512132233
Product Dimension	W800 × D500 × H700 mm Height when folded: Approx. 77 mm
Product Weight	Approx. 8 kg
Withstand Load	15 kg
Usage	Table
Material	Tabletop Surface Material : Natural Wood Laminated Plywood (Basswood Veneer) Legs : Metal (Steel) Surface Finish : Tabletop : Urethane Resin Coating Legs : Epoxy Resin Powder Coating
Place of Origin	CHINA

Contact Information

For enquiries regarding the product, please contact the store of purchase.