

MUJI 無印良品

保存用

製品仕様

座いす
洗いざらしの綿帆布

品 名

座いす 大 洗いざらしの綿帆布

座いす 小 洗いざらしの綿帆布

規 格

生成

ベージュ

ブラウン

生成

ベージュ

ブラウン

J A N

4550512911043

4550512911050

4550512911067

4550512911074

4550512911081

4550512911098

製品寸法

幅570×奥行1020(680-1020)
×高さ100(100-510) mm
(座面寸法: 幅570×奥行500 mm)

幅460×奥行860(580-860)
×高さ100(100-430) mm
(座面寸法: 幅460×奥行430 mm)

座面の高さ

100 mm

製品重量

約4.5 kg

約3.5 kg

用 途

座いす (1人用)

材 質

構 造 部 材: 金属 (鋼)
クッション材: ウレタンフォーム
側 生 地: ポリエステル100%
カ バ ー: 綿100%

原 産 国

中国

取扱説明書

この度は本製品をお買い上げいただき、誠にありがとうございます。

ご使用前に本書をよくお読みいただき、内容を理解した上で、正しくお使いください。

また、本書はいつでも確認できるように大切に保管してください。

2023 年 8 月 10 日

ご使用方法

廃棄について

- 廃棄の際は、居住地域の自治体のルールに従い、処分してください。

お手入れ方法

保守・点検

- ギアの異常やクッション部の破れなどないか定期的に点検し、異常が見られたら使用を中止してください。製品の破損、ケガの原因となります。

お手入れ方法

- 通常のお手入れは、やわらかい布で乾ぶきしてください。ほこりなどはブラシや掃除機（弱設定）などで取り除いてください。

- コーヒーなどひどい汚れの時は、ぬるま湯に3～5％に薄めた中性洗剤を入れた中にやわらかい布を浸し、よく絞って表面を叩くようにふき取ってください。その後、水に浸した布で洗剤をよくふき取り、自然乾燥してください。

- ⑩カバーの洗濯方法については、カバーの品質表示ラベルに従い、正しくお取り扱いください。


お問い合わせ先

製品のお問い合わせは、お買い上げの販売店もしくは下記お客様相談室までご連絡ください。


株式会社 良品計画

お客様相談室でんわ
0120-14-6404

パーツリスト

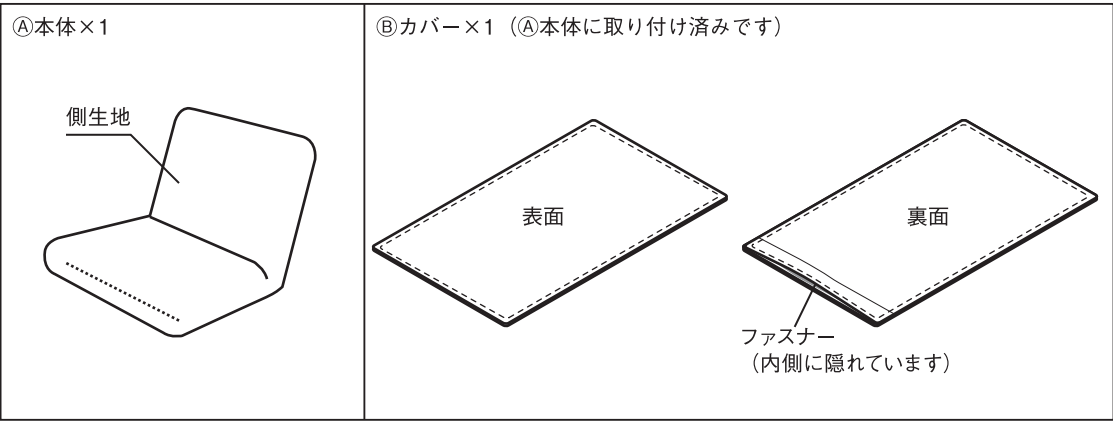


各部の名称

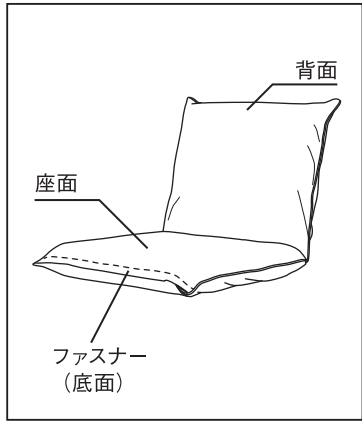

ご使用方法

※⑩カバーは底面にファスナーが付いている方が座面側です。

お願い (その他 注意)	側生地をはずさないでください。 ⑩カバーをつけてご使用ください。
-----------------	-------------------------------------

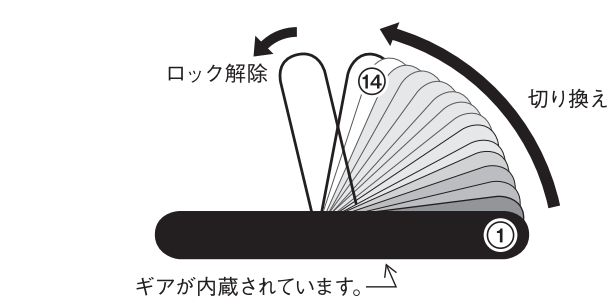

リクライニングの調整方法

- リクライニングは14段階切り換えとなっていますので①～⑭のお好みの角度に調整できます。

固定方法

- 背面側を押し「カチ」と音がした所で止めると固定できます。

解除方法

- 背面側を90度以上前方に押すと、ロックが解除しフラットに戻ります。

重要なお知らせ(安全上のご注意)

ここに示した警告・注意事項はお使いになる方や他の人への
危害や損害を未然に防ぐためのものです。必ずお守りください。

してはいけない「禁止」
の内容です。

！ 実行しなければ
ならない内容です。

⚠ 警告	死亡や重傷などに結びつくおそれがあるもの
⚠ 禁止	●乳幼児を寝かさないでください。窒息の原因となることがあります。 ●保護者の目の届かない場所で、お子さまだけで使用させないでください。思わぬケガの原因となります。 ●座面以外に座らないでください。思わぬケガの原因となります。 ●座面の上に立ったり、逆の向きや、背もたれの上に座ったりしないでください。転倒や破損、ケガをするおそれがあります。 ●座りながら製品を傾けたり、不安定な体勢で使用したりしないでください。転倒や破損、床をキズつける、ケガの原因となります。 ●ストーブなど引火するおそれのある物を近くに置かないでください。火災の原因になります。 ●タバコの火などを製品に落とさないでください。火災の原因となります。 ●製品で電化製品の電源コードを踏まないでください。コードが破損し、感電や火災の原因となります。 ●規定を超える人数では使用しないでください。破損してケガをするおそれがあります。（詳しくは製品仕様をご確認ください。） ●不要になった梱包材は、幼児の手の届くところに置かないでください。頭からかぶるなどしたときに、口や鼻をふさぎ、窒息するおそれがあります。 ●屋外では使用しないでください。変形や著しい劣化が起こり、ケガをする原因となります。 ●背もたれの先端部分に極度な荷重を与えないでください。ギアの破損によりケガをする原因となります。

⚠ 注意	傷害を負う可能性や物的損害が生じるおそれがあるもの
⚠ 禁止	●高温多湿な場所に長期間設置しないでください。カビやダニなどが発生し、健康を害することがあります。 ●指定の用途以外で使用しないでください。破損してケガをするおそれがあります。 ●破損や変形した状態では使用しないでください。製品の強度が弱くなりケガをするおそれがあります。 ●背もたれに乗ったり、勢いよく座ったりしないでください。転倒や破損によりケガをする原因になります。 ●座いすの背と座の間には、ギアが内蔵されております。平らにした時、その上に立ったり、踏んだりしないでください。思わぬケガの原因になります。 ●修理や改造はしないでください。製品の強度が弱くなり、ケガをするおそれがあります。 ●移動させる際は、製品を引きずらないでください。製品破損や床面へのキズ、ケガしたりするおそれがあります。
！ 行う	●製品を長時間同じ場所に設置し使用されますと床と製品の設置面が凹んだりして床をいためる場合があります。必ずカーペットなど敷物の上に製品を設置してください。

お願い(その他 注意)	
●	直射日光の当たる場所でのご使用は出来る限りお避けください。どうしても直射日光が当たる場合は、カーテンなどで出来る限り避けてご使用ください。変色などの原因になります。
●	平らで安定した場所に設置してください。不安定な場所での使用は、製品のゆがみ、破損の原因になることがあります。
●	側生地をはずさないでください。
●	湿った状態で使用しないでください。色移りや変色の原因となります。（特に濃色製品は使用中の強い摩擦でも色移りすることがあります。）

ご使用に際して

ウレタンフォームについて

- 本製品は、青・白・黄・グレー色の細かなチップウレタンフォームを原料として成型された製品です。ご使用時に細かなウレタンの付着が見られる場合がございます。
- 開梱時にウレタン製品特有の臭いがする場合がございます。この臭いのご使用過程で徐々になくなります。万一臭いが気になる場合は、直射日光のあたらない、風通しの良い場所に陰干ししてからご使用ください。
- 本製品は、製造工程により、一部ウレタン変色が見られる場合がありますが、本来の機能に支障はありません。
- ウレタンフォームの特性上、長時間放置しておくと、黄色に変色しますが、本来の機能に支障はありません。

⑩カバーの取りはずし方・取り付け方

取りはずす場合

座面（底面）膝裏あたりにあるファスナーを開き、両端を持って、ゆっくりとカバーをはがしてください。

⚠ 注意	！ セーターなどの衣服に触れないようにファスナーは閉じてから洗濯してください。ファスナーで衣類をキズつけることがあります。
------	---


側生地について

- 本製品の側生地にはファスナーが付いておりますが、これはウレタンフォームを入れるためのものですので、開けないでください。
- 側生地を取りはずすことはできません。
- 側生地は洗濯できません。

取り付けの場合

⑩カバーのファスナーがある面を背面側になるようにしてからファスナーを開き、本体上部にゆっくりとかぶせます。

⑩カバー左右の側面を持ち、ゆっくりと下方向にひっぱります。各端があうようにカバーを整え、ファスナーを閉じてください。

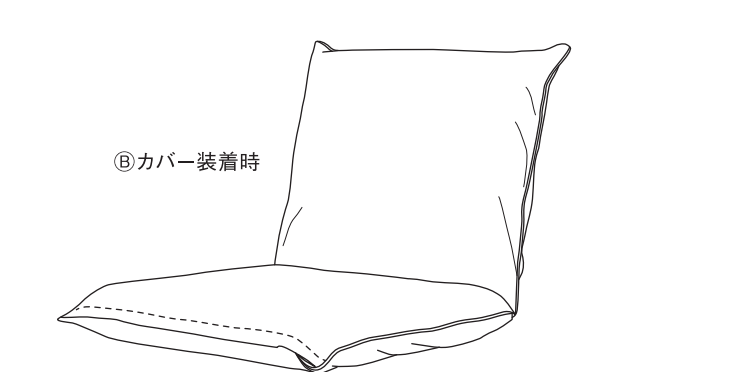

Floor chair
Cotton canvas

User Guide

Thank you for your purchase.
Read this User Guide before use to ensure correct use of the product.
Store this guide in an easily accessible place for future reference.

10 August 2023

Specifications

Product Name	Floor chair L Cotton canvas			Floor chair S Cotton canvas		
Specification	Natural	Beige	Brown	Natural	Beige	Brown
JAN	4550512911043	4550512911050	4550512911067	4550512911074	4550512911081	4550512911098
Product Dimension	W570 × D1020 (680-1020) × H100 (100-510) mm (Seat dimension: W570 × D500 mm)			W460 × D860 (580-860) × H100 (100-430) mm (Seat dimension: W460 × D430 mm)		
Seat Height	100 mm					
Product Weight	Approx. 4.5 kg			Approx. 3.5 kg		
Usage	Floor chair (for 1 person)					
Materials	Structural material : Metal (Steel) Cushioning material : Urethane foam Outer shell : 100% Polyester Cover : 100% Cotton					
Place of Origin	CHINA					

Directions for Use

Disposal

- To dispose of the product, follow the rules implemented by your local government.

Contact Information

For enquiries regarding the product, please contact the store of purchase.

Care Instructions

Maintenance and Inspection

- Periodically check for any abnormalities in the gears or damage on the cushioning part, and stop use immediately if any abnormalities are found. Not doing so may cause damage to the product or injury.


Care Instructions

- For regular cleaning, wipe with a soft, dry cloth. Remove dust with a brush or a vacuum cleaner (on low setting).


- If the product is heavily soiled (with coffee stains, etc.), soak a soft cloth in warm 3 - 5% neutral detergent solution, wring it out thoroughly and pat the stained surface with the cloth to remove the stains. Then, wipe off any detergent residue with a damp cloth and let the product dry naturally.

- When washing ㊸ cover, follow the washing instructions on the cover and handle it properly.

Parts

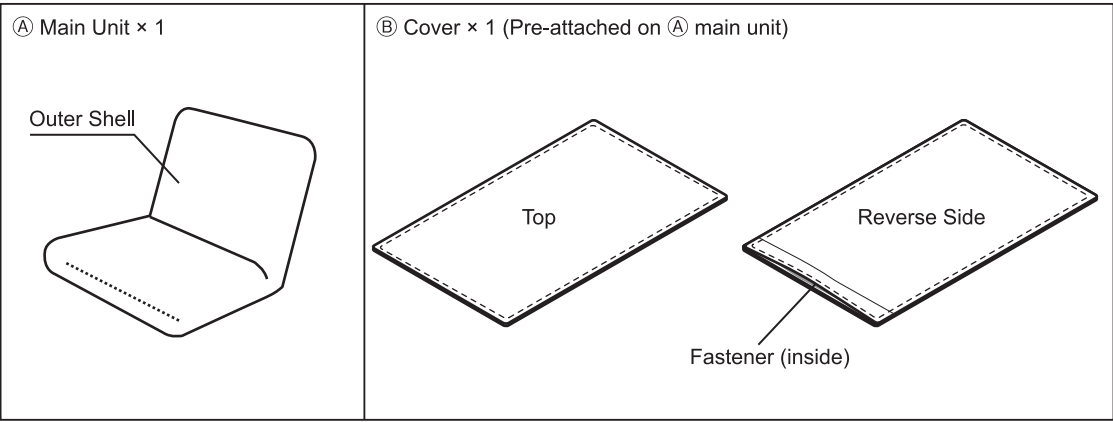


Part Names

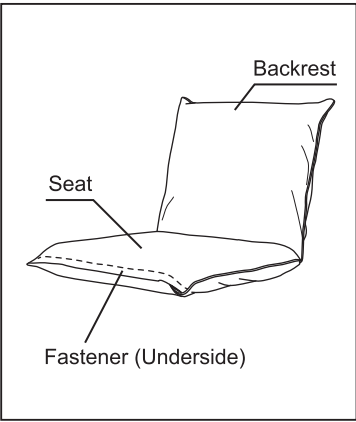

Directions for Use

* The side with the fastener on the underside is the seat side.

Note (Other Caution)	Do not remove the outer shell. Always use with ㊸ cover on.
-----------------------------	---

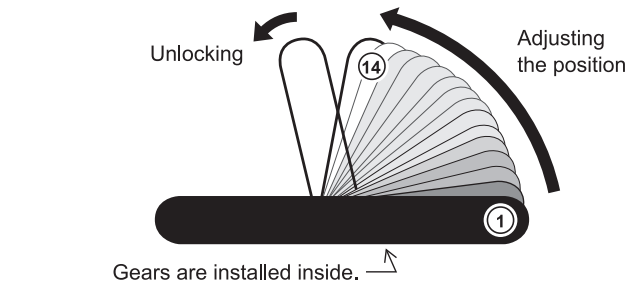

Adjusting the Reclining Position

- The recliner can be adjusted in 14 positions (① to ⑭ in the image).

Locking the Recliner

- Push the backrest forward to your desired angle.
The recliner can be locked in the position where a click is heard.

Unlocking the Recliner

- Push the backrest forward beyond 90 degrees. The chair will be flat.

Important Information (Safety Advice)

The warnings and cautions indicated here are intended to prevent harm to the users and other individuals or damage to the property. The instructions must be followed.



Actions that are prohibited.



Actions that must be taken.

⚠ WARNING	Hazards that may lead to death or serious injury
⚠ DON'Ts	<ul style="list-style-type: none">Do not lay small children on the product. Doing so may cause them to suffocate.Do not let children use without supervision. Doing so may result in unexpected injury.Do not sit on any part other than the seat. Doing so may cause unexpected injury.Do not stand on the seat or sit backwards or on the backrest. Doing so may cause tip-over, damage and/or injury.Do not use in an unstable state, such as tilting while sitting on the product. Doing so may cause tip-over, damage, floor scratches and/or injury.Do not place a heat source such as a heater near the product. Doing so may cause a fire.Do not drop lit cigarettes, etc. onto the product. Doing so may cause a fire.Do not place on the power cord of an electrical appliance. Doing so may damage the cord, leading to electric shock or a fire.Do not allow more than the specified number of people to use at the same time. Doing so may cause damage, resulting in injury. (See the Specifications for details.)Do not leave unnecessary packaging materials within reach of small children. Children may accidentally pull them over their head, cover their mouth and/or nose and suffocate.Do not use outdoors. Doing so may cause deformation or severe degradation, resulting in injury.Do not place excessive load on the edge of the backrest. Doing so may cause damage to the gears and lead to injury.

⚠ CAUTION	Hazards that may result in injury or damage to the property
⚠ DON'Ts	<ul style="list-style-type: none">Do not install in places with high temperatures and humidity for a long time. Doing so may cause mould and mites to grow, leading to health hazards.Do not use for other than its intended purpose. Doing so may cause damage, resulting in injury.Do not use if damaged or deformed. Doing so may cause insufficient strength, leading to injury.Do not plo down into the chair. Also, do not sit on the backrest. Doing so may cause tip-over or product damage, resulting in injury.Gears are installed between the seat and backrest. Do not stand or step on them when the chair is flattened. Doing so may cause unexpected injury.Do not attempt to repair or modify. Doing so may cause insufficient strength, leading to injury.Do not drag to move the product. Doing so may cause product damage, floor scratches and/or injury.
⚠ DOs	<ul style="list-style-type: none">Using the product in the same location for a long time may result in dents or other damage on the floor surface. Always place the product on a rug or any other underlay.
Note (Other Caution)	
	<ul style="list-style-type: none">Avoid use in locations exposed to direct sunlight. If exposure to direct sunlight is unavoidable, use curtains, etc. to reduce the amount of sunlight. Failure to do so may cause discolouration, etc.Use the product on a flat and stable surface. Otherwise it may cause product distortion or damage.Do not remove the outer shell.Do not use in wet conditions. Doing so may cause colour transfer or discolouration. (In particular, colour transfer can occur even from strong friction in dark-coloured products.)

General Notes

Urethane Foam

- This product is moulded using blue, white, yellow and grey coloured fine urethane foam chips. Urethane particles may be present on the surface of the product.
- There may be a unique smell of urethane foam at the time of unpackaging. This will gradually disappear over time. Leave the product in a well-ventilated, shady place out of direct sunlight before use to get rid of the smell.
- Some of the urethane foam may have become discoloured during the production process. This does not affect the functionality of the product.
- The cushioning part may turn yellow over time due to the characteristics of urethane foam, but this will not affect the functionality of the product.

Removing / Attaching ㊸ Cover

Removing

Open the fastener on the seat (underside), then hold the both sides and slowly remove the cover.

CAUTION	⚠ Close the fastener when washing the cover so it does not come in contact with clothing such as sweater. Not doing so may damage the clothing.
----------------	---

Outer Shell

- Do not open the fastener on the outer shell, as this is only for inserting the urethane foam.
- Do not remove the outer shell.
- Do not wash the outer shell.

Attaching

With the side with the fastener facing back, open the fastener and slowly place ㊸ cover over the top of the main unit.
Hold the both sides, and slowly pull ㊸ cover downwards.
Adjust the cover so it is in place, then close the fastener.

When ㊸ cover is attached

