

取扱説明書

- お買い上げありがとうございました。
- ご使用の前に、この取扱説明書を必ずお読みのうえ正しくお使いください。
- この取扱説明書は必ず保管してください。


〈付属品〉
● 取扱説明書(本書) *保証書付 1枚
● 単3マンガン乾電池 1個
説明書番号 BOC-118C

保証書付

保証書


製品名	駅の時計・アラームクロック アイボリー
お買上年月日	
お客様 お名前	
お客様 ご住所	
TEL	
保証書貼付用レシート貼付欄	
レシートが未貼り付けの場合は無効です。 保証期間：お買い上げ日より1年以内 日本国内のみ有効です。 This warranty is valid only in Japan. ※ネットストアご購入の場合、お買い上げ日シール（店舗印）の同梱はございません。 お買い上げ日は、ネットストアマイページ「注文履歴」にてご確認をお願い申し上げます。	

ご使用方法 1 ～ 5 の手順に従って操作してください。

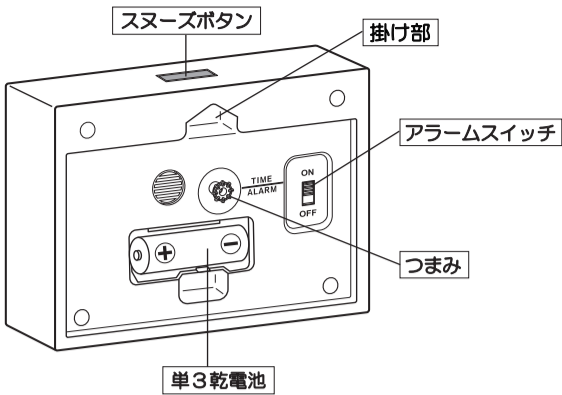

- 電池を入れる**
裏面の電池ふたをはずして、**単3乾電池** 1 個を入れます。
電池は ⊕ ⊖ 表示に合わせて入れてください。
- 現在時刻を合わせる**
つまみ を引いてまわし現在時刻に合わせてください。
(左右どちらにまわしてもかまいません)
合わせたあと **つまみ** を押して戻してください。

- アラーム時刻をセットする**
つまみ を押し込んだ状態でまわしてください。
●アラーム時刻を合わせるときは、アラームの針を、必ず ↺ 方向（反時計まわり）にまわしてください。
●アラームは、セットした時刻の5分前から5分過ぎの間に鳴りだします。
〔例えば、7時に合わせたとき、6時55分〕から7時5分の間に鳴りだします。
●時計まわりにアラームの針をまわすと、セットした時刻より早く鳴り出すことがあります。
- アラームを鳴らす。または鳴らさない。**
アラームスイッチ を ON にする
セットした時刻になるとアラームが鳴る。
アラームスイッチ を OFF にする
アラームを完全に止める。
※めざましアラームをご使用になる場合は、置いた状態でお使いください。
- 鳴っているアラームを一度止めて、数分後に再び鳴らす（スヌーズ機能）**
スヌーズボタン を押してください。
約40分間はこの操作をくり返すことができます。
寝すごし防止にご利用ください。

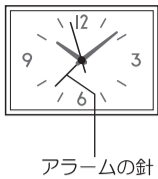

この時計は掛・置兼用でご使用になれます。

■掛けてご使用になる場合。
裏面 **安全上のご注意** <掛け方について> をご確認ください。

■置いてご使用になる場合。
水平な場所に置いてください。

製品仕様

- 時 間 精 度：平均月差±20秒
(気温5℃から35℃で使用した場合)
 - 使用温度範囲：－10℃～＋50℃
 - ア ラ ム：4段階に変化する電子音、スヌーズつき
 - ア ラ ム 精 度：±5分以内
 - 使 用 電 池：単3マンガン乾電池 (R6P) 1個
※単3アルカリ乾電池 (LR6) もご使用になります。
 - 電 池 寿 命：単3マンガン乾電池→約1年
※単3アルカリ乾電池→約1.5年
(1日につきアラームを30秒間使用した場合)
※添付の電池は工場出荷時より付けられています。
時計の電池寿命は製品仕様の表示より短いことがあります。
 - 製品サイズ・重量：幅 12.6 x 奥行 4 x 高さ 9 cm
約193 g (電池含む)
 - 主 な 材 質：ABS樹脂、アクリル樹脂
- ※上記の製品仕様は、改良のため予告なく変更する場合があります。

必ずお守りください。安全上のご注意

- 表示内容を見逃して誤った使い方をしたときに生じる危害や損害の程度を次の表示で区分し説明しています。
- ⚠ **警 告**：取り扱いを誤った場合に重症を負うなどの重大な結果になる可能性が想定されることを示しています。
- ⚠ **注 意**：取り扱いを誤った場合に軽症を負う可能性や物的損害をこうむることが想定されることを示しています。
- ❗ **強 制**：必ず守るべきこと(強制)を告げるものです。
- 🚫 **禁 止**：禁止の行為であることを告げるものです。

⚠ 警 告

<アルカリ電池について>
アルカリ電池をご使用になる場合は...

- ⚠ ショート、分解、加熱、火に入れるなどしないでください。
アルカリ性溶液がもれて眼に入ったり、発熱、破裂の原因となります。
- ❗ 万一、アルカリ性溶液が皮膚や衣類に付着した場合にはきれいな水で洗い流し、眼に入ったときは、きれいな水で洗った後、直ちに医師の治療を受けてください。

<幼児の誤飲による事故防止について>

- ❗ 電池ふた、電池は、幼児の手の届かないところに保管してください。
万一飲み込んだ場合には、直ちに医師と相談をしてください。

<梱包用ポリ袋について>

- ❗ ポリ袋は速やかに処分または幼児の手の届かないところに保管してください。

⚠ 注 意

<乾電池について>
下記のことを必ず守ってください。電池の使い方を間違えますと液漏れや破裂の恐れがあり、製品の故障やケガ等の原因になります。

- ❗ ⊕ ⊖ を正しく入れて下さい。
- ❗ 乾電池に記載されている「使用推奨期限」を経過した電池は時計がまだ動いていても、すべて新しい電池と交換してください。
また、時計を使わないときは電池をすべてはずしてください。
古い電池と新しい電池を混ぜて使用したり、古い電池を入れたままにしておくと、古い電池からの液漏れ等で製品や、周囲の物を汚したり、傷めたりする恐れがあります。
- 🔋 充電式でない乾電池を充電すると液漏れ、破損のおそれがあります。
- 🔋 電池に直接ハンダ付けしたり、水滴をつけないでください。
- ❗ 直射日光・高温・高湿の場所を避けて保管してください。
- ❗ 使用済みの電池は、速やかに処分または幼児の手の届かないところに保管してください。

必ずお読みになってからご使用ください。使用場所・お手入れ

⚠ 注 意

<使用場所について>

- ⚠ 下記のような場所では使わないでください。製品や電池の品質が確保されなくなり、精度不良や電池切れを起こすことがあります。
また本商品は業務用ではありません。
- 温度が－10℃（氷点下10度）以下になる所。
- 温度が＋50℃（50度）以上になる所や屋外で直射日光のあたる所、暖房器具などの熱風や火気に近い所。
- 浴室など湿気の多い所。また、水がかかる所や加湿器の蒸気が直接あたるような所。
- 屋外仕様ではありません。また、防水構造ではありません。雨や水にかからないように注意してください。
- 振動がある場所。不安定な所。●大型テレビ・スピーカーなどの強い磁気、電波ノイズを発生させるものの近く。
- 工場、台所などの多くの油を使用する所。●塵、埃の多い所。
- ビニール系素材の壁や敷物等の上。壁や敷物および時計が汚れたり、傷んだりすることがあります。

お手入れについて

- ベンジン、シンナー、アルコール、ミガキ粉、各種ブラシなどは使用しないでください。
殺虫剤、ハアスプレーなどもかからないようにしてください。
変色、傷の恐れがあります。
- 枠をふくときには、水で湿らせたやわらかい布でふいてください。
- 汚れがひどいときには、水でうすめた中性洗剤を少量、やわらかい布につけて拭き、ふいた後でから拭きしてください。

※お客様が分解しますと、修理不可能になる場合やケガの恐れがあり大変危険です。また保証の対象外となりますのでご注意ください。

故障かな？と思ったときには

製品が正常に作動しないときは、修理を依頼する前に、この表を参考にお調べください。なお電池は買い置き品でなく、新規購入品をご使用ください。

症 状	考えられる原因	処 置
針が動かない。	・電池が入っていない。 ・電池が正しい向きで入っていない。 ・電池接片の導通不良。	・指定の新しい電池を、電池の向きを確かめて入れてください。 ・接片の表面を拭いてください。 また、電池を入れて2～3回まわしてください。
アラームが鳴らない。	・アラームスイッチが OFF になっている。	・アラームスイッチを ON にしてください。
アラーム時刻になったら針が止まった。	・電池容量が少ない。	・新品電池と交換してください。

充電式電池のご使用について

充電式電池をご使用される場合は、必ず満充電してからご使用ください。

充電式電池の電圧、容量により使用できなかったり、使用できる時間が異なる場合があります。

電池切れにより製品の動作が止まったり、製品を長時間使用されない場合には、必ず製品から充電式電池を取り外してください。

User’s Manual

- Thank you for your purchase.
- In order to use this product properly, please first read this User’s Manual before use.
- Please keep this User’s Manual stored in a handy location even after reading it, and refer to it when necessary.

- Accessory
- User’s Manual (this sheet) 1
 - AA (R6) manganese dry battery 1.5V 1

Manufactured by
SEIKO CLOCK INC.
4-3, Fukuzumi 2-Chome, Koto-ku, Tokyo 135-8557, Japan


User’s Manual number BOC-118C

CE This product complies with the EMC requirements of the European Community.

The symbol on the product, packaging, and/or accompanying document indicates that this product should not be disposed with normal household waste. This product shall be taken to the applicable collection point for recycling. The correct disposal of your old product will help prevent potential negative consequences for the environment and human health. For more information about recycling of this product, please contact the shop where you purchased the product, or your local authority.

This symbol on the battery or on the packaging indicates that the battery provided with this product shall not be treated as household waste. Please inform yourself about the local rules on separate collection of batteries. The correct disposal of batteries helps to prevent potentially negative consequences for the environment and human health.

How to use Please follow steps 1~5 in order.

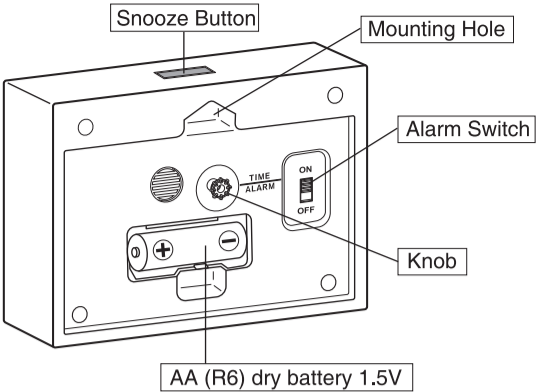

- 1 Insert the battery
- Remove the battery cover on the reverse side, and insert 1 **AA (R6) dry battery 1.5V**.
Insert the battery according to the ⊕ ⊖ sign in the battery case.
- 2 Setting the time
- Set the time by pulling and turning the **Knob**.
(Knob can be turned in both directions)
Push the **Knob** into place after setting the time.

- 3 Setting the alarm
- Turn the **Knob** while it is still pushed in.
- In order to set the alarm, always turn the alarm hand in a ↺ direction (anti-clockwise).
 - The alarm will start ringing between 5 minutes before and 5 minutes after the set time.
[For example, when the set time is 7, the alarm] will start ringing between 6:55 and 7:05.
 - If the alarm hand is turned in a clockwise direction, the alarm may start ringing earlier than the time set.
-
- Alarm hand

- 4 Turning the alarm on or off
- Turn the **Alarm Switch** ON
Alarm will start ringing at the set time.
- Turn the **Alarm Switch** OFF
Alarm will stop completely.
- ※ Please place the clock on a flat surface when using alarm function.

- 5 Temporarily stop a ringing alarm for a few minutes (Snooze function)
- Press the **Snooze Button**.
This function can be repeatedly used for approx. 40 minutes.
Please use this function to prevent oversleeping.

This clock can be hung or placed.

- If product is to be hung. Please read **Safety advice** “Regarding the hanging of the clock”.
- If product is to be placed.
Please place it on a flat surface.

Specifications

- Time accuracy: Average monthly difference within ±20 seconds (when used between 5°C~35°C (41°F~95°F))
 - Useable temperature range: -10°C~+50°C (+14°F~+122°F)
 - Alarm: Electronic sounds which changes over 4 levels, with Snooze function
Within ±5 minutes
 - Alarm accuracy: Within ±5 minutes
 - Batteries: AA (R6) dry manganese battery 1
※ AA (R6) dry alkaline batteries may also be used.
AA (R6) dry manganese battery – Approx. 1 year
※ AA (R6) dry alkaline battery – Approx. 1.5 years (When alarm is used for 30 seconds per day)
※ As the batteries are inserted at the time of shipment from the factory, there are cases when the battery life is shorter than stated.
 - Product size / weight: 12.6cm wide x 4cm depth x 9cm high (5in wide x 1.6in depth x 3.5in high)
Approx. 193g/0.43lb (including batteries)
 - Main materials: ABS resin/Acrylic resin
- ※ **Product specifications are subject to change without prior notice for the sake of making improvements.**

Safety advice

- The precautions are divided into and explained in the following categories based on the scale of damage that might occur from incorrect handling.
- ⚠ **WARNING:** WARNING indicates a hazard with a medium level of risk which, if not avoided, could result in death or serious injury
- ⚠ **CAUTION:** CAUTION indicates a hazard with a low level of risk which, if not avoided, could result in minor or moderate injury.
- ❗ **COMPULSION:** COMPULSION indicates compulsory items.
- 🚫 **PROHIBITION:** PROHIBITION indicates prohibited conduct.

WARNING

Regarding alkaline batteries

When using alkaline batteries...

- 🚫 Do not short-circuit, disassemble, heat or expose to fire. This may cause the alkaline solution to leak and get in eyes, overheating and rupture.
- ❗ If the liquid comes into contact with skin or clothing, wash immediately with clean water, and if it comes into contact with eyes, seek treatment from a doctor immediately after washing with clean water.

In order to prevent accidental swallowing by small children

- ❗ Please keep the battery cover and battery out of reach of small children. If accidental swallowing occurs, please seek treatment from a doctor immediately.

Regarding the plastic wrapping bag

- ❗ Please dispose of or keep the plastic bag out of reach of small children as soon as possible.

CAUTION

Regarding the battery

Please obey the following. Incorrect handling of the battery may result in leakage or rupture, which may cause product malfunction or injury.

- ❗ Insert the ⊕ ⊖ ends correctly.
- ❗ Replace the battery that have passed its expiration date with a new battery, even if the clock is still operational. Remove the battery when the product is not in use. Do not leave an old battery inside the product. This may cause the product and its surroundings to become dirty or damaged due to leakage of the old battery.
- 🚫 Charging non-rechargeable batteries may cause leakage or breakage.
- 🚫 Do not solder or wet the battery.
- ❗ Do not store in locations exposed to direct sunlight, or locations with high temperature or humidity.
- ❗ Dispose of or store the used batteries out of reach of small children as soon as possible.

CAUTION

Regarding the placement of the clock

- 🚫 Do not place on an unstable location or locations with vibrations, as it may cause the product to topple or fall and cause injury or damage.

Regarding the hanging of the clock

- ❗ When using the product as a wall clock, please ensure that the clock is hung securely. Not doing so may cause the product to fall and result in injury or damage. Please check the material and structure of the wall or hanging location, and select a hook that can sufficiently support the product weight.
- ※ After hanging the product, gently move the product in all four directions and also towards yourself, to ensure that the product is hung securely.


When hanging on thick wooden walls or pillars

- Please use commercially available wood screws.
※ Recommended screw size:
⊕ wood screw M4.1 x 20mm



When hanging on walls or pillars not mentioned above, such as plaster boards or concrete

- ※ Please use commercially available screws that are suitable for the wall.



Please read before use. Usage locations and maintenance

CAUTION

Regarding usage locations

- 🚫 Do not use in the following locations. The product and battery quality will not be able to be assured and may cause inaccuracy and battery depletion. This product is not designed for industrial purposes.
- Locations with temperatures below -10°C/+14°F
- Locations with temperatures above +50°C/+122°F, outdoors, exposed to direct sunlight, or in the proximity of hot air or fire such as heaters.
- Locations with high humidity such as bathrooms, and locations directly exposed to water or steam from humidifiers.
- Product is not designed for outdoor use. Product is not waterproof. Do not expose to rain or water.
- Locations with vibrations. Unstable locations.
- In the proximity of strong magnetic fields or electromagnetic noise, such as large television sets or speakers.
- Location where large quantities of oil are used, such as factories or kitchens.
- Location with large quantities of dust or dirt.
- On vinyl-based walls or mats. The walls, mats, or the product may get dirty or damaged.

Concerning maintenance

- Do not use benzene, paint thinners, alcohol, polish and all types of brushes.
Do not allow product to come in contact with insecticide or hair spray. This may cause discoloration and damage.
 - To clean the framework, wipe with a soft cloth slightly dampened with water.
 - If the exterior becomes too dirty, remove the dirt by wiping with a soft cloth slightly dampened with water-diluted neutral detergent, and wipe dry afterwards.
- ※ Do not attempt to disassemble the product, as it may cause injury.

Troubleshooting

When the product is not working properly, please check the following points first. Also, please use newly bought battery instead of stored batteries.

Symptom	Possible causes	Measures
Clock hand does not move.	<ul style="list-style-type: none">• Battery is not inserted.• Battery is not inserted in the right direction.• Battery contact is not clean.	<ul style="list-style-type: none">• Insert a new designated battery, in the correct alignment.• Please wipe the surface of the contact. Insert the battery and rotate 2~3 times.
Alarm does not ring.	<ul style="list-style-type: none">• The Alarm Switch is OFF.	<ul style="list-style-type: none">• Set the Alarm Switch to ON.
Clock hand stopped moving when it reached the set alarm time.	<ul style="list-style-type: none">• The battery level is low.	<ul style="list-style-type: none">• Please replace the old battery with a brand new battery.

Cautions when using rechargeable batteries

Only use rechargeable batteries after fully charging.
Depending on the battery voltage or capacity, some batteries may not be suitable or their usable duration may vary.
If the batteries are flat, or when the product will not be used for a long time, always remove rechargeable batteries.