

MUJI 無印良品

公園の時計・ミニ

(ホワイト 型番: MJ-PCM2)
(ブラック 型番: MJ-PCMB2)

取扱説明書

- お買い上げいただきありがとうございます。
- ご使用前に、この取扱説明書を必ずお読み
のうえ、正しくお使いください。
- この取扱説明書は必ず保管してください。

付属品

アルカリボタン電池 LR44 1個
取扱説明書(本書) 1部

保証書付

取扱説明書番号 4ZG941AZ-JP1 (Y2004)

■保証について

通常のお取り扱いで万一機械故障が生じた場合、保証期間中に下記までの保証書を添えてお申し出されば無料で修理・調整いたします。ただし、次の場合は保証期間内でも有料修理になりますのでご了承ください。
(ご使用の際はこの取扱説明書を必ずお読みください。)

- 1) 誤ったご使用による故障、またはお取扱いの不注意による故障
- 2) 不適当な修理や改造による故障
- 3) 火災または天災による故障
- 4) ご使用中に生じる外観上の変化(ケースの傷など)
- 5) 本保証書のご提示がない場合(電池は保証の対象外です。)
- 6) 修理の際、外観の違う代替品を使用させていただくことがありますのでご了承ください。

ご使用方法

*図は操作説明用ですので、実際の商品と異なることがあります。

時計(短い針)
分針(長い針)
秒針

電池のセット

緩む (OPEN) 締まる (CLOSE)
コイン
電池ぶた
目印
アルカリ
ボタン電池
LR44
針合わせつまみ
絶縁体を取る

保証書

製品名 公園の時計・ミニ (MJ-PCM2/MJ-PCMB2)
お買い上げ日 年 月 日
お客様 お名前
お客様 ご住所
TEL

保証書貼付用レシート貼付欄

[保証期間] お買い上げ日より1年以内 日本国内のみ有効です。
This warranty is valid only in Japan.

- 保証書貼付用レシート未貼付の場合は無効です。
- ネットストアご購入の場合、保証書貼付用レシートの同梱はございません。お買い上げ日は、ネットストアマイページ「注文履歴」にてご確認ください。

- この保証書は本書に明示した期間、条件のもとにおいて無料修理をお約束するものです。この保証書によってお客様の法律上の権利を制限するものではありません。

株式会社 良品計画

〒170-8424 東京都豊島区東池袋4-26-3
お客様室 ☎ 0120-14-6404

安全上のご注意

よくお読みのうえ、必ずお守りください。

図記号の説明

- は、禁止(してはいけないこと)を示しています。
- ⓘは、指示する行為を必ず守ることを示しています。

警告 死亡または重傷などを負う可能性が想定される内容

! 小さなお子様の手の届かないところにおいてください。

電池や電池ぶたなどを口に含んだり誤飲するおそれがあります。
万一、飲み込んだときは、すぐに医師の治療を受けてください。

⊘ ●電池をショートさせない。
●電池を分解しない。●電池に傷をつけない。
●電池を充電しない。●電池を加熱しない。
●電池を火の中に入れない。

電池の液漏れや発熱、破裂の原因になります。

⊘ 電池から漏れた液に触れない

- 目や皮膚につくと失明や炎症などの傷害が発生する可能性があります。その場合は、すぐに水道水でよく洗い流して医師の診察を受けてください。衣服に付着した場合は、すぐに水道水で洗い流してください。
- 漏れた液に直接触れないでください。
- 電池を外して、漏れた液を布や紙でよくふき取ってください。修理が必要なときは、お買い上げの販売店にご相談ください。

注意 傷害を負う可能性または物的損害が発生する可能性が想定される内容

⊘ 強い振動や落下など衝撃を与えない
故障や破損の原因になります。

⊘ めれた手で触らない
さびの発生や故障の原因になります。

⊘ 浴室やサウナ、岩盤浴、温室など、高温・
高温になる所では使わない
さびの発生や故障の原因になります。

⊘ 分解や改造をしない
けがや故障の原因になります。

⊘ 下記のような場所では使わない
部材の変形、変質、劣化、故障の原因になります。

- 直射日光が当たる所。
- 暖房器具等の熱風や火気に近い所。
- 温度が+50℃以上の所。
- 温度が-10℃以下の所。
- ほこりが多く発生する所。
- プール、温泉場などガスの発生する所。
- 調理場など多くの油を使用する所。
- ゴムや軟質のポリ塩化ビニルに長い間、直接ふれさせておくと、色移りや付着、変質をすることがあります。

! 電池からの液漏れを防ぐために次のことを守る

- 使い切った電池は速やかに取り出してください。
- 長期間使用しない場合は、電池を取り出してください。

電池の寿命について

- 付属の電池は、工場を出荷するときに
入れていますので、製品仕様より短い
期間で電池切れになることがあります。

電池、製品の廃棄について

- お住まいの地区自治体の指定に従ってください。
- 電池と本体を分別して廃棄してください。

製品仕様

使用環境温湿度：-10 ~ 50℃、85%RH以下
*結露しないこと

時計機能：クオーツ
時間精度：平均月差±20秒 温度が5~35℃のとき
電源：アルカリボタン電池 LR44 (1.5V) 1個
電池寿命：約1年
外形寸法：幅 55 奥行 55 高さ 182 mm
質量：62g (電池を含む)
材質：ケース ABS / 透明カバー PMMA
防水機能：なし

○製品仕様は改良のため予告なく変更することがあります。

MUJI 無印良品

PARK CLOCK / MINI
(WHITE Model No.MJ-PCM2)
(BLACK Model No.MJ-PCMB2)

User Manual

- Thank you for your purchase.
- In order to use this product properly, please first read this User Manual before use.
- Please keep this User Manual stored in a handy location even after reading it, and refer to it when necessary.

Accessories	
Type LR44 alkaline button-cell battery	1
User Manual (this sheet)	1

User Manual number 4ZG941AZ-EN1 (Y2004)



This product complies with the EMC and RoHS requirements of the European Community.



This symbol on the product, packaging, and/or accompanying document indicates that this product should not be disposed with normal household waste. This product shall be taken to the applicable collection point for recycling. The correct disposal of your old product will help prevent potential negative consequences for the environment and human health. For more information about recycling of this product, please contact the shop where you purchased the product, or your local authority.




This symbol on the battery or on the packaging indicates that the battery provided with this product shall not be treated as household waste. Please inform yourself about the local rules on separate collection of batteries. The correct disposal of batteries helps to prevent potentially negative consequences for the environment and human health.

Manufactured by:
RYOHIN KEIKAKU CO., LTD.
4-26-3 Higashi-ikebukuro, Toshima-ku, Tokyo, JAPAN


Imported to EU by:
MUJI EUROPE HOLDINGS LIMITED
21a John Street, London WC1N 2BF, UK
Imported to Australia by :
MUJI RETAIL(AUSTRALIA)PTY LTD
Level 5 90 William Street Melbourne, VIC 3000, Australia

How To Use

* Image is for the purposes of operating instructions, and may vary from actual product.

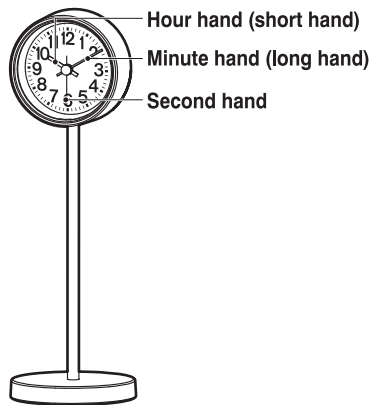

Inserting the battery

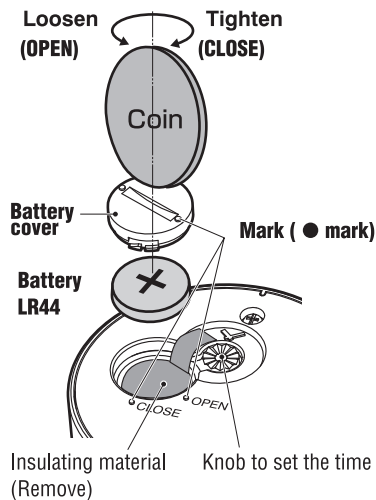

⚠ WARNING ! Keep product out of the reach of small children.

It may cause accidental swallowing of the battery or the battery cover. If accidental swallowing occurs, please seek treatment from a doctor immediately.

1. Installing the Battery / Battery replacement

- (1) Using a coin, rotate the battery cover ● mark to the OPEN ● mark and remove the battery cover.
 - (2) Insert the button battery making sure that the + mark is on the top.
- * Battery is inserted at the factory. If there is any insulating material please remove it.
 - (3) After aligning the battery cover ● mark with the OPEN ● mark, fix it by rotating it to the right up to the CLOSE ● mark.
 - * The clock will not work if the + and – of the battery are inserted the wrong way round.
 - * Please do not use metal tweezers as this may cause short-circuiting.
 - * Please regularly change the batteries once per year.

2. Setting the Time

- Gently hold the time-setting knob in your fingertips and rotate it to set the time.

3. Placement

- To prevent the clock from falling down, please place it on a horizontal surface with little vibration.
- Moving the clock by dragging it on its stand will cause scratches to the surface. Please lift up the clock when moving it.

Troubleshooting

Problem	The time is incorrect or the clock hands aren't moving.
Cause	The battery is low or has died.
Solution	Please change to a new battery.

Caring for This Product

- For heavy stains, wipe with a soft cloth using a small amount of diluted neutral detergent or soapy water first and then dry with a cloth.
- Do not use benzine, thinner, alcohol, or spray cleaner to clean the case.

Safety advice

Prior to use, please thoroughly read and follow these safety instructions.

Explanation of symbols

- ⊘ This symbol indicates prohibited conduct.
- ❗ This symbol indicates compulsory items.

⚠ WARNING WARNING indicates a hazard with a medium level of risk which, if not avoided, could result in death or serious injury.

❗ Keep product out of the reach of small children.
It may cause accidental swallowing of the battery or the battery cover. If accidental swallowing occurs, please seek treatment from a doctor immediately.

- ⊘ **Do not short-circuit the battery.**
- ⊘ **Do not disassemble the battery.**
- ⊘ **Do not damage the battery.**
- ⊘ **Do not charge the battery.**
- ⊘ **Do not heat the battery.**
- ⊘ **Do not expose the battery to fire.**

Doing so may cause battery leakage, heating, or explosion.

⊘ **Do not touch the liquid leaking from the batteries.**

- If it comes in contact with the eyes or skin, it may cause blindness, inflammation, or other injuries. In case of contact, rinse immediately well with tap water and seek treatment from a physician. If the liquid is attached to clothing, please wash it off immediately with tap water.
- Do not touch the liquid directly. Remove the batteries and wipe the liquid off thoroughly with cloth or paper.

⚠ CAUTION CAUTION indicates a hazard with a low level of risk which, if not avoided, could result in minor or moderate injury.

⊘ **Do not drop or subject the product to strong impact.**
This may cause damage or malfunction.

⊘ **Do not touch with wet hands.**
This may cause rust or malfunction.

⊘ **Do not use in locations with high temperature and humidity, such as in a bathroom, sauna, bedrock bath or greenhouse.**
This may cause rust or malfunction.

⊘ **Do not perform repairs, disassembly or modifications.**
This may cause injury or malfunction.

⊘ **Do not use the product in the places listed below.**
This may cause the product to deform, deteriorate, or malfunction.

- Locations exposed to direct sunlight.
- In the proximity of fire or heat from heating appliances.
- Locations with temperatures above +50 °C (+122 °F).
- Locations with temperatures below -10 °C(+14 °F).
- Locations where there is a lot of dust.
- Locations with a lot of gas such as swimming pools or hot springs.
- Locations where a large quantity of oil is used such as toasters, microwave ovens, electronic cookers, or ventilation hoods.
- Direct contact with rubber or polyvinyl chlorides for long periods may cause the product to stain, stick or deteriorate.

❗ In order to prevent leakage of battery liquid, please obey the following.

- Please remove the batteries from the product when it has run out.
- Please remove the batteries when the product is not being used for a long period of time.

Regarding battery life

- As the batteries are inserted at the time of shipment from the factory, there are cases when the battery life is short.

Disposal of batteries and product

- Please dispose of the batteries and the body separately according to the local rules.
- Please dispose the battery and clock separately.

Specifications

Usable temperature and humidity range:	
	-10 °C ~ +50 °C (+14 °F ~ +122 °F), 85 % RH or less *No condensation
Clock Function:	Quartz
Time Accuracy:	Average monthly difference within ±20 seconds (when used between 5 °C(41 °F) and 35 °C(95 °F))
Power source:	LR44 (1.5 V) 1
Battery life:	Approximately one year
Size:	5.5 cm wide x 5.5 cm long x 18.2 cm high (2.17 in wide x 2.17 in long x 7.17 in high)
Product weight:	62 g/0.137 lb (including batteries)
Materials:	Case ABS / Transparent cover PMMA
Waterproof function:	Non