
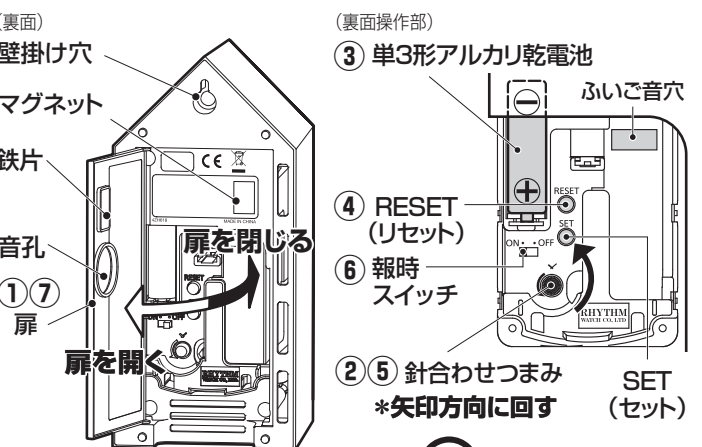


各部の名称と役割

○図は操作説明用ですので実際の商品と異なることがあります。

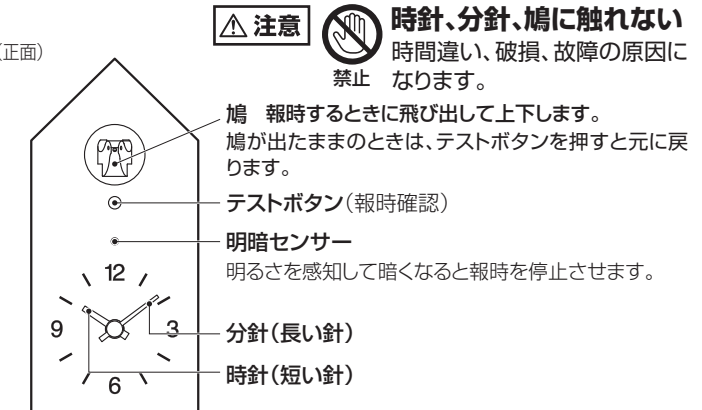

マグネットや鉄片に鉄粉などの異物が付着すると吸着力が弱くなる場合があります。付着したときは、取り除いてください。

注意 **電池の⊕ ⊖を逆向きに** 入れない 液漏れや発熱の原因となり、故障やけがの原因になります。

警告 **マグネットのご注意**

定期券やキャッシュカードなどの磁気記録方式のものや磁力に影響を受ける機器、例えば心臓ペースメーカーなどに近づけないでください。データの消失や誤作動の原因になります。

注意 電池の交換について

電池の液漏れや破裂を防ぐために、次のことをお守りください。

- 時計が止まったときは、新しい電池に交換するか、電池を取り出す。
- 動いていても1年に1回定期的に交換する。

液漏れだ！

電池を交換したときには、「**ご使用手順**」を参考にして表示時刻と報時を合わせてください。

■ **電池の種類について**


- 一般に充電式の電池は電圧が低いので、本製品には使用しないでください。
- マンガン乾電池はアルカリ乾電池より電池寿命が短くなります。

■ **電池の寿命について**

- 付属の電池は、工場を出荷するときに入れてありますので、製品仕様より短い期間で電池切れになることがあります。
- 温度などの使用条件により、製品仕様より電池寿命が短くなる場合があります。
- 買い置きの電池を使用した場合、保管状態や乾電池に示されている「使用推奨期限」により、電池寿命が短くなる場合があります。

木の柱または木質の厚い壁面に掛ける場合

- 付属の壁掛け用木ねじは、木の柱または木質の厚い壁面用です。
- 壁掛け用木ねじを垂直に壁面にしっかりねじ込んで固定してください。

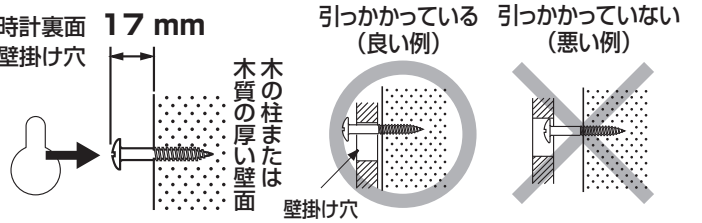

その他の壁面に掛ける場合

- 石こうボード、コンクリートなどの壁面に掛ける場合は、壁の材質・構造と時計の重量に合った、市販の掛け具をご使用ください。その際、粘着式や吸盤式は時計が落下するおそれがありますので、使用しないでください。

正しく報時させるために、必ず手順に従ってください。

ご使用手順

① **扉を音孔に指を掛けて開く**

② **針合わせつまみを矢印方向に回して、5時50分に合わせる**



③ **電池ホルダーの⊕ ⊖表示に合わせて電池を入れる**

電池を入れたら報時を始めます。

④ **RESET (リセット)を押す**

- 誤作動を防ぐために、電池を入れた後は必ず押してください。
- RESETを押すと“5時”の報時にセットされます。
- 報時している途中でも押せます。

⑤ **針合わせつまみを必ず矢印方向に回して現在時刻に合わせる**

- 報時している途中でも時刻を合わせることができます。

⑥ **報時スイッチを設定する**

ON 報時する **OFF** 報時しない *出荷時の設定は**OFF**です。

⑦ **扉を閉じる**

- ※電池を入れた直後またはRESETを押すと5回鳴きます。
- ※暗い所では③～⑤では報時をしません。
- ※**報時スイッチがOFFのときは⑤では報時をしません。**
- ※報時回数は、分針が12の文字(0分)を通過するたびに1回増えます。分針が反時計回りで通過しても増えますので、時刻を合わせるときには、分針を必ず時計回りに回してください。

報時機能

◎**報時スイッチの設定**

- ON** 毎正時 時刻に対応した数だけ鳴ります。毎30分 1回鳴ります。
* 明暗センサーにより暗い所では鳴りません。
- OFF** 鳴りません。

◎**30分の報時について**

- ※針合わせつまみを回して30分に合わせても鳴りません。
- ※針合わせつまみを回した場合、30分の報時は表示時刻とずれて鳴ることがあります。時間が経過して、一度正時の報時をすれば正常に戻ります。

◎**報時の音量について**

- 扉の音孔をふさぐと音が小さくなります。

◎**報時の確認と修正 ……… テスト、SET(セット)ボタン**

テストボタンを押すと表示時刻に対応した数だけ鳴ります。たとえば、10時9分を指しているときは10回鳴ります。報時回数が**正しくないときには**、


- SET(セット)ボタン**で報時回数を修正してください。
 - SETボタンを1回押すと報時回数が1回増えます。
 - 12回のときに押すと1回に戻ります。
- または、上記①～⑦に従って時刻を合わせ直してください。

設置について

◎**傾けた状態で報時させると正常に動きません。**

転倒や落下を防ぐために、水平で振動の少ない安定した所に置いてください。

◎置いてご使用になるときには**底部4か所**に付属のクッションゴムを貼ってください。


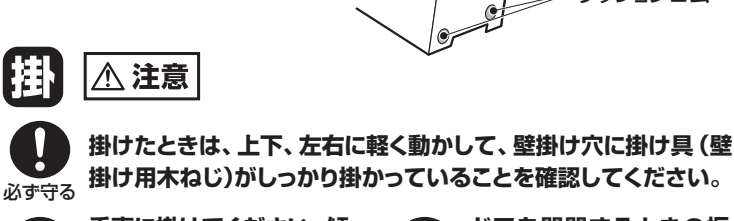


- !** **市販の掛け具を使用するときは、壁掛け穴にしっかり掛かるものを選んでください。**必ず守る

掛けかたが不適切な場合、時計が落下するおそれがあります。

Name and Function of Each Part

The illustrations are for use as operating instructions and may differ from the actual product.

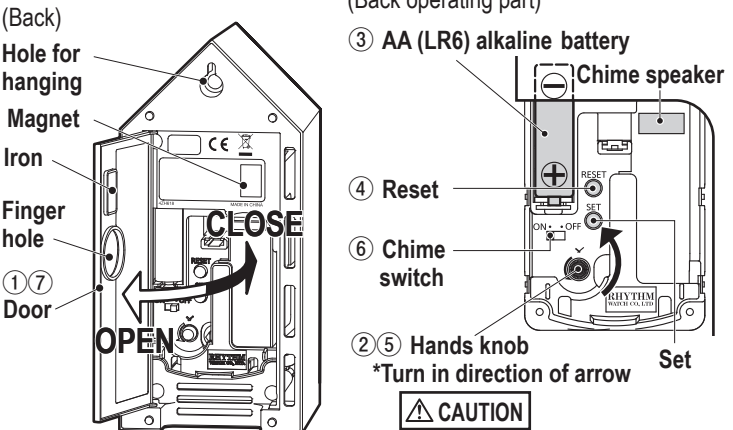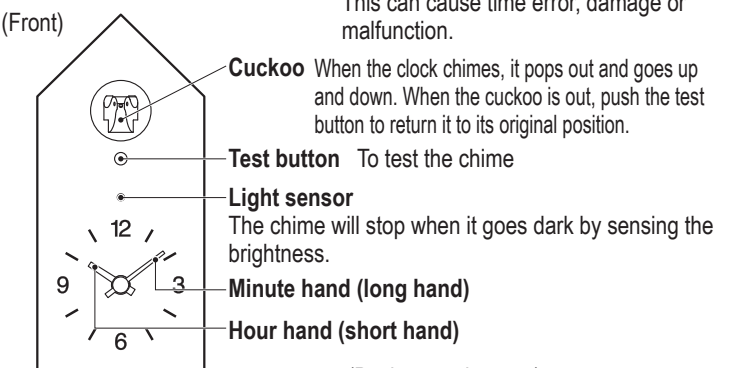

If the magnet or iron part comes into contact with foreign items containing iron, the suction will weaken. If contact occurs, please detach.

WARNING **About magnets**

! Do not bring the product close to magnetic recording mediums (e.g. commuter pass, bank card) or devices susceptible to magnets (e.g. pace maker). Doing so may cause loss of data and malfunction.

CAUTION Changing batteries

! To avoid battery leakage or explosion, please follow the below.

- If the clock stops, either replace the battery with a new one or remove the battery.
- Even when the clock is still working, change the battery regularly once per year.

When changing batteries, please set the display time and chime time by referring to the "Steps for Use".

■ **Types of battery**


- As a general rechargeable battery has low voltage, please do not use with this product.
- Dry manganese batteries have a shorter life compared to dry alkaline batteries.

■ **Life of the battery**

- The battery provided has been kept in factory storage so it may last shorter than the specified battery life.
- Depending on the conditions of use such as the temperature, battery life may be shorter than specified.
- When using a battery that has been kept in storage, battery life may be shorter depending on the storage condition and the "Battery expiration date" as specified on the battery.

Hanging on a thick wooden wall or pillar

- The enclosed wall-mounting wood screw is for use on a wooden pillar or thick wooden wall.
- Please securely screw the wall-mounting wood screw for hanging straight into the wall.

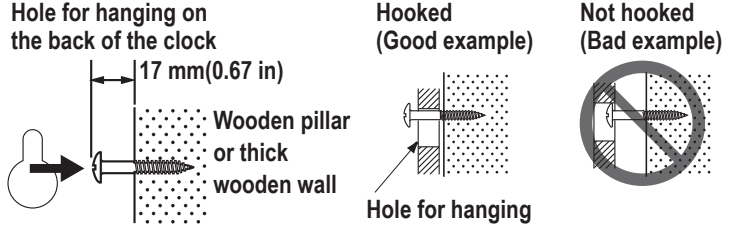

Hanging on other types of walls

- When hanging on a wall made from plasterboard, concrete etc., please use a commercially available hanging fixture suitable for hanging the weight of the clock on the structure and material of the wall. Do not use an adhesive or suction cup fixture. Doing so may cause the clock to fall.

Please follow the instructions for the chime to function correctly.

1 Steps for use

- Open the door by putting your finger through the finger hole and pull.**
- Turn the hands knob in the direction of the arrow and set time to 5:50.**



- Insert the battery into the battery holder in the same way as shown.** Once the battery is inserted, the chime will start.
- Press RESET**
 - To prevent malfunction, make sure to press this after the battery is inserted.
 - When RESET is pressed, the chime will be set at 5:00
 - RESET can be pressed even while the chime is sounding.
- Make sure to turn the hands knob in the direction of the arrow to set the current time.**
 - The time can be set even when the chime is sounding.
- Setting the chime switch**

ON Chime on **OFF** Chime off *Chime is set at OFF during shipment.
- Close the door.**

- * Right after the battery has been inserted or when RESET has been pressed, the chime will sound 5 times.
- * The chime will not sound during steps ③～⑤ when in a dark place.
- * **When the Chime Switch is OFF, the chime will not sound at step ⑤.**
- * Every time the minute hand passes 12 (0 minutes), the number of times the chime will sound will increase by 1.
- * Even if the minute hand is turned anti-clockwise, the chime sound will still increase by 1, so when setting the time, make sure the minute hand turns clockwise.

☞ **Chime function**

◎**Setting the chime switch**

- ON** Every hour on the hour. The number of times the chime will sound will be according to the time. Every half hour. The chime will sound once. *Due to the light sensor, the chime will not sound in dark places.

OFF The chime will not sound.

◎**About the half hour chime**

- * Even if the time is set at 30 minutes by turning the hands knob, the chime will not sound.

* When turning the hands knob, it is possible the half hour chime will sound at a different time from the displayed time. After some time, when the chime sounds on the hour once, it should return to normal function.

◎**About the chime volume**

The volume cannot be adjusted. By covering the finger hole, the chime sound can be lowered.

◎**Checking and testing the chime ... Test, SET button**

By pressing the Test button, the number of times the chime will sound will be according to the time displayed.

E.g. if the time is 10:09, the chime will sound 10 times.

When the number of times the chime sounds is incorrect,

- Correct the number of chime sound by pressing the **SET button**.
- Press the SET button once will increase the number of chime sound by 1.
- Pressing the button when the chime sounds 12 times, will return the chime to sound once.

Please also correct the time by following steps ①～⑦ above.

2 Installation of the clock

◎The chime will not function correctly if the clock is tilted.

Free standing To avoid the clock from falling over or overturning, place on a level surface with minimal vibrations.

◎When the clock is used free standing, stick the rubber cushion provided on the 4 corners on the bottom of the clock.

Hanging **CAUTION**

- !** When hanging the clock, check that the hole for hanging is securely hung on the wall fixture (wood screw) by moving it gently across and up and down.

- !** Hang vertically. If hung on its side, it may come off from the fixture.



- !** Place the clock in a location where the door's vibration will not be felt when it is being opened/closed.

- !** When using a commercially sold hanging fixture, choose one that enables the hole for hanging to fit securely.

The clock may fall if hung incorrectly.

각부 명칭과 역할

○그림은 조작 설명용이므로 실제 상품과 다를 수 있습니다.

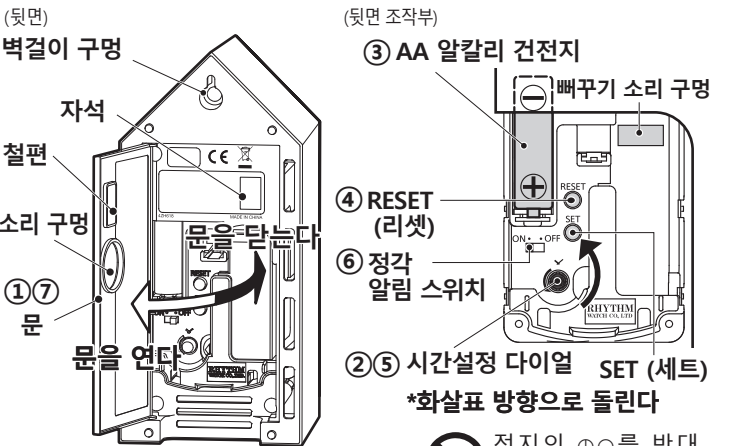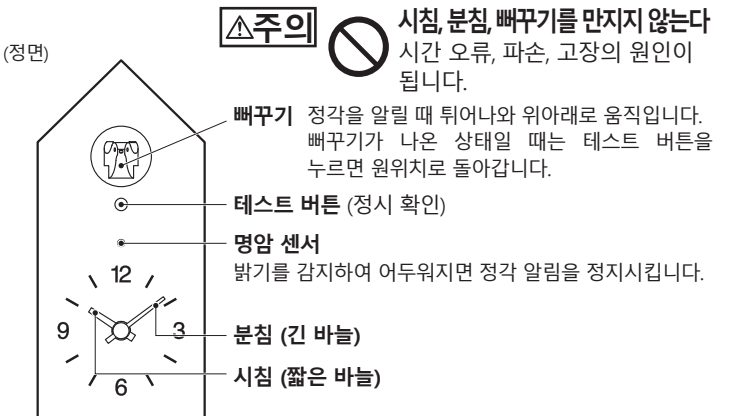

자석 및 철편에 철가루 등의 이물질이 묻으면 흡착력이 약해질 수 있습니다. 묻었을 때는 제거하십시오.

누액이나 발열의 원인이 되어 고장이나 부상의 원인이 됩니다.

경고 자석 주의

정기권 및 현금 카드 등의 자기 기록 방식의 물건이나 자력에 영향을 받는 기기, 예를 들어 심장 페이스 메이커 등에 가까이 대지 마십시오. 데이터 소실이나 오작동의 원인이 됩니다.

주의 전지 교환에 대해

! 전지의 누액이나 파열을 막기 위해 다음과 같은 사항을 준수하십시오.

- 시계가 멈추었을 때는 새 전지로 교환하거나 전지를 꺼낸다.
- 움직이고 있더라도 1년에 1번 정기적으로 교환한다.

누액이다

전지를 교환했을 때는 ‘**사용 순서**’를 참고하여 **표시 시각과 정각 알림을 맞추십시오.**

■ **전지의 종류에 대해**


- 일반적으로 충전식 전지는 전압이 낮으므로 본 제품에는 사용하지 마십시오.
- 망간 건전지는 알칼리 건전지보다 전지 수명이 짧아집니다.

■ **전지의 수명에 대해**

- 온도 등의 사용 조건에 따라 제품 사양보다 전지 수명이 짧아질 수 있습니다.
- 비축해 둔 전지를 사용한 경우, 보관 상태나 건전지에 표시된 ‘사용 권장 기한’에 따라 전지 수명이 짧아질 수 있습니다.

나무 기둥 또는 나무 재질의 두꺼운 벽면에 거는 경우

- 부속의 벽걸이용 나무 나사는 나무 기둥 또는 나무 재질의 두꺼운 벽면용입니다.
- 벽걸이용 나무 나사를 수직으로 벽면에 단단히 조여 고정하십시오.

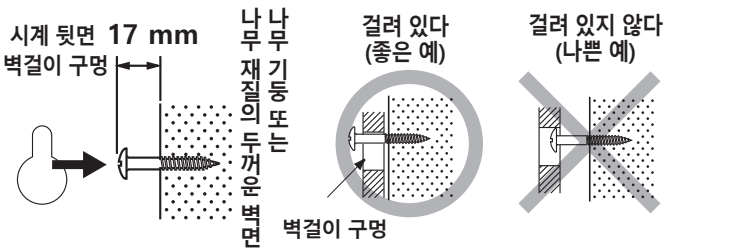

그 밖의 벽면에 거는 경우

- 석고 보드, 콘크리트 등의 벽면에 거는 경우에는 벽의 재질・구조와 시계의 중량이 맞는 시판의 걸이를 사용하십시오. 이 때 점착식이나 흡반식은 시계가 낙할 우려가 있으므로 사용하지 마십시오.

정확하게 정각을 알리기 위해 반드시 순서에 따르십시오.

1 사용 순서

① **소리 구멍에 손가락을 걸어 문을 연다**

② **시간설정 다이얼을 화살표 방향으로 돌려 5시 50분에 맞춘다**



③ **전지 홀더의 ⊕ ⊖ 표시에 맞춰 전지를 넣는다**

전지를 넣으면 정각 알림을 시작합니다.

④ **RESET (리셋) 을 누른다**

- 오작동을 막기 위해 전지를 넣은 후에는 반드시 누르십시오.
- RESET을 누르면 “5시” 정각 알림으로 세팅됩니다.
- 정각 알림 도중에도 누를 수 있습니다.

⑤ **시간설정 다이얼을 반드시 화살표 방향으로 돌려 현재 시각에 맞춘다**

- 정각 알림 도중에도 시각을 맞출 수 있습니다.

⑥ **정각 알림 스위치를 설정한다**

ON 정각 알림 **OFF** 정각 알림 취소 *출하 시의 설정은 **OFF** 입니다.

⑦ **문을 닫는다**

※전지를 넣은 직후 또는 RESET을 누르면 5번 울립니다.
※어두운 곳에서는 ③~⑤에서 정각 알림이 작동하지 않습니다.
※정각 알림 스위치가 **OFF**일 때는 ⑤에서는 정각 알림이 작동하지 않습니다.

※정각 알림 횟수는 분침이 숫자 12 (0분)를 통과할 때마다 1회 증가합니다. 분침이 반시계 방향으로 통과해도 증가하므로 시각을 맞출 때는 분침을 반드시 시계 방향으로 돌려십시오.

☞ 정각 알림 기능

◎**정각 알림 스위치 설정**

- ON** 매시 정각의 수만큼 울립니다. 매시 30분에 1회 울립니다.
* 명암 센서로 인해 어두운 곳에서는 울리지 않습니다.

OFF 울리지 않습니다.

◎**30분 알림에 대해**

- ※시간설정 다이얼을 돌려 30분에 맞추더라도 울리지 않습니다.
- ※시간설정 다이얼을 돌린 경우, 30분 알림은 표시 시각과 다르게 울리는 경우가 있습니다. 시간이 경과하고 1회 정시 정각 알림이 울리면 정상적으로 돌아옵니다.

◎**정각・30분 알림 음량에 대해**

음량은 조절할 수 없습니다. 문의 소리 구멍을 막으면 소리가 작아집니다.

- ◎**정각 알림 확인과 수정 ……… 테스트, SET (세트) 버튼**

테스트 버튼을 누르면 바늘이 가리키는 숫자의 수만큼 울립니다. 예를 들어 10시 9분을 가리키고 있을 때는 10번 울립니다.

정각 알림 횟수가 올라르지 않을 때는

SET(세트) 버튼으로 정각 알림 횟수를 수정하십시오.
 - SET 버튼을 1번 누르면 정각 알림 횟수가 1회 증가합니다.
 - 12회일 때에 누르면 1회로 돌아옵니다.
또는 상기 ①～⑦에 따라 시각을 다시 맞추십시오.

2 설치에 대해

◎기울인 상태에서 정각 알림을 작동시키면 정상적으로 움직이지 않습니다.

자립 전도나 낙하를 막기 위해 평평하고 진동이 적은 안정된 곳에 세워주십시오.

◎세워서 사용할 때는 바닥 부분 4곳에 부속의 쿠션 고무를 붙이십시오.



걸기 주의

- !** 걸었을 때는 상하, 좌우로 가볍게 움직여 벽걸이 구멍에 걸이(벽걸이용 나무 나사)가 단단히 걸려 있는 것을 확인하십시오.

- !** 수직으로 거십시오.기울어지면 걸이에서 빠질 우려가 있습니다.

- !** 문을 여닫을 때의 진동이 전해지지 않는 곳에 설치하십시오.

- !** 시판의 걸이를 사용할 때는 벽걸이 구멍에 단단히 걸리는 것을 선택하십시오.

거는 방법이 부적절한 경우, 시계가 낙할 우려가 있습니다.