MUJI 無印良品

リビングでもダイニングでもつかえるソファチェア用カバー

リビングでもダイニングでもつかえるソファチェア・オーク材用 リビングでもダイニングでもつかえるソファチェア・ウォールナット材用

この取扱説明書は、各色・各生地のカバーに共通です。

取扱説明書

この度は本製品をお買い上げいただき、誠にありがとうございます。 ご使用前に本書をよくお読みいただき、内容を理解した上で、正しくお使いください。 また、本書はいつでも確認できるように大切に保管してください。

保存用 ご使用方法

廃棄について

お手入れ方法

●廃棄の際は、居住地域の自治体のルー ルに従い、処分してください。

●リビングでもダイニングでもつかえる

品質表示ラベルを参照してください。

ソファチェア(別売り)に付属の組立・

取扱説明書及びカバーに縫いつけの

株式会社 良品計画

お問い合わせ先

お客様相談室でんわ 00,0120-14-6404

製品のお問い合わせは、お買い上げの

販売店、もしくは下記お客様相談室まで

2023年8月22日

重要なお知らせ(安全上のご注意)

ここに示した警告・注意事項はお使いになる方や他の人への 危害や損害を未然に防ぐためのものです。必ずお守りください。

○ してはいけない 「禁止」 の内容です。


↑ 警告 死亡や重傷などに結びつくおそれがあるもの

- ●不要になった梱包材は、幼児の手の届くところに置かないでください。頭から かぶるなどしたときに、口や鼻をふさぎ、窒息するおそれがあります。
 - 原因になります。 ●タバコの火などを商品に落とさないでください。火災の原因となります。

お願い(その他 注意)

●直射日光の当たる場所で使用や保管しないでください。変色の原因になります。 ●湿った状態で使用しないでください。色移りや変色の原因となります。(特に 濃色製品は使用中の強い摩擦でも色移りすることがあります。)

パーツリスト

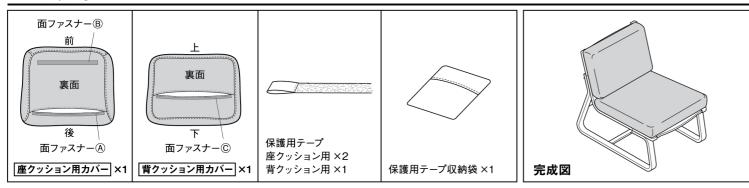

装着方法

●床や壁への接触によるキズや破損にご注意ください。 ○保護用テーブは面ファスナーによる生地のひっかけや、すりキズから保護するためのものです。クッションに装着する時は面ファスナーからはがさないでください。 ●カバーの装着および取りはずし時は、セーターなどの衣類が面ファスナー つかないよう注意ください。面ファスナーによって衣類がキズつくことがあります。

座クッションを折りたたむようにして、カバーに入れて装着してください。その際、 生地やクッションをキズつけるおそれがありますので、保護用テープははがさ

クッションを入れ、形を整えたら面ファスナー例の保護用テープをはずして 面ファスナーを閉めてください。



※装着後はカバーの隅まで、まんべんなく座クッションが入るように、揉む、叩くなど して形を整えてください。


2 1 と同じように、背クッションカバーの面ファスナー⑥が付いてる取出し口を 開き、下図のように背クッションを折りたたむようにして、カバーに入れて装着 してください。その際、生地やクッションをキズつけるおそれがありますので、 保護用テープははがさないでください。


クッションを入れ、形を整えたら面ファスナー©の保護用テープをはずして



※装着後はカバーの隅まで、まんべんなく背クッションが入るように、揉む、叩くなど して形を整えてください。

3 座クッションカバー裏面の面ファスナー®に付けてある保護用テープをはがし、ソファチェア大はの原子に置え、サンファチェア大はの原子に置え、サンファチェアナは、 ソファチェア本体の座面に置き、次に背クッションを置いてください。

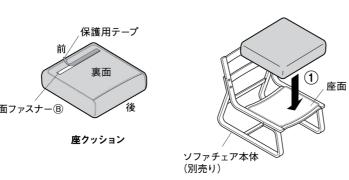

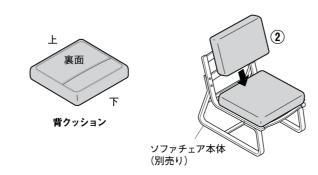

331502112-027C-001-JPEN

MUJI 無印良品

User Guide

Thank you for your purchase.

Retain for future reference

Disposal

• To dispose of the product, follow the rules implemented by your local government.

LIVING DINING SOFA CHAIR / OAK Care Instruction LIVING DINING SOFA CHAIR / WALNUT

• Refer to the User Guide provided with LIVING DINING SOFA CHAIR (sold separately) and the care label on the cover.

Contact Information

Direction for Use

22 August 2023 For enquiries regarding the product, please contact the store of purchase

Important Information (Safety Advice)

Store this guide in an easily accessible place for future reference.

Read this User Guide before use to ensure correct use of the product.

Cover for LIVING DINING SOFA CHAIR

This User Guide applies to all colours and fabric types.

The warnings and cautions indicated here are intended to prevent harm to the users and other individuals or damage to the property. The instructions must be followed.

Actions that are prohibited.


NARNING Hazards that may lead to death or serious injury

- Do not leave unnecessary packaging materials within reach of small children. Children may accidentally pull them over their head, cover their mouth and/or nose and suffocate
- Do not place a heat source such as a heater near the product. Doing so may Do not drop lit cigarettes, etc. onto the product. Doing so may cause a fire.

Note (Other Caution)

- Do not use or store in a place exposed to direct sunlight. Doing so may cause
- Do not use in wet conditions. Doing so may cause colour transfer or discolouration (In particular, colour transfer can occur even from strong friction in dark-coloured


Parts

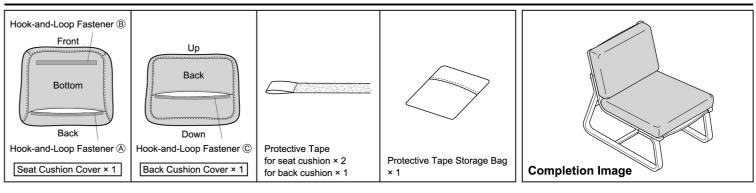

How to Attach


- Be careful not to make scratches or damage on the floor or walls during the O The protective tape is used to prevent snags or scratches from the hook-and-loop fastener. Do not remove the protective tape from the hook-and-loop fastener when attaching the cover to the cushion.
 - Be careful not to get your clothing such as sweater caught when attaching and removing the cover. The hook-and-loop fastener may scratch the clothing.
- Open hook-and-loop fastener $\ensuremath{\text{\textcircled{A}}}$ at the opening of the seat cushion cover, then bend the seat cushion as shown in the illustration below and insert it into the cover. Do not take off the protective tape at this time, as this may lead to the fabric and cushion becoming scratched.

Insert the cushion, straighten it out, then remove the protective tape from hook-andloop fastener (A) and close the fastener



- * After attaching the cover, press and pat the cover so that the seat cushion fits
- In the same way as in 1, open hook-and-loop fastener © at the opening of the back cushion cover, then bend the back cushion as shown in the diagram below and insert it into the cover. Do not take off the protective tape at this time, as this may lead to the fabric and cushion becoming scratched.

Insert the cushion, straighten it out, then remove the protective tape from hook-andloop fastener © and close the fastener.

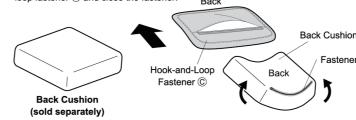

* After attaching the cover, press and pat the cover so that the back cushion fits

Remove the protective tape attached to Hour-loop ractions. Remove the protective tape attached to hook-and-loop fastener (B) on the bottom of Next, place the back cushion on the sofa chair.

