

スチールユニットシェルフ・スチール棚セット・大・ライトグレー  
スチールユニットシェルフ・スチール棚セット・ワイド・大・ライトグレー  
スチールユニットシェルフ・スチール棚セット・大・ダークグレー  
スチールユニットシェルフ・スチール棚セット・ワイド・大・ダークグレー

STEEL UNIT SHELF / LIGHT GREY SHELF SET / L  
STEEL UNIT SHELF / LIGHT GREY SHELF SET / WIDE / L  
STEEL UNIT SHELF / DARK GREY SHELF SET / L  
STEEL UNIT SHELF / DARK GREY SHELF SET / WIDE / L

## 組立・取扱説明書 User Guide

### 日本語

この度は本製品をお買い上げいただき、誠にありがとうございます。  
1ページからお読みください。

### English

Thank you for your purchase.  
Read these instructions from Page 12.

4550002999131 STEEL UNIT SHELF / LIGHT GREY SHELF SET / L  
4550002999094 STEEL UNIT SHELF / LIGHT GREY SHELF SET / WIDE / L  
4550723102087 STEEL UNIT SHELF / DARK GREY SHELF SET / L  
4550723102193 STEEL UNIT SHELF / DARK GREY SHELF SET / WIDE / L

2025 / 9 / 19

333666171-020-003-JPEN

スチールユニットシェルフ・スチール棚セット・大・ライトグレー  
スチールユニットシェルフ・スチール棚セット・ワイド・大・ライトグレー  
スチールユニットシェルフ・スチール棚セット・大・ダークグレー  
スチールユニットシェルフ・スチール棚セット・ワイド・大・ダークグレー

## 組立・取扱説明書

この度は本製品をお買い上げいただき、誠にありがとうございます。

ご使用前に本書をよくお読みいただき、内容を理解した上で、正しく組み立て、正しくお使いください。

また、本書はいつでも確認できるように大切に保管してください。

### もくじ

### ページ

重要なお知らせ（安全上のご注意）	2～3
パーティリスト	4
各部の名称	4
組立方法	5～8
ご使用方法	9～10
お手入れ方法	10
製品仕様	11
お問い合わせ先	11

# 重要なお知らせ (安全上のご注意)

必ずお守りください。

本書には、お使いになる方や他の人への危害と財産への損害を未然に防ぎ、安全に正しくお使いいただくために、重要な内容を記載しています。

次の内容（表示・図記号）をよく理解してから本文をお読みになり、記載事項をお守りください。

## ●表示の説明

誤った使い方をしたときに生じる危害や損害の程度を区分して説明しています。



### 警告

使用者が死亡または重傷（※1）を負うことが想定される内容です。



### 注意

使用者が傷害（※2）を負うことや物的損害（※3）が発生することが想定される内容です。

## ●図記号の説明

お守りいただく内容を次の図記号で説明しています。（次は図記号の例です。）



してはいけない「禁止」の内容です。



実行しなければならない内容です。

※1 重傷とは、失明やケガ、やけど、骨折、中毒、感電などで後遺症が残るもの及び、治療に入院、長期の通院を要するものをさします。

※2 傷害とは、治療や入院や長期の通院を要しない、ケガ、やけどをさします。

※3 物的損害とは、家屋、家財にかかる拡大損害をさします。



### 警告



禁止

- お子さまが製品にぶら下がったり、登ったりさせないでください。製品の転倒や破損によりケガをするおそれがあります。
- 製品の上に立ったり、腰かけたり、踏み台代わりに使用したりしないでください。製品の転倒や破損によりケガや破損の原因となるおそれがあります。
- 上部のみに片寄って収納しないでください。バランスをくずし不安定になりやすく、製品が転倒してケガをするおそれがあります。
- 上部に重たい物は置かないでください。地震などで物が落ちたり、本体ごと倒れたりして、ケガをするおそれがあります。
- 製品で電化製品の電源コードを踏まないでください。コードが破損し、感電や火災の原因となるおそれがあります。
- 不要になった梱包材は幼児の手の届くところに置かないでください。頭からかぶるなどしたときに、口や鼻をふさぎ窒息するおそれがあります。
- フィッティングパーツは小さな部品です。幼児の手の届く所に置かないでください。また、紛失しないでください。お子さまが誤飲した場合、窒息などのおそれがあります。



行う

- AV機器を置く場合は、そのAV機器の取扱説明書をよく読み正しく設置してください。また、十分に隙間をあけて通気性をよくしてご使用ください。電気製品の故障や火災の原因となります。
- 建物の壁や床、天井などに固定用金具（専用もしくは市販）や固定部材でしっかりと帆立を固定してください。地震などで製品が倒れ、ケガをするおそれがあります。



### 注意



禁止

- 製品を連結した状態で持ち上げないでください。落下によるケガの原因となるおそれがあります。
- 棚板を持って、持ち上げないでください。棚がはずれてケガや器物破損の原因となるおそれがあります。

# 重要なお知らせ (安全上のご注意)

必ずお守りください。 (つづき)

## ⚠ 注意

 禁止	<ul style="list-style-type: none"><li>●組み立てが不完全なまま使用しないでください。固定部分がはずれてケガの原因となるおそれがあります。</li><li>●移動する際は、引きずらないでください。製品の破損、床面へのキズの原因となります。</li><li>●本来の用途以外では使用しないでください。思わぬ事故やケガの原因となります。</li><li>●耐荷重を超えて物をのせたり、耐荷重内でも一部に片寄ってのせたりしないでください。変形や破損によりケガをするおそれがあります。</li><li>●棚板の上に直接熱い物を置いたり、ストーブなどの熱を当てたりしないでください。熱くなった部分に触るとヤケドをする可能性があります。</li><li>●修理および改造はしないでください。製品の強度が弱くなりケガをするおそれがあります。</li><li>●屋外では使用しないでください。変形や劣化によりケガをする原因となります。</li></ul>
	<ul style="list-style-type: none"><li>●ボルトなどフィッティングパーツのゆるみがないか定期的に点検し、ゆるみはじめたら締め直してください。そのまま使用すると破損、ケガの原因となります。</li><li>●各部にグラつきや異音などの異常がないか定期的に点検し、異常が認められた場合は使用を中止してください。</li><li>●本体が破損した場合、直ちに使用を中止してください。破損したまま使用するとケガをする原因となります。</li><li>●組み立ては必ず2人以上で行ってください。1人では製品破損や製品落下などによりケガをする原因となります。</li><li>●移動する際は収納物を取り除いてから、2人以上で移動させてください。1人で引きずったりするなど無理に移動させるとケガや製品が破損する原因となります。</li><li>●引越しなどで移動をする際は、組み立て前の状態に戻してから運んでください。パーツがはずれて、ケガや製品が破損する原因となります。</li><li>●強度を保つために必要なパーツは取り付けた状態で使用してください。強度パーツが不足していると強度が低下し、揺れや破損によりケガをする原因となります。詳しくは、ユニットシェルフ・パーツ必要数確認表をご確認ください。</li></ul>

## お願い (その他 注意)

	<ul style="list-style-type: none"><li>●平坦で安定した場所に設置してください。不安定な場所での使用は、製品がゆがんだり、破損の原因となるおそれがあります。</li><li>●お手入れの際は、シンナーなどの有機溶剤を含んだ布でふかないでください。変色や変形の原因となります。</li><li>●開封後の梱包材は、居住地域の自治体のルールに従い、処分してください。</li><li>●組み立ての際は、手袋などをつけて作業してください。思わぬケガの防止になります。</li></ul>
--	--

# パーツリスト

大 ワイド・大 共通

※イラストには **ワイド・大** を使用しています。

<b>(A) 帆立 ×2</b> 	<b>(B) 棚板 ×5</b> 
<b>(C) クロスバー ×4</b> 	<b>(D) アジャスター ×4</b> (※スチール棚セットは <b>(A)帆立</b> に取り付けられています) 
<b>フィッティングパーツ</b>	
<b>(a) ボルト (クロスバー中心部) ×2</b> 	<b>(b) 袋ナット (クロスバー中心部) ×2</b> 
<b>(c) ボルト ×8</b> 	<b>(d) 座金 ×8</b> 
	<b>(e) 六角レンチ (4 mm) ×1</b> 

## 各部の名称

<b>(完成図)</b>	<b>(完成図)</b>

※イラストには **ワイド・大** を使用しています。




- 組み立ては、必ず2人以上で行ってください。  
1人では製品破損や製品落下などによりケガをする原因となります。
- 組み立てには電動工具は使用しないでください。  
無理に負荷がかかると、製品破損によりケガをするおそれがあります。
- 組み立て後、1週間程度経過しましたら、ボルトを締め直してください。  
使い始めはゆるんでいる場合があり、そのまま使用すると破損、ケガの原因となります。
- 組み立て、設置の際は、床や既存の家具がキズつかないようご注意ください。

## 1

⑧棚板の四隅に固定されているフック用ボルトをそれぞれ⑨六角レンチでフックが自由に動く状態までゆるめてください。

※棚の全てのフックのボルトが図のような状態になるまで  
ゆるめ、フックはハの字になるようにしてください。

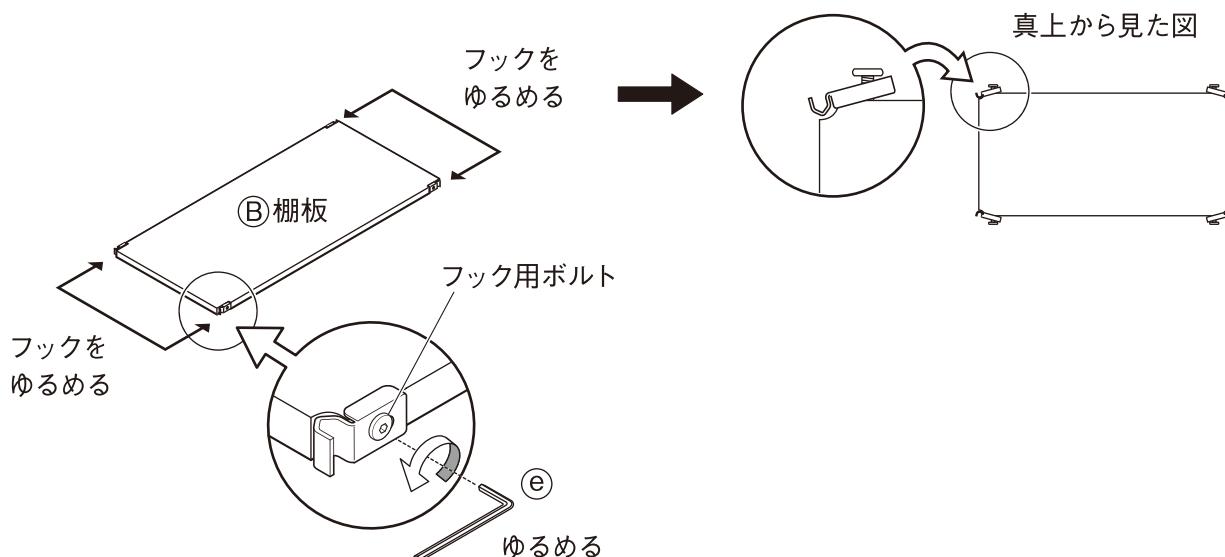


# 組立方法 (つづき)

※イラストには **ワイド・大** タイプを使用しています。


## 2 最下段の棚板を取り付けます。

② 棚板の表を上にして斜めにし、背面側のフック2ヶ所をまず、**ポイント①**帆立の帆立柱に引っ掛け、**ポイント②**前面側のフックを指で手前に押さえながら、**ポイント③**帆立柱に引っ掛けて押し込みます。フック用ボルトを**e**六角レンチで軽く締めます。(きつい状態から半回転程度ゆるめたらくらいにしておきます。)



**ポイント①**  
引っ掛ける

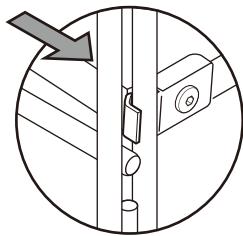

**ポイント②**  
押さえる

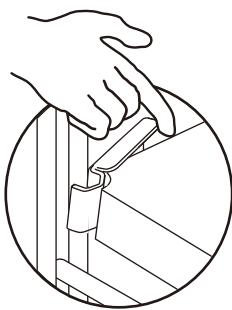

**ポイント③**  
押し込む

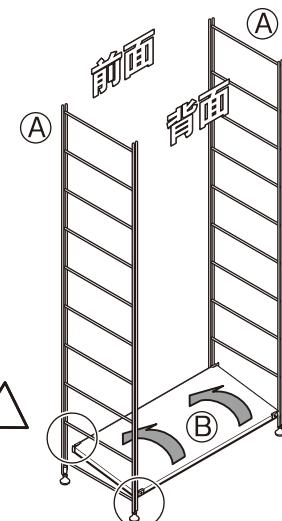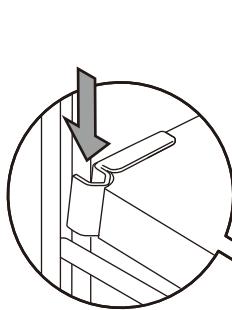


**注意**  
● 取り付ける際、指をはさまない  
ようご注意ください。ケガをする  
おそれがあります。

### 棚板のはめ込み


棚板がはまりにくい状態の時は、棚板上部を軽くたたいて棚板をはめ込んでください。それでもはまらない場合は、全体的にもう少しフックをゆるめるようにすると、はまりやすくなります。

**お願い**  
(その他 注意)

フック用ボルトを軽く締める際は締めすぎないでください。残りの棚板がはまりにくくなる場合があります。

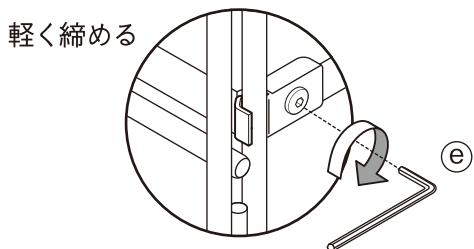

## 3 次に最上段の②棚板を手順 2 と同じ要領で取り付けます。

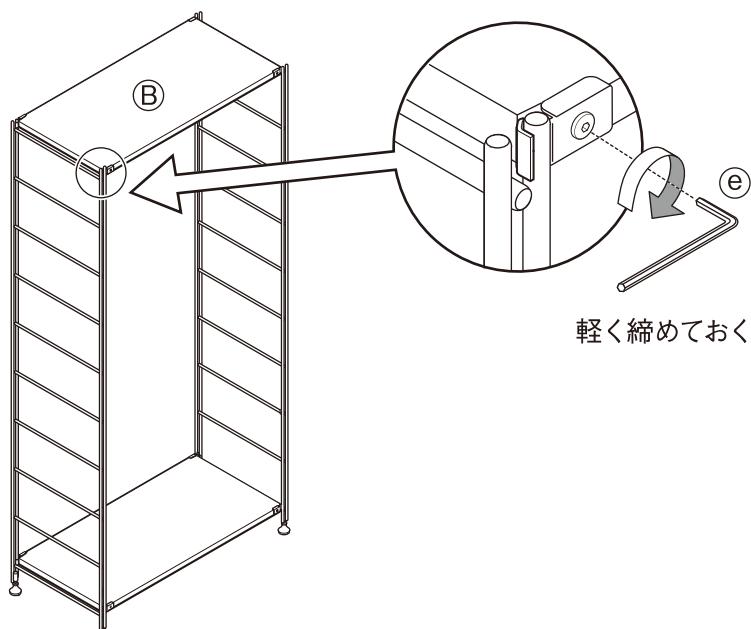


# 組立方法（つづき）

※イラストには **ワイド・大** タイプを使用しています。



4

手順 2と同じ要領で残りすべての⑧棚板を取り付けてください。  
※収納する物の高さに応じて、取り付け位置を決めてください。

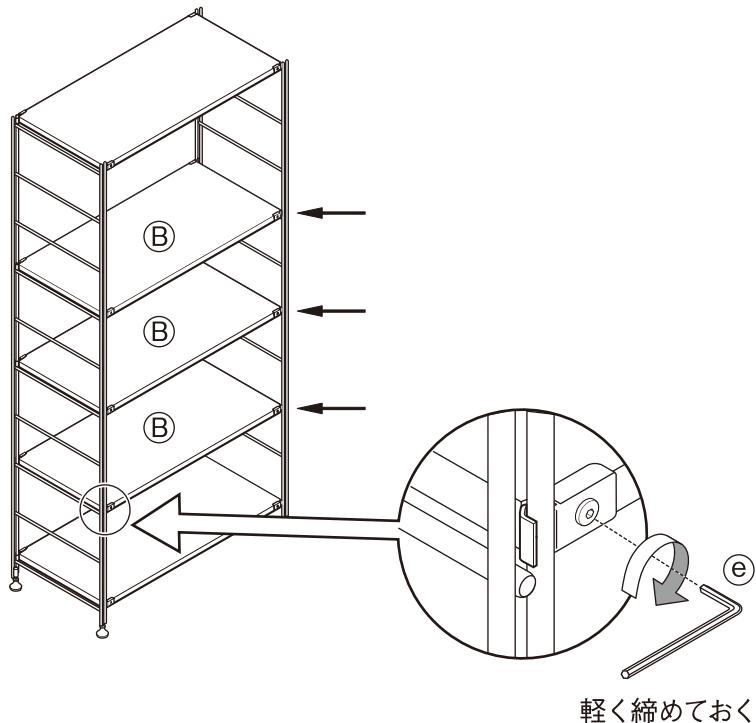

5

⑤クロスバーの中心を重ねて⑥袋ナット（クロスバー中心用）と  
⑦ボルト（クロスバー中心用）を軽く締めてください。

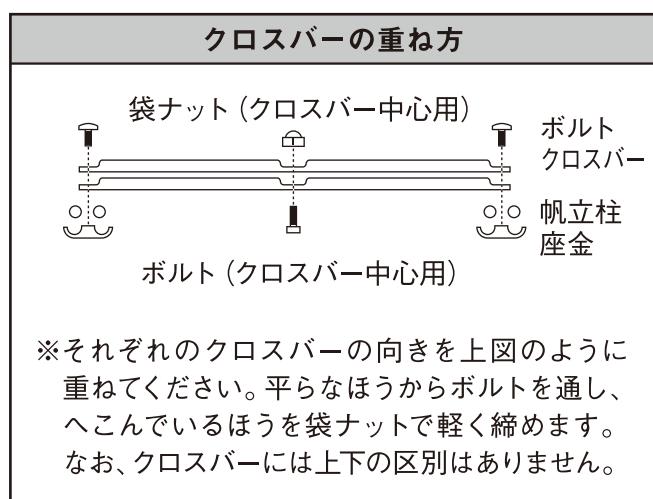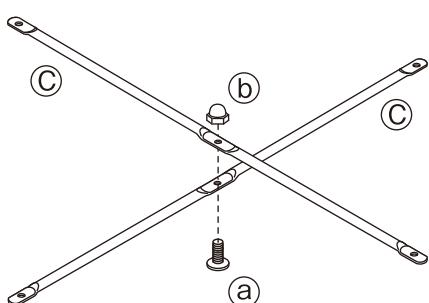


# 組立方法 (つづき)

※イラストには **ワイド・大** タイプを使用しています。

6

組み立てたクロスバーを、背面から④座金と⑤ボルトで⑥帆立に固定します。  
その際、クロスバーは⑦袋ナットが外向きになるように取り付けます。


お願い (その他 注意)	<ul style="list-style-type: none"><li>クロスバーのボルト穴の位置が合わない場合は、本体がゆがんでいる場合がありますので、棚板のフック用ボルトを少しゆるめてください。</li><li>クロスバーの⑤ボルトを締める際は全体を少しずつ締めてください。1箇所をきつくなめてしまうと、次が締めにくくなる場合があります。</li></ul>
-----------------	---

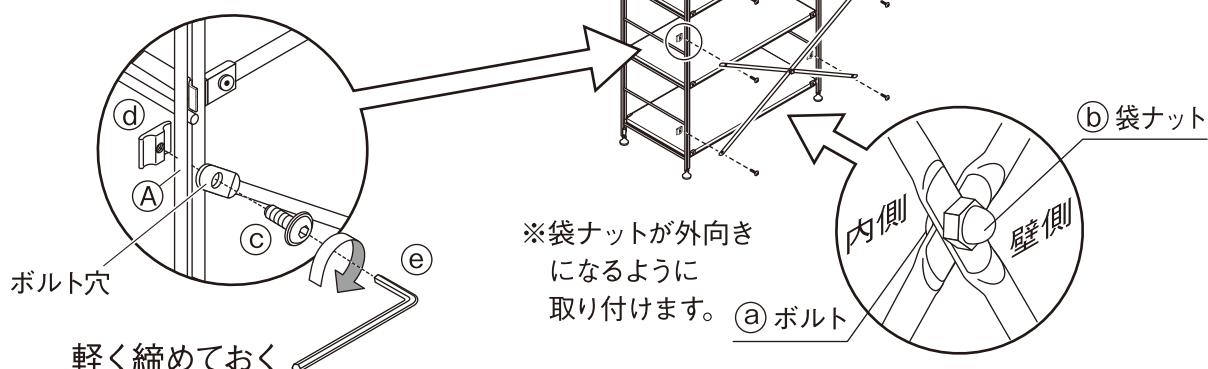

7


最後に、手順 2～4 で軽く締めた⑧棚板のフック用ボルトと、手順 5～6 で軽く締めたクロスバーの⑨⑩ボルトを、⑪六角レンチできつくなるまで締めてしっかりと固定します。(全部で 30 箇所)

お願い (その他 注意)	棚板のフック用ボルトは、前面、背面と交互に少しずつ締めるようにしてください。1箇所のみをきつくなめてしまうと棚がゆがんで装着され、最後のフックが締めにくくなります。
-----------------	--

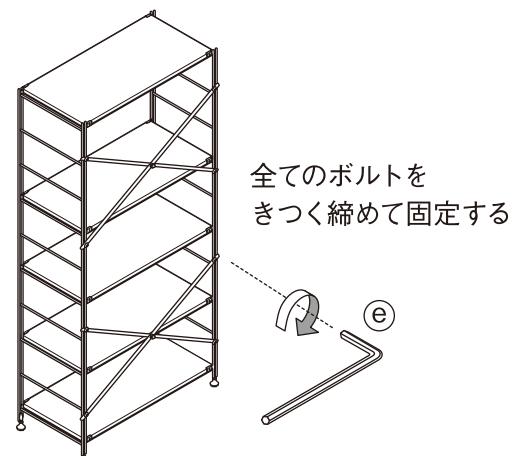

8

製品設置後に製品がガタつかないよう、⑫アジャスターで調整してください。

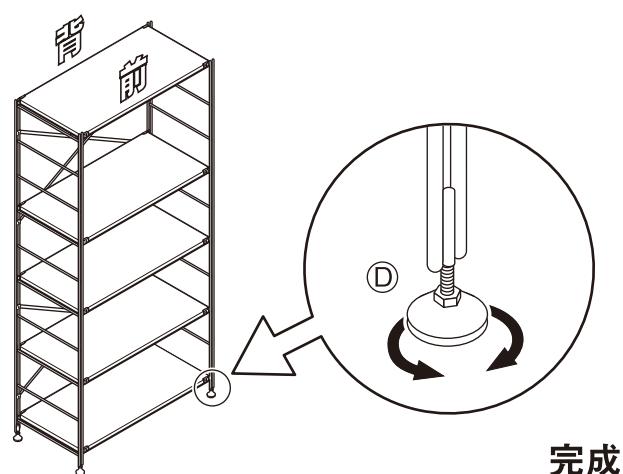

# ご使用方法

## 【ユニットシェルフ・パーツ必要数確認表】

帆立サイズ パーティ名	特大	大	中	小	ミニ
棚板または帆立補強パーティ	4	3	3	2	3
クロスバー	2	2	1	1	0

※組み立て位置によっても強度は異なります。必要数量以上でも一部に片寄っていると強度に影響する場合があります。

特に上下を空けたり、長い間隔で空けると搖れの原因にもなりますので、設置の際は均等になるようにご注意ください。

※幅112cmタイプと幅42cmタイプは帆立補強パーティのご用意がありませんので、棚板を必要数取り付けてください。

## 【移動について】

### 〈組み立てた状態で動かす場合〉


#### ●棚板を持って、持ち上げないでください。

棚がはずれて物が落ち、思わぬケガや器物破損の原因となるおそれがあります。

組立後の移動は必ず収納物を取り除いてから2人以上で左右から帆立部分をしっかり持って移動してください。

#### ●床面を引きずったり、押したりしないでください。


床面のキズや破損の原因となるおそれがあります。

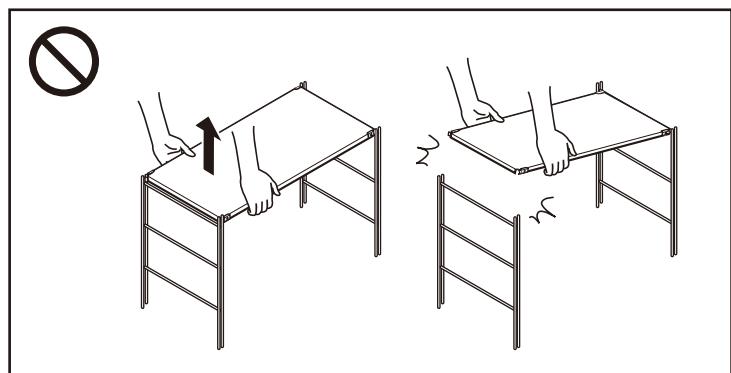

### 〈引越しなどで運ぶ場合〉

#### ●引越しなどで移動をする際は、組み立て前の状態に戻してから運んでください。

(パーティがはずれてケガや製品が破損する原因となります)

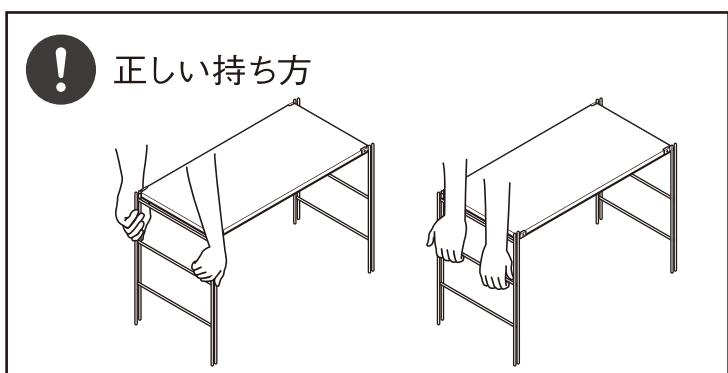


# ご使用方法（つづき）

## ⚠ 収納する際のご注意

- 上部のみに片寄って収納しないでください。バランスをくずし不安定になりやすく、製品が転倒してケガをするおそれがあります。
- 上部に重たい物は置かないでください。地震などで物が落ちたり、本体ごと倒れたりして、ケガをするおそれがあります。

## 🚫 不安定になりやすい使い方 (例)

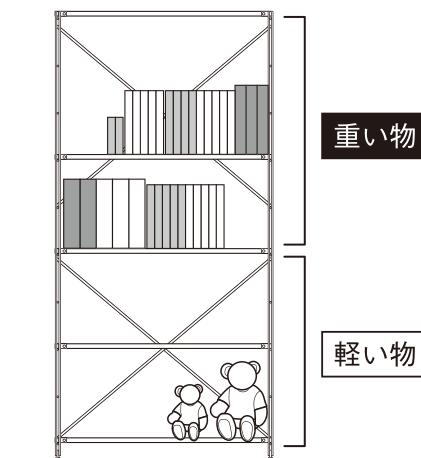

## 廃棄について

- 廃棄の際は、居住地域の自治体のルールに従い、処分してください。

# お手入れ方法

## 保守・点検

- 破損、変形した状態では使用しないでください。
- ネジ・金具類は、ゆるみやグラつきがないか定期的に点検し、ゆるみはじめたら、しっかり締め直してください。ゆるんだままだと、ケガや脚・本体の破損、床面のキズの原因となります。また、ガタつきや異常音の発生の原因となります。

## 金属部のお手入れ

- 通常のお手入れはやわらかい布で乾ぶきしてください。
- 汚れがひどい時は、3～5%程度に薄めた中性洗剤を浸した布で汚れを落とし、その後、水で浸した布で洗剤をよくふき取ってください。次に乾いたやわらかい布で軽くふいた後で自然乾燥してください。

## 製品仕様

品名	スチールユニットシェルフ・スチール棚セット ・大		スチールユニットシェルフ・スチール棚セット ・ワイド・大			
	ライトグレー	ダークグレー	ライトグレー	ダークグレー		
JAN	4550002999131	4550723102087	4550002999094	4550723102193		
製品寸法	幅 580 × 奥行 410 × 高さ 1755 mm		幅 860 × 奥行 410 × 高さ 1755 mm			
製品重量	約 19 kg		約 26 kg			
用途	収納家具					
全耐荷重	100 kg					
耐荷重 棚板1枚あたり	30 kg (※棚全体で均等に荷重をかけた場合)					
材質	帆立：金属（鋼） 棚板：金属（鋼） 表面加工：帆立 エポキシ樹脂粉体塗装 ：棚板 エポキシ樹脂粉体塗装					

Made in Taiwan

## お問い合わせ先

商品のお問い合わせは、お買い上げの販売店もしくは下記お客様相談室までご連絡ください。

**株式会社 良品計画**

お客様相談室でんわ

 0120-14-6404

S1Y60322

## STEEL UNIT SHELF / LIGHT GREY SHELF SET / L

## STEEL UNIT SHELF / LIGHT GREY SHELF SET / WIDE / L

## STEEL UNIT SHELF / DARK GREY SHELF SET / L

## STEEL UNIT SHELF / DARK GREY SHELF SET / WIDE / L

## User Guide

Thank you for your purchase.

Read the User Guide before use to ensure correct use and assembly of this product.

Please store this User Guide in an easily accessible place for future reference.

Table of Contents	Pages
Important Information (Safety Advice)	13 - 14
Parts	15
Part Names	15
Assembly Instructions	16 - 19
Directions for Use	20 - 21
Care Instructions	21
Specifications	22
Contact Information	22

# Important Information (Safety Advice)

These instructions  
must be followed.

This User Guide contains important information for the safe use of this product in order to prevent harm to the user and others or damage to the property.

Please note the following contents (indications and graphic symbols) before reading the main contents of this User Guide, and follow the instructions given.

## • Explanations of Indications

The degrees of injury and damage that may arise when the product is used incorrectly are classified and explained with the following symbols.

 <b>WARNING</b>	Indicates a hazard with a level of risk which, if not avoided, could result in death or serious injury <sup>*1</sup> to the user.	 <b>CAUTION</b>	Indicates a hazard with a level of risk which, if not avoided, could result in injury <sup>*2</sup> to the user or property damage <sup>*3</sup> .
--	---	--	--

## • Explanations of Graphic Symbols

Instructions are given in the form of the following graphic symbols. (Examples of graphic symbols are as follows.)

 DON'Ts: Actions that are prohibited.	 DOs: Actions that must be taken.
--	--

\*1 "Serious injury" indicates blindness, injuries, burns, bone fractures, poisoning, or electric shocks which have long term effects and require hospitalisation and/or long-term hospital visits for treatment.

\*2 "Injury" indicates injuries or burns which do not require hospitalisation or long-term hospital visits for treatment.

\*3 Property damage indicates expanded damage that involves the house or household property.

 <b>WARNING</b>	
 DON'Ts	<ul style="list-style-type: none"><li>Do not allow children to swing from or climb on the product. Doing so may result in injury due to the product falling or becoming damaged.</li><li>Do not sit or stand on this product or use it as a stepladder. Doing so may result in injury due to the product falling or becoming damaged, or damage to the product.</li><li>Do not store items only in the top section. Doing so may cause the product to become unbalanced and unstable, resulting in the product tipping over and causing injury.</li><li>Do not place heavy items on the top section. Doing so may result in the items falling off in the event of an earthquake, etc., or may cause the product to fall resulting in injury.</li><li>Do not trap the power cord of an electrical appliance with the product. Doing so may damage the cord, resulting in electric shock or fire.</li><li>Do not keep unwanted packaging materials within reach of infants. Infants may accidentally pull packaging materials over the mouth or nose, causing suffocation.</li><li>The fitting parts are very small. Keep them out of reach of infants. Be careful not to lose small parts. Accidental swallowing of small parts by children may cause choking.</li></ul>
 DOs	<ul style="list-style-type: none"><li>When placing AV equipment on the product, be sure to read the user manual of the AV equipment before installation. Be sure to leave sufficient space for ventilation. Failure to do so may cause the electrical products to malfunction or result in fire.</li><li>Fix the frame securely to the wall, floor or ceiling of the building using fixing metal fittings (provided or sold separately) or fixing components. Earthquakes, etc. may cause the product to fall, resulting in injury.</li></ul>

<b>CAUTION</b>	
 <b>DON'Ts</b>	<ul style="list-style-type: none"><li>• Do not lift products that are connected together. Doing so may result in dropping the products, causing injury.</li><li>• Do not lift the product by holding the shelf board. The shelf may get detached resulting in injury or damage to property.</li><li>• Do not use the product unless fully assembled. Fixing parts may become detached, resulting in injury.</li><li>• Do not drag the product when moving it. Doing so may cause damage to the product or scratches to the floor.</li><li>• Use this product only for its intended purpose. Failure to do so may result in an unexpected accident or injury.</li><li>• Do not place a heavy item that exceeds the withstand load on the product, or place items within the withstand load on only one side of the product. Doing so may cause deformation or damage to the product, resulting in injury.</li><li>• Do not place hot items on the shelf boards, or apply heat from a heater, etc. Touching parts of the product that have become hot may cause burns.</li><li>• Do not attempt to repair or modify the product. Doing so may weaken the product, resulting in injury.</li><li>• Do not use the product outdoors. This may result in injury from deformation or degradation of the product.</li></ul>
 <b>DOs</b>	<ul style="list-style-type: none"><li>• Periodically inspect fitting parts such as bolts for looseness, and re-tighten any that have become loose. Continued use in this state may result in damage to the product or injury.</li><li>• Periodically inspect each part for abnormalities such as wobbling or abnormal noises, and stop using the product immediately if any problems are found.</li><li>• Stop using this product immediately if the unit is damaged. Continued use when damaged may result in injury.</li><li>• The product must be assembled by two or more people. Assembling alone may result in injury due to damage to the product or the product falling etc.</li><li>• When moving the product, remove any items stored in the product. The product must be moved by two or more people. Pulling the product or attempting to move it alone may result in injury or damage to the product.</li><li>• When moving the unit in order to move house, etc., disassemble the unit before moving it. Failure to do so may result in parts detached from the product, causing injury or damage to the product.</li><li>• Use the product with the necessary parts for maintaining strength of the product attached. Using the product without reinforcement parts causes the strength of the product to be reduced, which may cause wobbling or damage resulting in injury. For details, refer to the Unit Shelf Part Quantity Checklist.</li></ul>

## Note (Other Cautions)

	<ul style="list-style-type: none"><li>• Install in a level and stable place. Using the product in an unstable place may distort or damage the product.</li><li>• When cleaning the product, do not wipe with a cloth that contains an organic solvent such as thinner. Doing so may cause deformation or discolouration.</li><li>• To dispose of the packaging material after unpacking, follow the rules implemented by your local government.</li><li>• Wear gloves during assembly of the product. This is to prevent unexpected injury.</li></ul>
--	---


# Parts

For both **L** / **WIDE / L** models.


\* The **WIDE / L** size product is used in the illustrations.

## Parts

Ⓐ Frame ×2

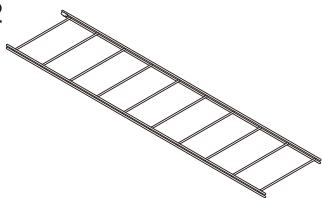

Ⓑ Shelf Board ×5

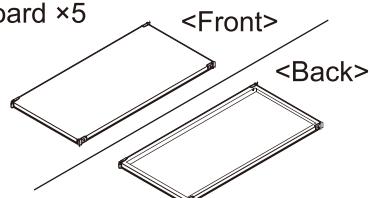

Ⓒ Cross Bar ×4



Ⓓ Adjuster ×4

(\* It is attached to Ⓐ frame for the steel shelf set)



## Fitting Parts

ⓐ Bolt (the centre of cross bars) ×2



ⓑ Box Nut (the centre of cross bars) ×2



ⓒ Bolt ×8




ⓓ Nut ×8




ⓔ Hexagonal Wrench ×1  
(4mm)



## Part Names

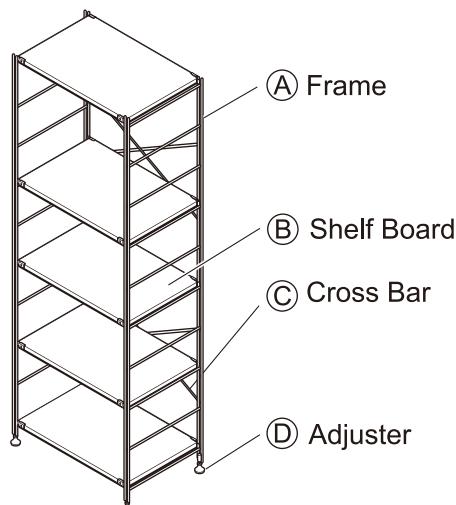

(Completion Image)

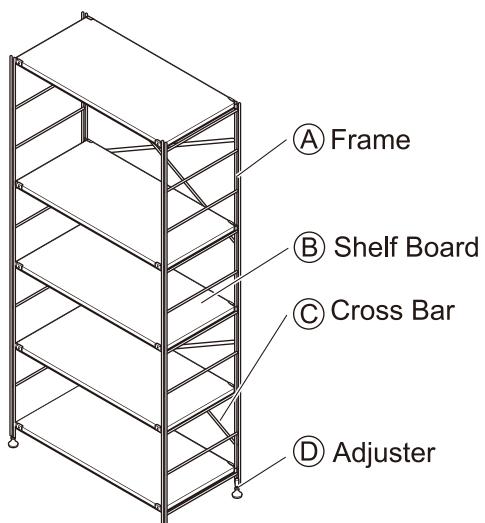

(Completion Image)

# Assembly Instructions

For both **L** / **WIDE / L** models.

\* The **WIDE / L** size product is used in the illustrations.




## CAUTION

- ! The product must be assembled by two or more people. Assembling alone may result in injury due to damage to the product or the product falling etc.
- 🚫 Do not use power tools to assemble the product. Placing unnecessary strain on the product may result in injury due to damage to the product.
- ! Re-tighten all bolts approximately one week after the assembly. Bolts may become loose at the start of use, and continued use with loose bolts may result in damage or injury.
- ! Be careful not to scratch the floor and furniture when assembling and installing the product.

**1**

Loosen the hook bolts at the four corners of **(B) Shelf board** using **(e) hexagonal wrench** so that the hooks can move freely.

\* Loosen all of the hook bolts on the shelf as shown in the figure, and the hooks should stay loosely and diagonally.

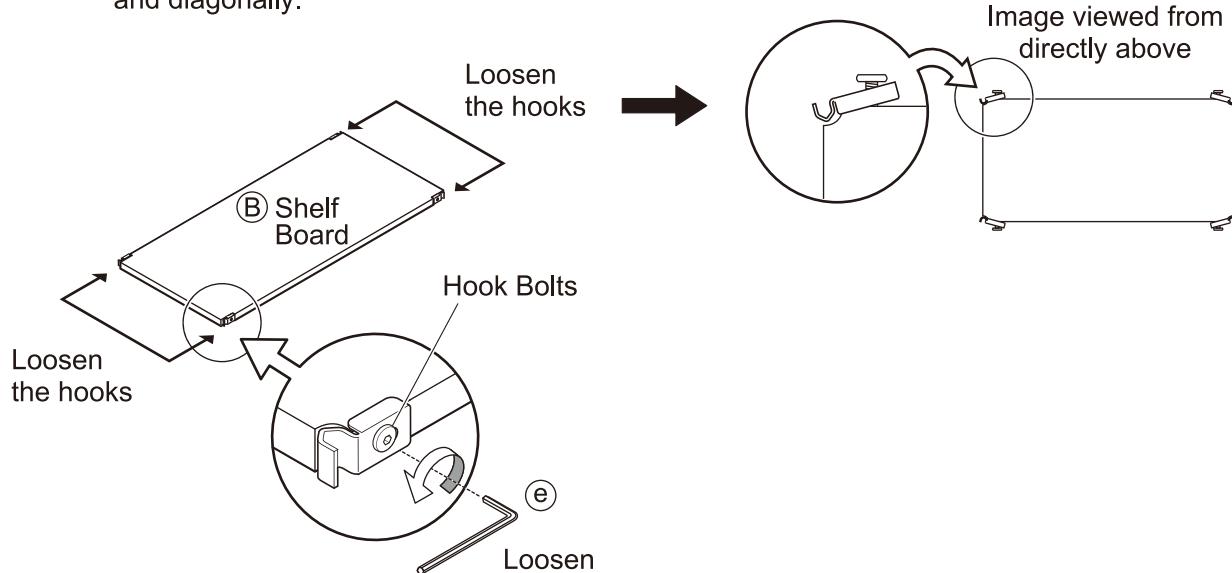


# Assembly Instructions (Continued)

\* The **WIDE / L** size product is used in the illustrations.

## 2 Attach the bottom shelf board.

Place **B** shelf board diagonally so that the front faces upwards, hook the two hooks on the rear side onto the frame poles of **A** frame **Point ①**, push the front side hooks forward with your fingers **Point ②**, and then push on the hooks onto the frame poles **Point ③**.

Loosely tighten the hook bolts with **e** hexagonal wrench. (Loosen the tightened hook bolts half a turn.)

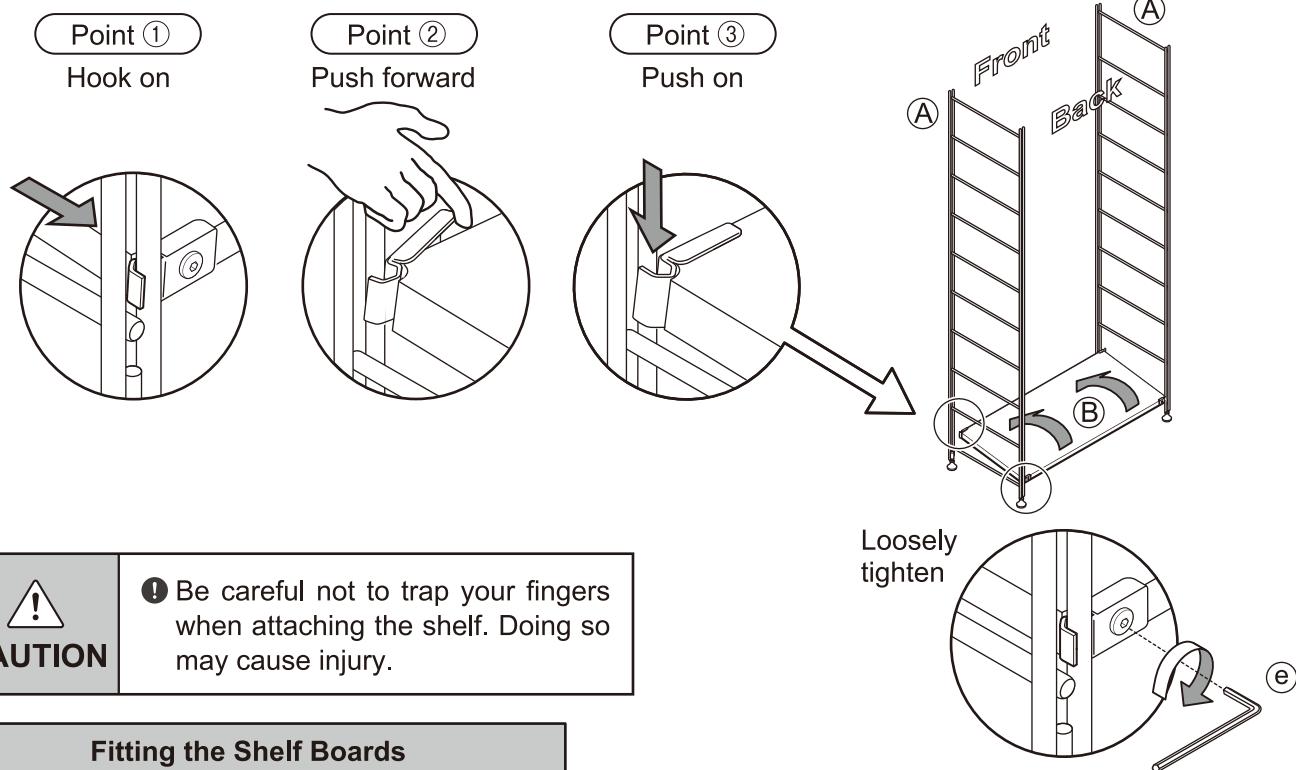

### CAUTION

! Be careful not to trap your fingers when attaching the shelf. Doing so may cause injury.


### Fitting the Shelf Boards

If the shelf boards are difficult to fit, gently hit the top of the shelf board so that it fits into the frame. If it still does not fit, loosen all of the hooks slightly to make it fit easily.

### Note (Other Caution)

Do not over-tighten hook bolts when loosely tightening them. Otherwise, the remaining shelf boards may become difficult to fit.

## 3 Next, attach the top **B** shelf board using the same procedure as in step **2**.

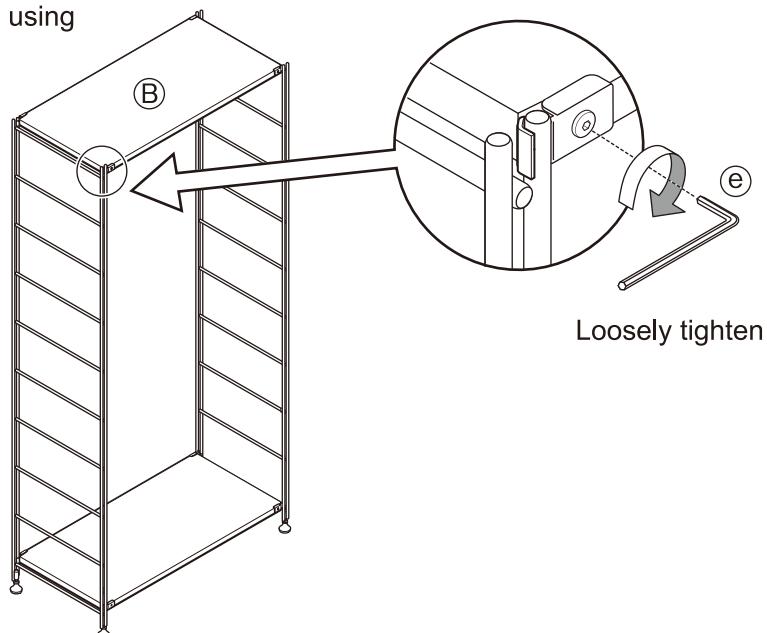


# Assembly Instructions (Continued)

\* The **WIDE / L** size product is used in the illustrations.

**4**



Attach all remaining **B** shelf boards using the same procedure as in step **2**.

\* Decide on the installation position based on the height of items to be stored.

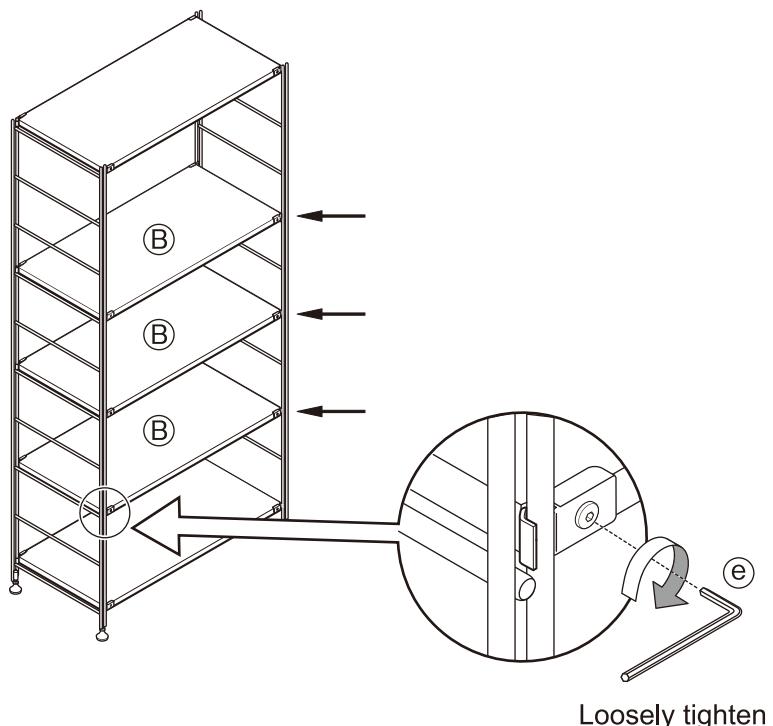

**5**

Cross the centres of the **C** cross bars and loosely tighten **b** box nut and **a** bolt at the centre (for centre of the cross bars).

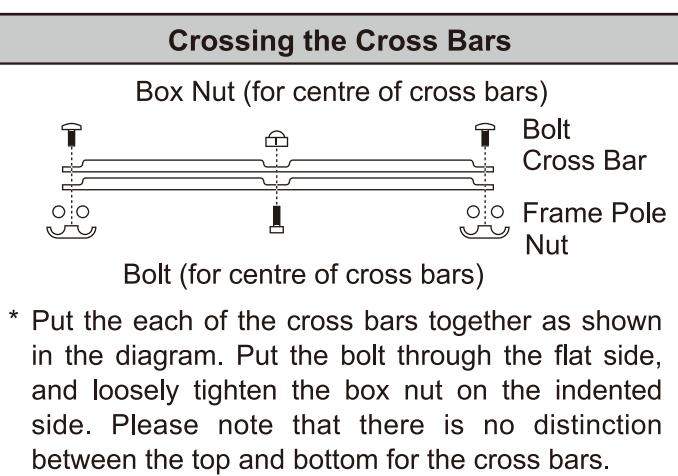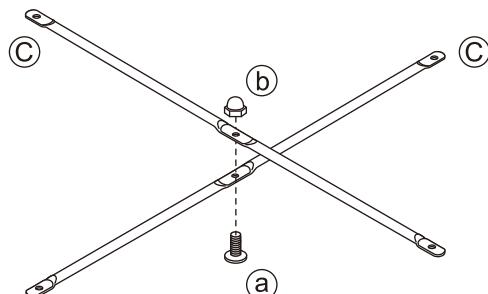

# Assembly Instructions (Continued)

\* The **WIDE / L** size product is used in the illustrations.


**6**

Fix the assembled cross bars to **(A)** frame from the rear side using **(d)** nut and **(c)** bolt.

Attach the cross bars in a way **(b)** box nut on the cross bars faces outwards.

**Note**  
**(Other Caution)**

- If the positions of the cross bar bolt holes are not aligned, the unit may be crooked. In this case, slightly loosen the hook bolts for the shelf boards.
- When tightening the cross bar **(c)** bolts, tighten each bolt a little at a time. Fully tightening one bolt may cause the other bolts to be difficult to be tightened.

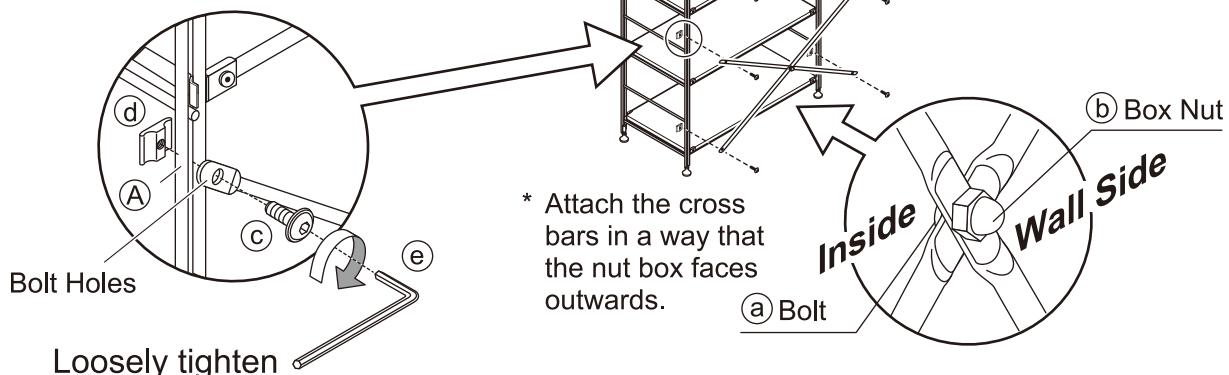


**7**

Lastly, use **(e)** hexagonal wrench to fully tighten the hook bolts for **(B)** shelf boards that were loosely tightened in steps **2** to **4**, and the cross bar **(a)** and **(c)** bolts that were loosely tightened in steps **5** and **6**. (30 in total)


**Note**  
**(Other Caution)**

Tighten the hook bolts for the shelf boards alternately on the front and back a little at a time. Tightening just one bolt may cause the shelf to become crooked, and the last hook may be difficult to be tightened.

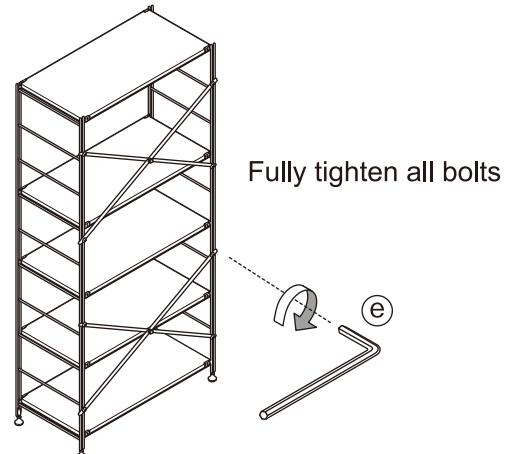

**8**

Adjust the product using **(D)** adjusters so that it does not wobble after installation.

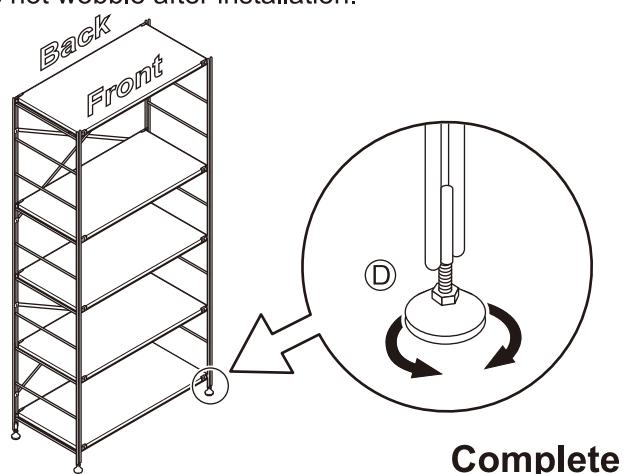

# Directions for Use

## [Unit Shelf Part Quantity Checklist]

Frame Size	XL	L	M	S	Mini
Part Name					
*1	4	3	3	2	3
Cross Bar	2	2	1	1	0


### \*1: Shelf Board or Frame Reinforcement Parts

- \* The strength of the unit differs depending on the installation position. Even attaching more than the required number of parts on one part of the product may affect the strength.  
Leaving a large space between the shelf boards may cause the product to wobble. Be sure to install the shelf boards with the same space in between.
- \* Frame reinforcement parts are not available for shelves with the following widths: 112 cm and 42 cm. Attach the required number of shelf boards shown in the above list.

## [Moving the Product]


### <Moving when Fully Assembled>

- Do not lift the product by holding the shelf board.  
The shelf may get detached causing items to fall, resulting in unexpected injury or damage to the property.  
When moving the product after the assembly, first remove all stored items. The product must be moved by two or more people holding the frames firmly from the left and right sides.
- Do not push or drag the product across the floor. Doing so may cause scratches or damage to the floor.

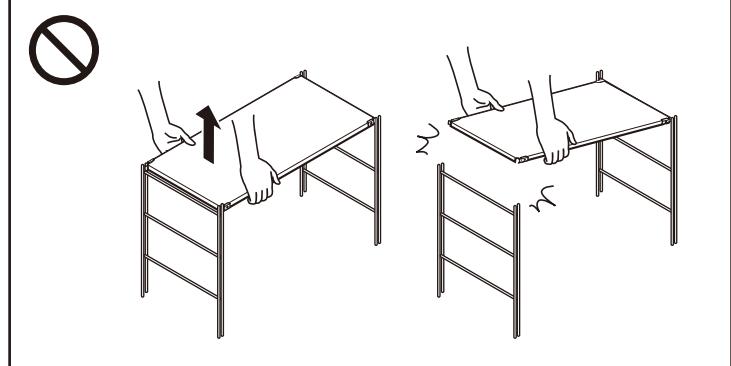

### <Moving when Moving House, etc.>

- When moving the unit in order to move house, etc., disassemble the unit before moving it.  
(Failure to do so may result in parts detaching from the product, causing injury or damage to the product.)

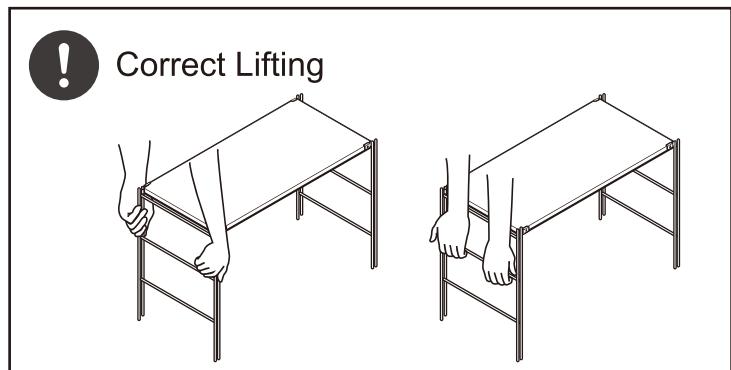


# Directions for Use (Continued)

---

## Cautions for Storage

- Do not store items only in the top section. Doing so may cause the product to become unbalanced and unstable, resulting in the product tipping over and causing injury.
- Do not place heavy items on the top section. Doing so may result in the items falling off in the event of an earthquake, etc., or may cause the unit to fall resulting in injury.

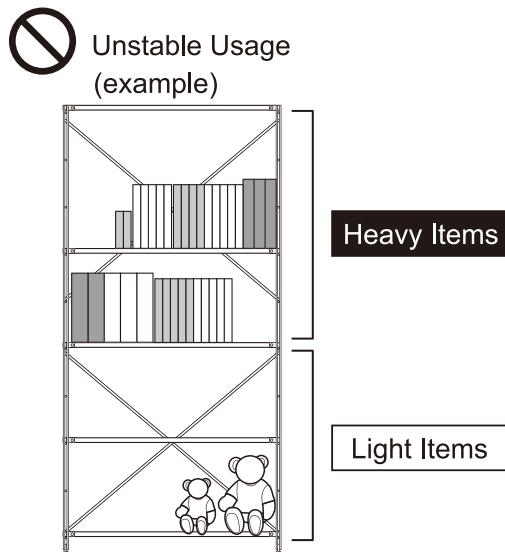

## Disposal

- To dispose of this product, follow the rules implemented by your local government.

# Care Instructions

---

## Maintenance and Inspection

- Do not use this product if it is damaged or deformed.
- Periodically check for any looseness in screws and fittings, and re-tighten them if any looseness is found. Continuing use with looseness may cause injury or damage to the shelves or the unit, or scratches to the floor. Doing so may cause wobbling or abnormal noises.

## Maintenance for Metal Sections

- For normal care, wipe with a soft, dry cloth.
- If the product is particularly dirty, wipe off the dirt with a cloth soaked in a 3% to 5% neutral detergent solution. Then wipe off any detergent residue with a damp cloth. Next, gently wipe with a soft, dry cloth and let the product dry naturally.

# Specifications

---

Product Name	STEEL UNIT SHELF / LIGHT GREY SHELF SET / L	STEEL UNIT SHELF / DARK GREY SHELF SET / L	STEEL UNIT SHELF / LIGHT GREY SHELF SET / WIDE / L	STEEL UNIT SHELF / DARK GREY SHELF SET / WIDE / L		
JAN	4550002999131	4550723102087	4550002999094	4550723102193		
Product Dimensions	W580 × D410 × H1755 mm		W860 × D410 × H1755 mm			
Product Weight	Approx. 19 kg		Approx. 26 kg			
Usage	Storage Furniture					
Total Withstand Load	100 kg					
Withstand Load Per Shelf Board	30 kg (* When the load is spread evenly across the shelf)					
Materials	Frame: Metal (Steel) Shelf Board: Metal (Steel) Surface Finish: Frame: Epoxy Resin Powder Coating Shelf Board: Epoxy Resin Powder Coating					

Made in Taiwan

## Contact Information

---

For your inquiry about the product, please contact the store where you bought it.