MUJI 無印良品 保存用

パイン材ユニットシェルフ用 転倒防止補助金具

取扱説明書

この度は本製品をお買い上げいただき、誠にありがとうございます。ご使用前に本書をよくお読みいただき、内容を理解した上で、正しくお使いください。また、本書はいつでも確認できるように大切に保管してください。

2023年10月18日

製品仕様

品　名	パイン材ユニットシェルフ用 転倒防止補助金具
規　格	パルプボードボックス兼用 2個セット
J A N	4550344548417
製品寸法	※パーツリストをご参照ください
製品重量	約34g（総重量）
対　象	パイン材ユニットシェルフ パルプボードボックス
材　質	金属（鋼） ※表面加工：アクリル樹脂 粉体塗装 ナイロン樹脂 金属（ステンレス鋼）
原 産 国	中国

ご使用方法

移動について

●引越しなどで移動をする際は、組み立て前の状態に戻してから運んでください。ケガや製品の破損、床面がキズがつくおそれがあります。

●壁にアンカーを使用した場合、木ネジはドライバーではずせますが、アンカーをはずすことは出来ず、壁にアンカーが残ったままになります。ご了承ください。

廃棄について

●廃棄の際は、居住地域の自治体のルールに従い、処分してください。

お手入れ方法

保守・点検

●重要なお知らせをよく読み、各部にグラつきや破損がないか定期的に点検し、異常が認められたら使用を中止してください。そのまま使用すると、ケガや破損の原因となります。

●各部にゆるみがないか定期的に点検し、ゆるんでいたらしっかり締め直してください。ケガや製品の破損防止になります。

お問い合わせ先

製品のお問い合わせは、お買い上げの販売店、もしくは下記お客様相談室までご連絡ください。

株式会社　良品計画

お客様相談室でんわ
0120-14-6404

重要なお知らせ（安全上のご注意）

ここに示した警告・注意事項はお使いになる方や他の人への危害や損害を未然に防ぐためのものです。必ずお守りください。

⃠ してはいけない「禁止」の内容です。　❗ 実行しなければならない内容です。

⚠警告　死亡や重傷などに結びつくおそれがあるもの

禁止

●フィッティングパーツは幼児の手の届くところには置かないでください。また、なくさないでください。これらは小さく、誤飲してしまうと窒息などのおそれがあります。

●組み立てが不完全なまま使用しないでください。固定部分がはずれてケガの原因になることがあります。

行う

●壁の状態をお確かめの上で、壁の素材に適したネジ類を使用してください。適していないものでは強度が得られず、転倒して製品の破損や思わぬケガをする原因となります。

●取り付け方法をよく読み、正しく取り付けてください。誤って取り付けた状態では強度が弱まり、製品が転倒し、ケガをする原因となります。誤った取り付けによって生じた事故や損害については、責任を負えません。

お願い（その他 注意）

●本製品は、家具の転倒を最小限にすることが本来の目的であり、収納物の破損や落下による事故を防止するものではありません。

●転倒防止補助パーツは、耐震用ではありません。地震などの振動や製品に寄りかかったりした場合、金具がはずれ、転倒するおそれがありますので、ご注意ください。必要に応じて、市販の転倒防止金具を用いるなど適切な処置を講じてください。

●定期的にネジのゆるみがないか、確認をしてください。

パーツリスト

Ⓐ金具×2
（25×45×16 mm）



フィッティングパーツ

ⓐ木ネジ（小）×2
（φ3.5×L16 mm）

ⓑ木ネジ（大）×2
（φ4×L43 mm）

ⓒアンカー×2
（φ8.35×30 mm）

ⓓ下穴用キリ×1
（23×39×1 mm）



パイン材ユニットシェルフに取り付ける場合

※イラストには、「パイン材ユニットシェルフ 奥行25cmタイプ・86cm幅・大」を使用しています。

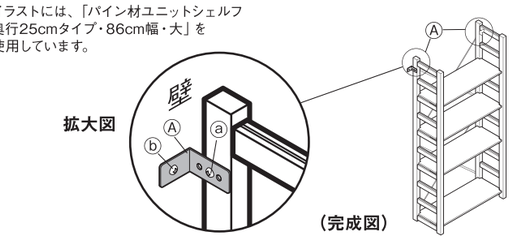

パルプボードボックスに取り付ける場合

※イラストには、「パルプボードボックス・タテヨコA4サイズ・5段・ベージュ」を使用しています。

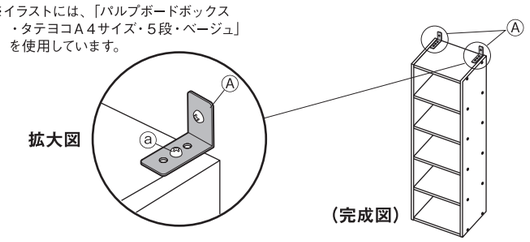

取り付け方法

※ドライバーは付属されていません。適切なサイズのプラスドライバーをご用意ください。（ドライバーの先端が大きすぎたり、小さすぎると組み立てが難しい場合があります。）

パイン材ユニットシェルフ

1

①取り付けやすいように、一番上の棚板をはずします。
②本体を固定位置に仮設置し、壁と本体（帆立）の距離を確認し、Ⓐ金具の穴3ヶ所のどの位置で固定するか確認してください。
③帆立横桟の上から1から3本目の間の中央付近に、ⓐを通して、帆立にⒶ金具を取り付けます。
※横桟の真横、また節のある位置に取り付けないでください。
※連結して使用する場合、各帆立にお取り付けください。

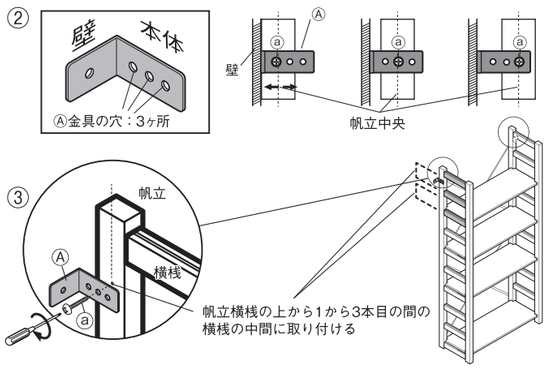

2 壁の材質を確認の上、A～C いずれかの方法で壁に取り付けてください。

A 木下地や木材の壁に固定する場合

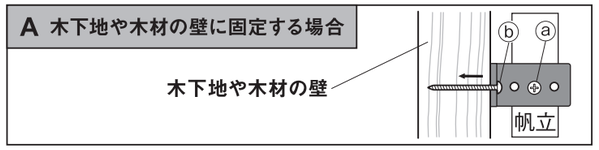

①壁にⒶ金具を合わせ、取付穴の印を付けます。

②壁にⓑで固定します。
※壁が固くⓑを固定しづらい場合は、ドリルを使い、直径2mmの下穴をあけると固定しやすくなります。

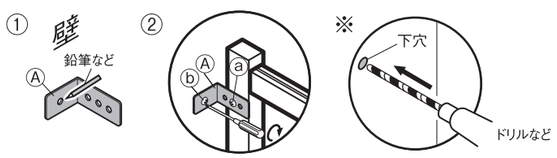

B 石こうボードに固定する場合

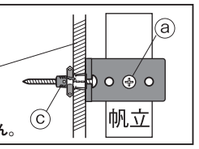

※9.5mm以下の厚さの石こうボードの壁には取り付けられません。

①壁にⒶ金具を合わせ、取付穴の印を付けます。

②印を付けた部分にⓓを使い、左右に回転させながら石こうボードが貫通するまで下穴を開け、ゴムハンマーなどでⓒを差し込みます。

③差し込んだⓒにⓑで壁に取り付けます。

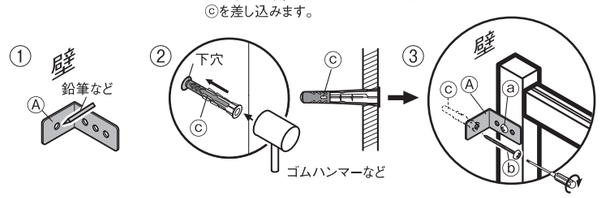

●下穴用キリの使いかた

⚠注意　❗ 壁面に対して直角に下穴を開けてください。斜めになると下穴が大きくなり、ⓒアンカーが正しく取り付けできないおそれがあります。



C コンクリートやレンガ壁に固定する場合

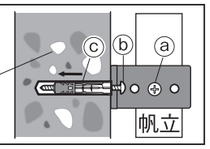

※専用工具（振動ドリル）が必要です。

① B 同様に印を付けた部分に専用工具（振動ドリル）を使用して直径6mmの下穴を開けます。（深さは50mmを目安にしてください）。
② B 同様に下穴にⓒを差し込みます。
③差し込んだⓒにⓑで壁に取り付けます。

⚠注意
❗ 電動工具などをご使用の場合は、低速回転でゆっくりネジを締めこんでください。
⃠ 厚み150mm未満のコンクリート壁には使用しないでください。
❗ ⓒアンカーを差し込む際はハンマーなどで軽くたたいて、最後まで打ち込んでください。
❗ ⓑ木ネジ（大）の頭がⒶ金具にすき間なく接して抵抗が大きくなってから1～2回転させてください。

パルプボードボックス

1

①本体を固定位置に仮設置し、壁と本体の距離を確認し、Ⓐ金具の穴3か所のどの位置で固定するか確認してください。
②「縦置きの場合」「横置きの場合」どちらかを確認し、ⓐを通して、天板もしくは側板の端に、Ⓐ金具を取り付けます。
※天板及び側板はフラッシュ構造です。指定場所（天板もしくは側板の端）以外に取り付けるとネジが芯材に掛からないため十分な強度が得られず、商品が転倒し、ケガをする原因となります。

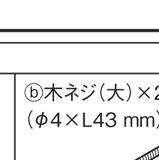

② **縦置きの場合**（天板両端に固定してください。）

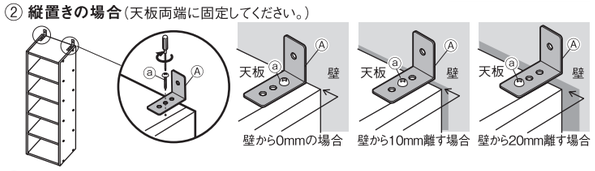

② **横置きの場合**（側板両端に固定してください。）
横置きで二段以上重ねる場合には、パルプボードボックス用ジョイント金具（別売り）で上下を固定した後に壁に固定してください。

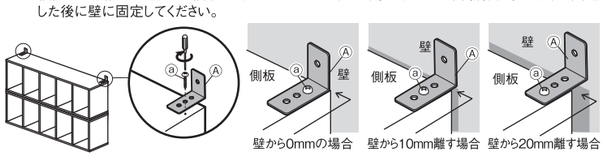

2 壁の材質を確認の上、A～C いずれかの方法で壁に取り付けてください。

A 木下地や木材の壁に固定する場合

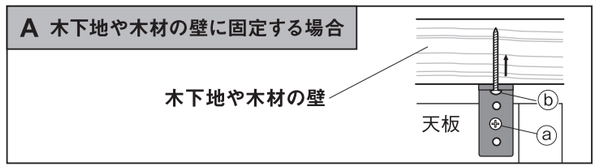

①壁にⒶ金具を合わせ、取付穴の印を付けます。

②壁にⓑで固定します。
※壁が固くⓑを固定しづらい場合は、ドリルを使い、直径2mmの下穴をあけると固定しやすくなります。

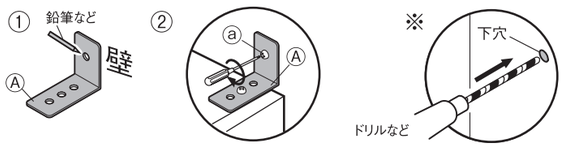

B 石こうボードに固定する場合

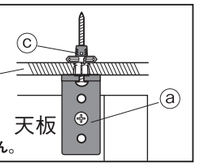

※9.5mm以下の厚さの石こうボードの壁には取り付けられません。

①壁にⒶ金具を合わせ、取付穴の印を付けます。

②印を付けた部分にⓓを使い、左右に回転させながら石こうボードが貫通するまで下穴を開け、ゴムハンマーなどでⓒを差し込みます。

③差し込んだⓒにⓑで壁に取り付けます。

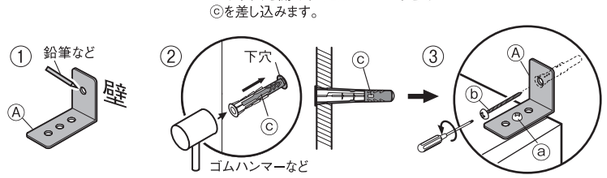

●下穴用キリの使いかた

⚠注意　❗ 壁面に対して直角に下穴を開けてください。斜めになると下穴が大きくなり、ⓒアンカーが正しく取り付けできないおそれがあります。

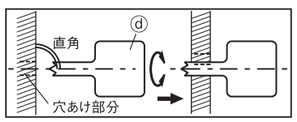

C コンクリートやレンガ壁に固定する場合

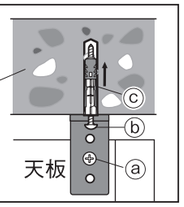

※専用工具（振動ドリル）が必要です。

① B 同様に印を付けた部分に専用工具（振動ドリル）を使用して直径6mmの下穴を開けます。（深さは50mmを目安にしてください）。
② B 同様に下穴にⓒを差し込みます。
③差し込んだⓒにⓑで壁に取り付けます。

⚠注意
❗ 電動工具などをご使用の場合は、低速回転でゆっくりネジを締めこんでください。
⃠ 厚み150mm未満のコンクリート壁には使用しないでください。
❗ ⓒアンカーを差し込む際はハンマーなどで軽くたたいて、最後まで打ち込んでください。
❗ ⓑ木ネジ（大）の頭がⒶ金具にすき間なく接して抵抗が大きくなってから1～2回転させてください。

333666151-013-002

MUJI 無印良品

Retain for future reference

Pine unit shelf
Anti-tip auxiliary parts

User Guide

Thank you for your purchase. Read this User Guide before use to ensure correct use of the product. Store this guide in an easily accessible place for future reference.

18 October 2023

Specifications

Product Name	Pine unit shelf Anti-tip auxiliary parts
Specification	Also can be used for Pulp board box. Set of 2
JAN	4550344548417
Product Dimension	Refer to the parts list below.
Product Weight	Approx. 34 g (Total)
Applicable Products	Pine unit shelf / Pulp board box
Material	Metal (Steel) *Surface Finish: Acrylic Resin Powder Coating Nylon Resin Metal (Stainless Steel)
Place of Origin	China

Contact Information

For enquiries regarding the product, please contact the store of purchase.

Directions for Use

Relocating the Product

- When moving the product for a home move, etc., disassemble it beforehand. Not doing so may cause injury, product damage or scratches on the floor.
- Note if the anchors were inserted, they will remain in the wall, but the wood screws can be removed with a screwdriver.

Disposal

- To dispose of the product, follow the rules implemented by your local government.

Care Instructions

Maintenance and Inspection

- Carefully read the Important Information and regularly check for any looseness or damage in all parts, and stop use if any abnormalities are found. Continued use under this condition may cause injury or product damage.
- Regularly check for any looseness in all parts, and retighten them if looseness is found. This is to prevent injury and product damage.

Important Information (Safety Advice)

The warnings and cautions indicated here are intended to prevent harm to the users and other individuals or damage to the property. The instructions must be followed.

Actions that are prohibited. Actions that must be taken.

⚠WARNING Hazards that may lead to death or serious injury

DON'Ts	• Do not keep the fitting parts within reach of small children and be careful not to lose them. Children may accidentally swallow small parts and choke. • Do not use unless fully assembled. Doing so may cause the fixed parts to come off and lead to injury.
DOs	• Check the wall material and use suitable screws. Use of unsuitable screw will result in insufficient strength, causing the product to tip over and resulting in damage to the product or unexpected injury. • Carefully read the Attaching the Product and attach it correctly. Incorrect attachment may reduce the strength and cause the product to tip over, resulting in injury. Please note that we assume no responsibility for accidents or damage caused by incorrect attachment.

Note (Other Caution)

- This product is designed to minimise the risk of the unit shelf tipping over, and it does not necessarily prevent accidents due to damage or falling of the stored items.
- This product does not provide earthquake-resistance to the unit shelf. Leaning on the shelf and vibrations from an earthquake, etc. may cause the metal parts to come off, leading to the shelf tipping over. Take an appropriate measure, such as attaching commercially available anti-tip brackets, as necessary.
- Periodically check for any looseness in the screws.

When Installing to a Pine Unit Shelf

* Pine Unit Shelf / D25 cm / 86 cm / L is used in the illustrations.

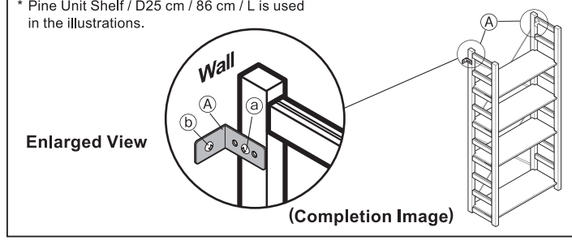

When Installing to a Pulp Board Box

* Pulp board box Orientation selectable A4-size 5 Tiers Beige is used in the illustrations.

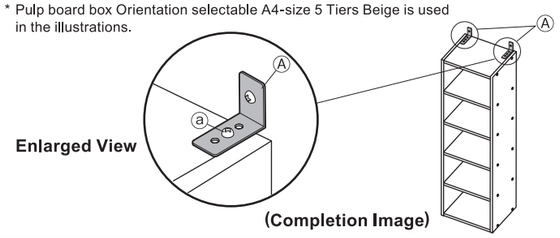

Parts

Ⓐ Metal Part × 2 (25 × 45 × 16 mm)	Fitting Parts			
	ⓐ Wood Screw (S) × 2 (ϕ3.5 × L16 mm)	ⓑ Wood Screw (L) × 2 (ϕ4 × L43 mm)	ⓒ Anchor × 2 (ϕ8.35 × 30 mm)	ⓓ Pilot Hole Gimlet × 1 (23 × 39 × 1 mm)



Attaching the Product

* Screwdriver is not included. Prepare your own crosshead screwdriver of a suitable size. (It may be difficult to assemble the product if the screwdriver head is too large or too small.)

Pine Unit Shelf

1
① Remove the top shelf board for installation.
② Temporarily install the unit shelf, and check the distance between the wall and the shelf frame and decide which one of three holes of Ⓐ metal part you will use to fix the shelf.
③ Screw ⓐ and attach Ⓐ metal part near the centre between the first and third frame rung from the top.
* Do not attach to the side of the horizontal rung or where there is a knot.
* When using multiple unit shelves connected to each other, attach the product to the frame of each unit shelf.

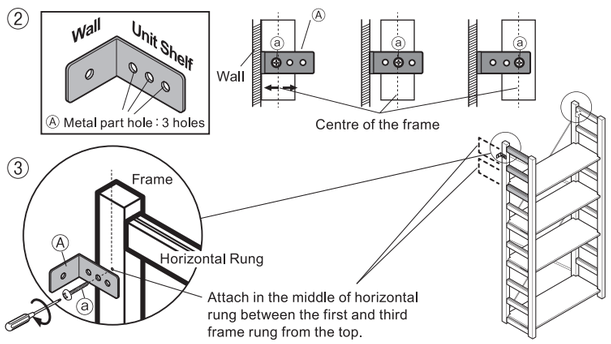

2 Check the wall material, and attach the product according to any one of the procedures of A, B or C.

A When Attaching to Wood Stud or Wooden Wall

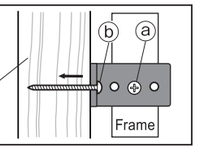

① Align Ⓐ metal part to the wall and mark the installation hole.
② Attach to the wall with ⓑ.
* When the wall is too hard to insert ⓑ into it, make a pilot hole of 2 mm in diameter with a drill to help make it easier.

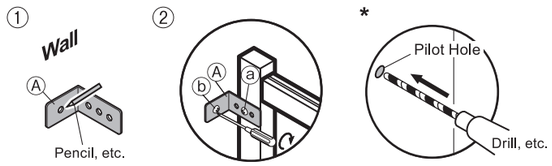

B When Attaching to Plasterboard

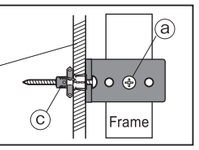

* **The product cannot be attached to the plasterboard wall of 9.5 mm thick or less.**

① Align Ⓐ metal part to the wall and mark the installation hole.
② Drill a pilot hole through the plaster board on the mark by turning ⓓ left and right. Using a rubber mallet, etc., firmly tap ⓒ into the hole.
③ After inserting ⓒ, attach to the wall with ⓑ.

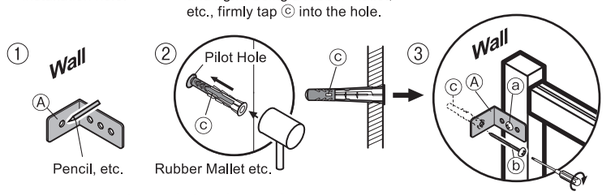

• How to use the pilot hole gimlet

CAUTION ❗ Drill a pilot hole perpendicular to the plasterboard wall. If drilled at an angle, the hole will become large and may hinder correct insertion of ⓒ anchor.



C When Attaching to Concrete or Brick Wall

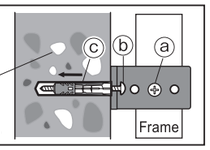

* **Use of a specialised tool (electric drill) is required.**

① Make a pilot hole of 6 mm in diameter on the mark in the same way as B using a specialised tool (electric drill).
(Drill to a depth of approx. 50 mm)
② firmly tap ⓒ into the hole in the same way as B.
③ After inserting ⓒ, attach to the wall with ⓑ.

CAUTION
❗ When using an electric tool etc., slowly tighten the screw at a low speed setting.
⊘ Do not use the product on concrete walls with a thickness less than 150 mm.
❗ Lightly tap ⓒ anchor with a mallet, etc. and fully insert it into the wall.
❗ Tighten ⓑ wood screw (L) until the head is flush with ⓐ metal part and you feel resistance, and then give it one or two more turns.

Pulp Board Box

1
① Temporarily install the pulp board box, and check the distance between the wall and the shelf frame and decide which one of three holes of Ⓐ metal part you will use to fix the pulp board box.
② By referring to "When placing vertically" or "When placing horizontally" attach Ⓐ metal part to the top board or the edge of the side board with ⓐ.
* Top board and side board have a flush structure. Attached in a position other than the specified place (top board or the edge of the side board), the screw will not reach the core material, causing the product to tip over, resulting in injury due to insufficient strength.

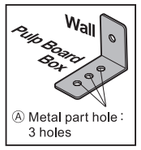

② **When placing vertically** (fix on both ends of the top board.)

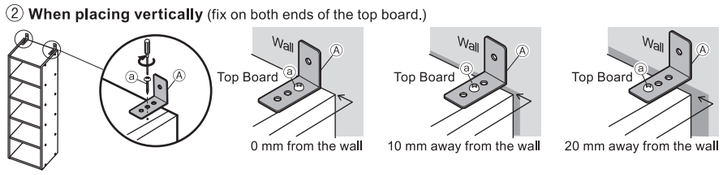

② **When placing horizontally** (fix on both ends of the side board.)
When stacking two or more boxes horizontally, use Metal Joint Fittings for Pulp Board Boxes (sold separately) to fix the top and bottom before fixing them to the wall.

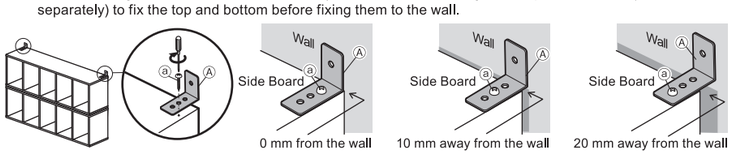

2 Check the wall material, and attach the product according to any one of the procedures of A, B or C.

A When Attaching to Wood Stud or Wooden Wall

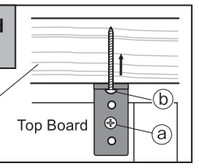

① Align Ⓐ metal part to the wall and mark the installation hole.
② Attach to the wall with ⓑ.
* When the wall is too hard to insert ⓑ into it, make a pilot hole of 2 mm in diameter with a drill to help make it easier.

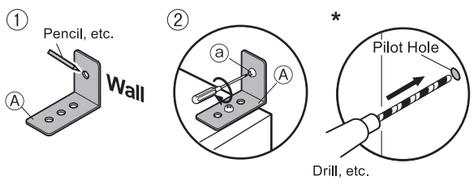

B When Attaching to Plasterboard

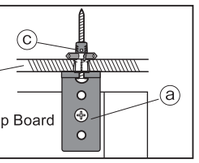

* **The product cannot be attached to the plasterboard wall of 9.5 mm thick or less.**

① Align Ⓐ metal part to the wall and mark the installation hole.
② Drill a pilot hole through the plaster board on the mark by turning ⓓ left and right. Using a rubber mallet, etc., firmly tap ⓒ into the hole.
③ After inserting ⓒ, attach to the wall with ⓑ.

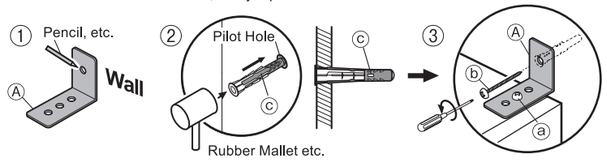

• How to use the pilot hole gimlet

CAUTION ❗ Drill a pilot hole perpendicular to the plasterboard wall. If drilled at an angle, the hole will become large and may hinder correct insertion of ⓒ anchor.

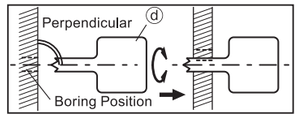

C When Attaching to Concrete or Brick Wall

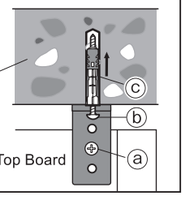

* **Use of a specialised tool (electric drill) is required.**

① Make a pilot hole of 6 mm in diameter on the mark in the same way as B using a specialised tool (electric drill).
(Drill to a depth of approx. 50 mm)
② firmly tap ⓒ into the hole in the same way as B.
③ After inserting ⓒ, attach to the wall with ⓑ.

CAUTION
❗ When using an electric tool etc., slowly tighten the screw at a low speed setting.
⊘ Do not use the product on concrete walls with a thickness less than 150 mm.
❗ Lightly tap ⓒ anchor with a mallet, etc. and fully insert it into the wall.
❗ Tighten ⓑ wood screw (L) until the head is flush with ⓐ metal part and you feel resistance, and then give it one or two more turns.

MUJI 無印良品 保存用

松木组合架用
防倒辅助金属零件

使用说明书

本次承蒙惠购本产品，在此深表感谢。使用前请务必仔细阅读本文，并在充分理解的基础上再进行使用。此外，请妥善保管本说明书，以备随时进行确认。

2023 年 10 月 18 日

产品规格

商 品 名	松木组合架用防倒辅助金属零件
规　　格	硬纸板柜兼用2个装
规格型号	4550344548417
规格尺寸	※请参照配件清单
产品类别	组合架用防倒辅助零件套装
使用场所	家用室内
产品重量	34g(总重量)
对　　象	松木组合架 硬纸板柜
材　　质	金属(钢)　※表面加工：丙烯酸树脂粉体涂装 聚酰胺树脂 金属(不锈钢)
执行标准	GB/T 3324-2017 ※本产品为配件，组装成品时符合标准要求。
等　　级	合格品
原 产 国	中国

重要通知 (安全注意事项)

为了防止使用者或他人遭受危害和损失，本说明书中记述了确保安全且正确使用的重要内容。请务必遵守所述事项。

不得执行的“禁止”内容。　必须执行的内容。

⚠警告　可能导致死亡或重伤的内容

禁止	●请勿将组装零件放置于幼儿可触及处，并且请勿随意丢弃。因为零件较小，一旦误吞，可能会导致窒息等事故。 ●请勿在组装不完整的状态下使用，否则可能会因固定部位脱落而导致人员受伤。
执行	●请先确认墙壁的状态后，使用适合墙壁材料的螺钉类。如果使用不适合的螺钉可能会因为强度不足，而导致产品翻倒、损坏以及意外受伤。 ●请仔细阅读安装方法，正确安装。如在错误安装状态下强度会减弱，可能导致产品翻倒以及人员受伤。由于安装错误而发生的事故及损害，恕不承担责任。

请求(其他注意事项)

●本商品原本的目的是将家具翻倒危险减少为最小限度，并非能防止收纳物品的破损以及因掉落而引起的事故。
●防倒辅助零件为非抗震用。如地震等时摇晃或倚靠于产品上，可能会因金属零件脱落而导致翻倒，敬请注意。请根据需要，使用市售的防倒金属零件等进行妥善处理。
●请定期检查螺钉有无松动。

配件清单

Ⓐ金属零件×2 (25×45×16 mm)	组装零件			
	ⓐ木螺钉(小)×2 (直径3.5 ×长16 mm) 	ⓑ木螺钉(大)×2 (直径4 ×长43 mm) 	ⓒ地脚螺钉×2 (直径8.35 ×长30 mm) 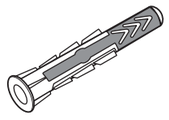	ⓓ基孔用锥×1 (23×39×1 mm) 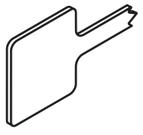

使用方法

关于移动

●因搬家等原因而移动产品时，请将其恢复到组装前的状态后再搬运。否则可能会导致人员受伤、产品损坏或地面损伤。
●在墙壁上使用地脚螺钉时，木螺钉可以用螺丝刀取出，但是地脚螺钉无法取出，会留在墙壁内。敬请悉知。

关于报废

●废弃时，请按各地官方规定进行废弃处理。

产品故障分析和排除

●感觉有摇晃的话
点检各部件的螺丝钉或螺栓是否有松动的情况。如有松动的话请重新安置。部分零件如有裂痕或破损的话请停止使用。

●其它
上述内容解决不了的问题或存在不清楚的地方请联络所购的店铺。

有害物质限量的控制指标

可溶性铅：≤90mg/kg
可溶性镉：≤75mg/kg
可溶性铬：≤60mg/kg
可溶性汞：≤60mg/kg

保养方法

保养及检查

●请仔细阅读重要事项，定期检查各部位有无摇晃或破损。一旦发现异常，请立即停止使用。如果继续使用，就可能会导致人员受伤或产品损坏。
●请定期检查各部位有无松动。一旦发现松动，请立即紧固。否则可能会导致人员受伤或产品损坏。

联系方式

商品相关咨询请联系购买商品的店铺。

委托生产商：**株式会社良品计画**
地址：日本东京都文京区后乐2-5-1
经销商：
无印良品(上海)商业有限公司
地址：上海市静安区南京西路1601号35楼
3501-3508室（邮编200040）
电话：021-63756677

安装于松木组合架时

※插图使用的是
“松木组合架 宽25cm型 长86cm 大”。

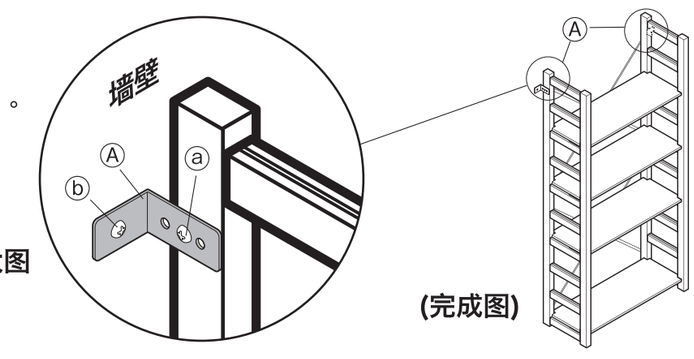

安装于硬纸板柜时

※插图使用的是
“硬纸板柜/横竖A4尺寸/5层/米色”。

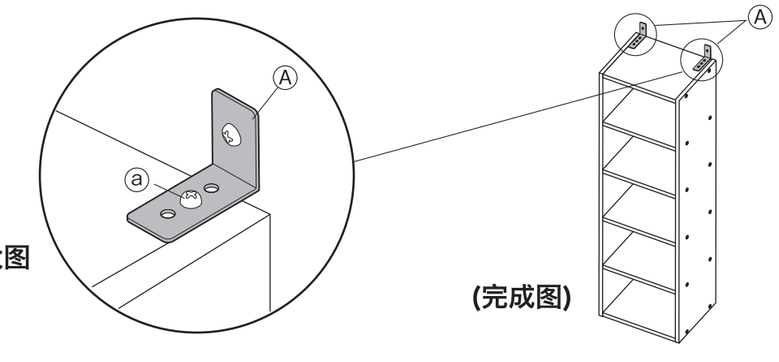

安装方法

※不附带螺丝刀。请准备适当尺寸的十字螺丝刀。(螺丝刀的前端过粗或过细都可能不易于组装。)

松木组合架

1 ① 为能便于安装请拆除最顶层的搁板。
② 将主体在固定位置暂时设置，请确认墙壁和主体(立杆)的间距，并确认Ⓐ金属零件孔的3处在哪个位置固定。
③ 在立杆横档最顶层第一条到第三条之间立杆中央附近处将ⓐ穿过，安装Ⓐ金属零件。
※ 请勿在立杆侧面或者有木节位置进行安装。
※ 连接使用时，请在各立杆上安装。

②

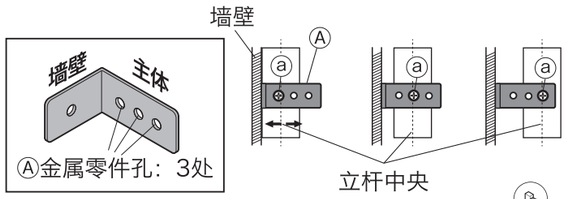

③

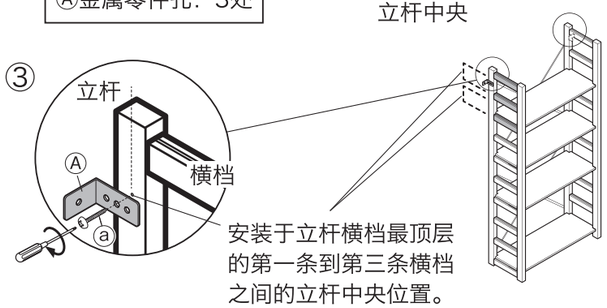

2 请在确认墙壁材质后，从 A ～ C 中选择一种方法安装在墙壁上。

A 在木质底材或木材墙壁上固定时

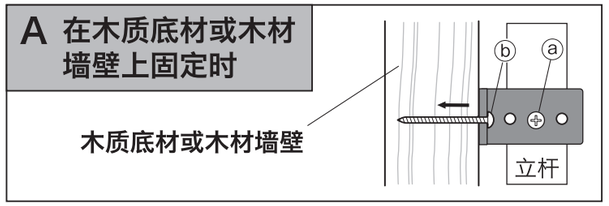

① 在墙壁上贴合Ⓐ金属零件，画上安装孔的记号。
② 在墙壁上使用ⓑ进行固定。
※ 如墙壁坚固，固定ⓑ有困难时，使用电钻，钻出直径为 2mm 的基孔，这样容易固定。

①

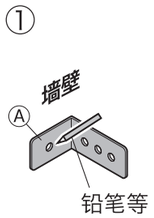

②

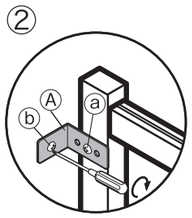

※

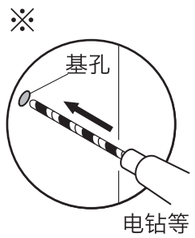

B 安装于石膏板时

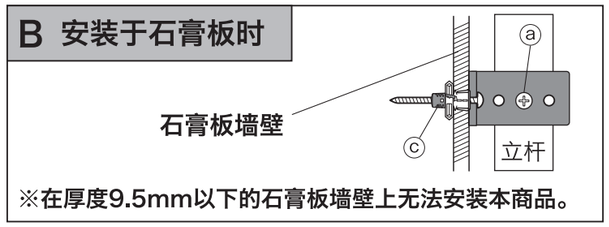

① 在墙壁上贴合Ⓐ金属零件，画上安装孔的记号。
② 在画有记号的位置使用ⓓ钻开基孔直至打通石膏板，然后用橡胶锤敲入ⓒ。
③ 在已插入墙壁内的ⓒ上使用ⓑ进行安装。

①

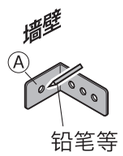

②

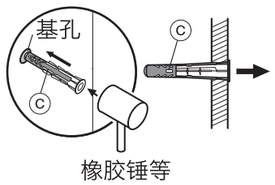

③

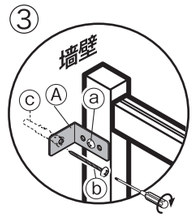

●基孔用锥的使用方法

注意 ❗ 针对墙壁，请按直角钻开基孔。如按斜向方向开基，基孔会过大，ⓒ地脚螺钉可能无法正确安装。

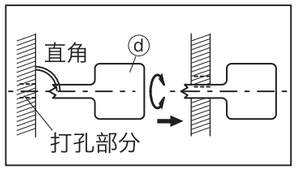

C 在混凝土墙壁或砖墙上固定时

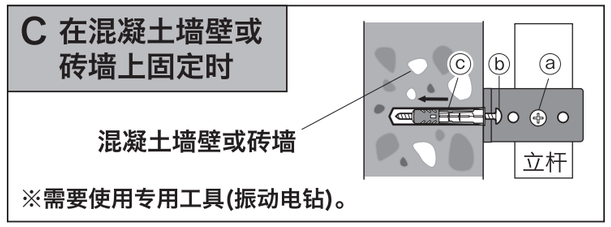

① 与 B 同样在画有记号的位置使用专用工具(振动电钻)钻开6mm的基孔。
(深度请以50mm为参考值)。
② 与 B 同样在基孔上插入ⓒ。
③ 在插入ⓒ内使用ⓑ安装在墙壁上。

注意
❗ 使用电动工具等时，请在低速旋转的状态下慢慢旋紧螺钉。
⊘ 请不要在厚度不足150mm的混凝土墙上使用。
❗ 插入ⓒ地脚螺钉时请用锤子等轻轻敲击直到完全插到底。
❗ ⓑ木螺钉(大)的头部无缝衔接Ⓐ金属零件，阻力变大后，请再拧1—2次。

硬纸板柜

1 ① 将主体在固定位置暂时设置，请确认墙壁和主体的间距，并确认Ⓐ金属零件孔的 3 处在哪个位置固定。
② 请确认是“竖放时”还是“横放时”，将ⓐ穿过，在顶板或者侧板端安装Ⓐ金属零件。
※ 顶板以及侧板为中空芯构造。如在指定(顶板或者侧板端)以外场所进行安装，会由于螺钉不能固定在芯材而无法达到足够的强度，可能导致商品翻倒，人员受伤。

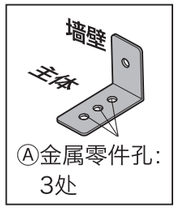

② **竖放时** (请固定在顶板的两端。)

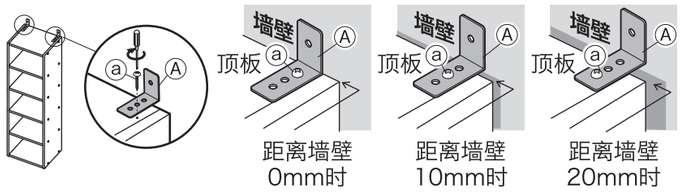

② **横放时** (请固定于侧板的两侧。)
横放重叠到2层以上时，请使用硬纸板柜用连接金属零件(另售)将上下固定后再固定在墙壁上。

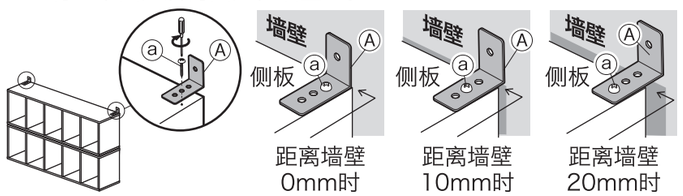

2 请在确认墙壁材质后，从 A ～ C 中选择一种方法安装在墙壁上。

A 在木质底材或木材墙壁上固定时

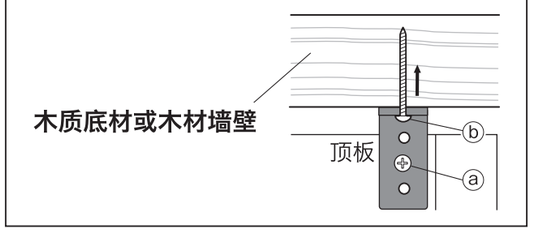

① 在墙壁上贴合Ⓐ金属零件，画上安装孔的记号。
② 在墙壁上使用ⓑ进行固定。
※ 如墙壁坚固，固定ⓑ有困难时，使用电钻，钻出直径为 2mm 的基孔，这样容易固定。

①

②

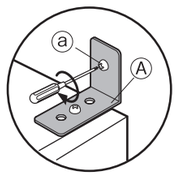

※

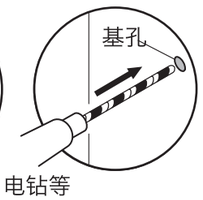

B 安装于石膏板时

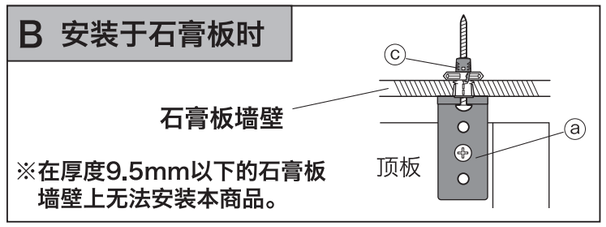

① 在墙壁上贴合Ⓐ金属零件，画上安装孔的记号。
② 在画有记号的位置使用ⓓ钻开基孔直至打通石膏板，然后用橡胶锤敲入ⓒ。
③ 在已插入墙壁内的ⓒ上使用ⓑ进行安装。

①

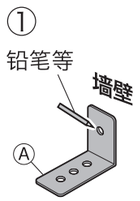

②

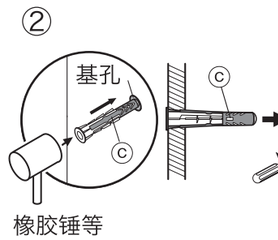

③

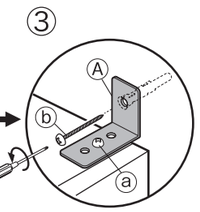

●基孔用锥的使用方法

注意 ❗ 针对墙壁，请按直角钻开基孔。如按斜向方向开基，基孔会过大，ⓒ地脚螺钉可能无法正确安装。

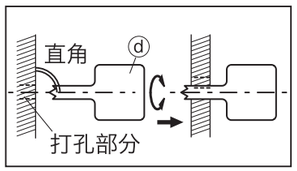

C 在混凝土墙壁或砖墙上固定时

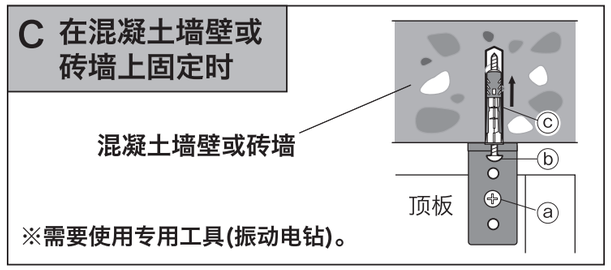

① 与 B 同样在画有记号的位置使用专用工具(振动电钻)钻开6mm的基孔。
(深度请以50mm为参考值)。
② 与 B 同样在基孔上插入ⓒ。
③ 在已插入墙壁内的ⓒ上使用ⓑ进行安装。

注意
❗ 使用电动工具等时，请在低速旋转的状态下慢慢旋紧螺钉。
⊘ 请不要在厚度不足150mm的混凝土墙上使用。
❗ 插入ⓒ地脚螺钉时请用锤子等轻轻敲击直到完全插到底。
❗ ⓑ木螺钉(大)的头部无缝衔接Ⓐ金属零件，阻力变大后，请再拧1—2次。