

ベッドフレーム用帆布バスケット・大 ベッドフレーム用帆布バスケット・小

BED FRAME CANVAS BASKET / L BED FRAME CANVAS BASKET / S

床框用帆布收纳篮/大 床框用帆布收纳篮/小

組立・取扱説明書

User Guide

组装 / 使用说明书

日本語

この度は本商品をお買い上げいただき、誠にありがとうございます。
1ページからお読みください。

English

Thank you for your purchase.
Read these instructions from Page 12.

中文

本次承蒙惠购本产品，在此深表感谢。
请从第二十三页开始阅读。

使用说明书发行日期：2018 年 9 月 3 日

333666171-011-002

ベッドフレーム用帆布バスケット・大 ベッドフレーム用帆布バスケット・小

組立・取扱説明書

この度は本商品をお買い上げいただき、誠にありがとうございます。
ご使用前に本書をよくお読みいただき、内容を理解した上で正しく組み立て、正しくお使いください。
また、本書はいつでも確認できるように大切に保管してください。

もくじ	ページ
重要なお知らせ（安全上のご注意）	2～3
パーツリスト	4
各部の名称	4
組立方法	5～7
ご使用方法	8～9
お手入れ方法	9
ご使用に際して	10
製品仕様	11
お問い合わせ先	11

重要なお知らせ（安全上のご注意）

必ずお守りください。

本書には、お使いになる方や他の人への危害と財産への損害を未然に防ぎ、安全に正しくお使いいただくために、重要な内容を記載しています。

次の内容（表示・図記号）をよく理解してから本文をお読みになり、記載事項をお守りください。

●表示の説明

誤った使い方をしたときに生じる危害や損害の程度を区分して説明しています。



警告

使用者が死亡または重傷（※1）を負うことが想定される内容です。



注意

使用者が傷害（※2）を負うことや物的損害（※3）が発生することが想定される内容です。

●図記号の説明

お守りいただく内容を次の図記号で説明しています。（次は図記号の例です。）



してはいけない「禁止」の内容です。



実行しなければならない内容です。

※1 重傷とは、失明やケガ、やけど、骨折、中毒、感電などで後遺症が残るもの及び、治療に入院、長期の通院を要するものをさします。

※2 傷害とは、治療や入院や長期の通院を要しない、ケガ、やけどをさします。

※3 物的損害とは、家屋、家財にかかわる拡大損害をさします。



警告



禁止

- 不要になった梱包材は乳幼児の手の届くところに置かないでください。
- フィッティングパーツは小さな部品です。乳幼児の手の届くところに置かないでください。また、紛失しないでください。誤飲した場合、窒息などのおそれがあります。



注意



禁止

- 組み立てが不完全なまま使用しないでください。ケガの原因となるおそれがあります。
- 修理および改造はしないでください。製品の強度が弱くなりケガをするおそれがあります。
- 破損、変形した状態では使用しないでください。製品の強度が弱くなりケガをするおそれがあります。
- 本来の用途以外での使用はしないでください。破損してケガをするおそれがあります。
- 屋外では使用しないでください。反りやゆがみ、割れなどの原因となりケガをするおそれがあります。
- 収納部の上に直接腰かけたり、乗ったり、無理な力で引っ張ったりしないでください。破損しケガをする原因となります。
- 引出しの開閉の際は、指や手を挟まないでください。ケガをする原因となります。
- 収納部の1ヶ所に過度の荷重をかけないでください。また、無理に引っ張ったり、進行方向以外に動かしたりしないでください。変形や破損によりケガをするおそれがあります。
- 汚れた物や湿った物は収納しないでください。収納物や本体にカビが生じる原因となります。
- 耐荷重値を超えて物を載せたり、耐荷重内でも一部に片寄って載せたりしないでください。変形や破損によりケガをするおそれがあります。



行う

- 組み立ては十分な場所を確保し、敷物を敷いてください。床や既存の家具にキズがつく原因となります。注意して行ってください。

⚠ 注意



行う

- 移動する際は、2人以上で移動させてください。1人で無理に移動させるとケガや商品が破損する原因となります。
- ベッドフレーム（本体）を移動させる際などは、収納物を取り除き、帆布バスケットをはずしてから移動するようにしてください。
- 部屋の換気は定期的に行ってください。特に下記の条件ではカビやダニが生じやすく健康を害するおそれがあります。
 - ・湿度の高い季節
 - ・冬季など外気が冷たく、室内温度との差により結露が生じる場合
 - ・過度な加湿器の使用
- 引出内部の湿気対策を行ってください。
収納部は湿気がこもりやすくなりますので、市販の除湿剤（湿気取り用）などを使用してください。また定期的な換気をおこなってください。
- 使い始めの時は、室内の換気を十分に行ってください。木質材料に含まれるホルムアルデヒドが残っている可能性があり、科学物質に敏感な体質の方や乳幼児などは、アレルギー症状を起こすことがあります。特に乳幼児の衣類などを収納する場合は、プラスチック袋などに入れたまま収納してください。
- ボルトなどの金具や各部にグラツキや異音などの異常などがないか定期的に点検し、異常が認められた場合は使用を中止してください。
- フタに取り付けているスチールバーがフタからずれて露出している場合は、もとの位置に戻してください。そのまま使用するとケガのおそれがあります。

お願い (その他 注意)

- フタを閉める際、隙間が大きいとホコリが入りやすくなりますので、しっかり伸ばしてズレの無いように閉めてください。
- この商品は水平に保つように設置してください。ガタついたまま使用すると商品の変形やゆがみ、破損の原因となるおそれがあります。
- 高温（目安：35℃以上）や乾燥した場所（目安：湿度 30%以下）で長期間設置しないでください。製品の反りやゆがみ、割れなどが生じる原因になります。
- お手入れの際はシンナーなどの有機溶剤を含んだ布でふかないでください。変色や変形の原因となります。
- 商品は素材特有のにおいがあります。においが移りやすいので、衣類などを収納する場合はプラスチック袋などに入れて収納することをおすすめします。
- 開封後の梱包材は、居住地域自治体のルールに従い、処分してください。
- ベッドフレーム（本体）に脚（別売）を付けずに使用する場合は、ベッドフレーム用バスケットレール（別売）と、ベッドフレーム用バスケット（大・小とも）は設置することができません。
- ご使用になる際は、「20cmの脚」もしくは「26cmの脚」（別売）を取り付けてください。「10cmの脚」と「12cmの脚」（別売）は、バスケットを使用する為の高さが不足しておりますのでご使用になれません。





パーツリスト

バスケット・大 バスケット・小 共通

※各リストは、全サイズ共通です。

※イラストには **バスケット・大** を使用しています。

※この商品はベッドフレーム専用の収納です。ベッドフレーム用バスケットレール（別売）に取り付けてご使用ください。

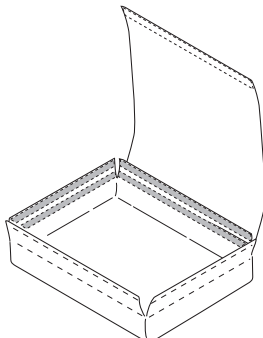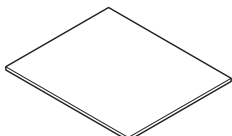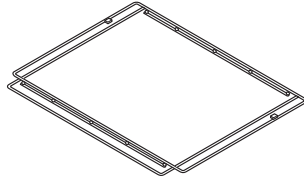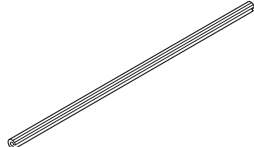
①帆布バスケット  ×1	②底板  ×1	③バスケットフレーム  ×1	④スライド用チューブ  ×2
---	--	--	---

各部の名称


※イラストにはベッドフレーム（本体）・シングルを使用しています。

※イラストには **バスケット・大** を使用しています。

※ご使用になる際は、「20cmの脚」もしくは「26cmの脚」（別売）を取り付けてください。「10cmの脚」と「12cmの脚」（別売）は、バスケットを使用する為の高さが不足しておりますのでご使用になれません。

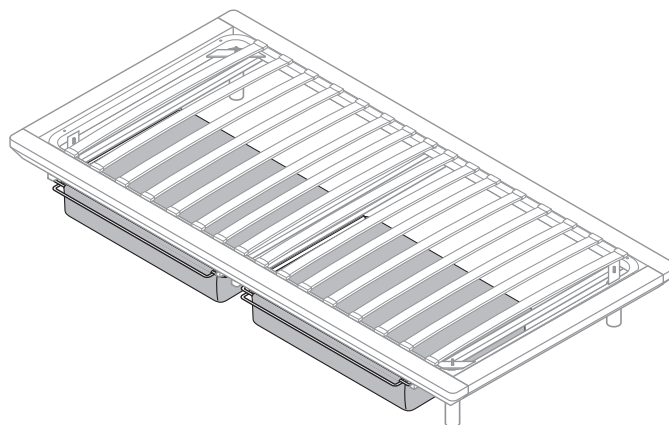

(完成図)

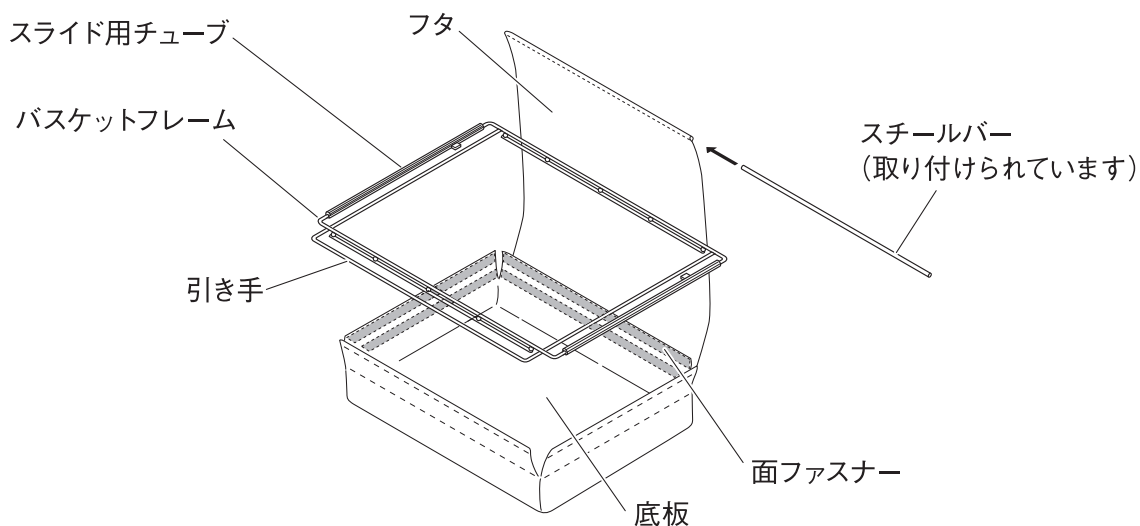

組立方法

※組み立ては、**バスケット・大** **バスケット・小** ともに共通です。

※イラストには **バスケット・大** を使用しています。

お願い
(注意)

組み立て、設置の際は、床や既存の家具がキズつかないようにご注意ください。


※この組立・取扱説明書は、ベッドフレーム（本体）にベッドフレーム用バスケットレール（別売）が取り付けられていることを前提に作成されております。

1

はじめに、敷物を敷いた上に①帆布バスケットを置き、フタを開いた状態にしてください。

お願い
(注意)

バスケットのフタに取り付けているスチールバーは、フタの開閉時にずれて端部が露出することがあります。そのまま使用するとケガのおそれがありますので、もとの位置に戻してから使用してください。

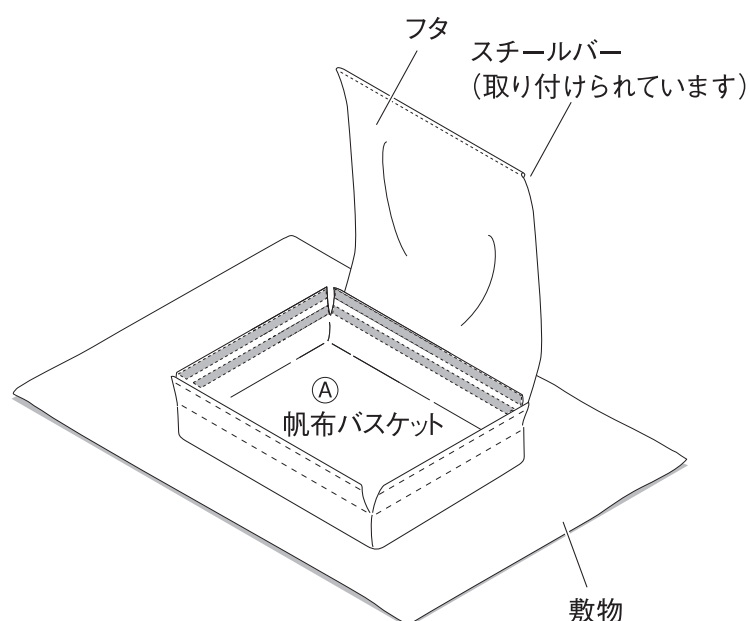

2


①帆布バスケットに②底板を入れます。

※必ず底板を入れた状態でご使用ください。

お願い
(注意)

底板を使用する向きについて

底板には、品質表示シールが張り付けられています。衣類などを収納する際に品質表示シールの印字が色うつりすることがありますので、品質表示シールが張り付けられている面を下向きにして、使用してください。

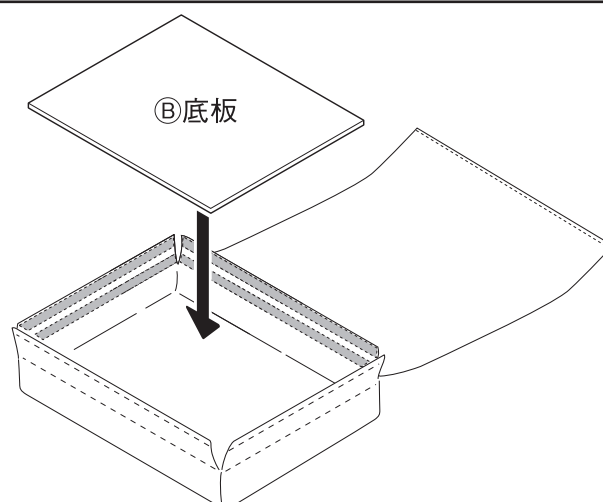

組立方法（つづき）

※イラストに **バスケット・大** を使用しています。

3

①帆布バスケットを下図の通り③バスケットフレームに巻き付け、面ファスナーで固定します。


※フレームには上下があります。（下図参照）

お願い
（注意）

バスケット引き手側のフレームが
下になる向きにしてください。

お願い
（注意）


面ファスナーはしっかりと合わせて固定してください。
ズレていたり、はがれてきたりして収納物をキズつける
原因となります。

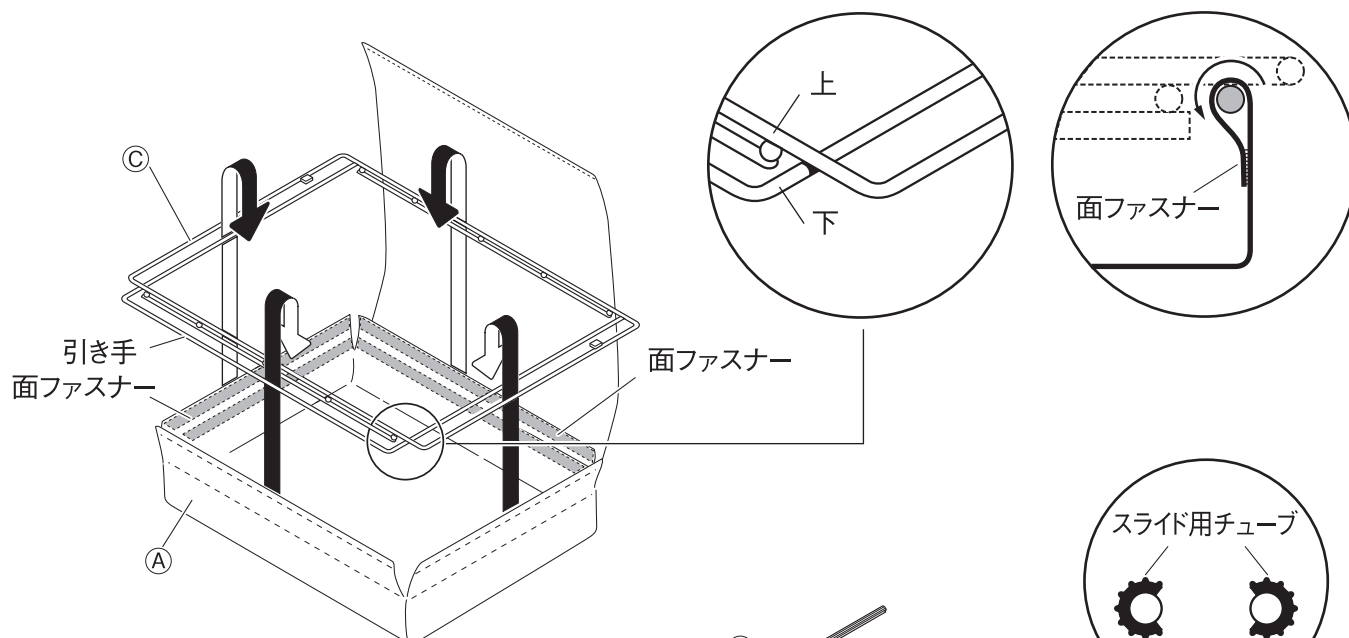

4

③バスケットフレームに④スライド用チューブを取り付けます。

※スライド用チューブには向きがあります。

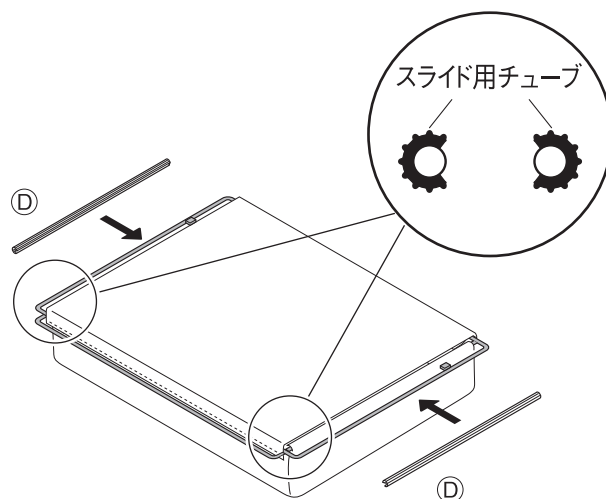


お願い
（注意）

スライド用チューブは消耗品です。必要に応じて
交換パーツを用意しておりますので、お買い上げ
の店舗までお問い合わせください。

5

フタを閉めます。

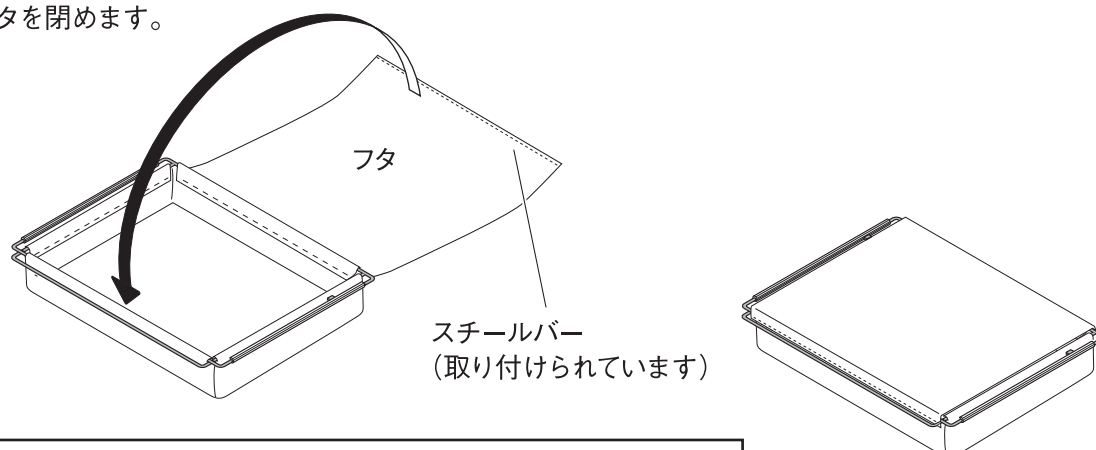

お願い
（注意）

フタを閉じる際、隙間が大きいとホコリが入りやすくなります
のでしっかり伸ばしてズレの無いように閉めてください。

組立方法（つづき）



※イラストに **バスケット・大** を使用しています。

6

ベッドフレーム用バスケットレール（別売）へ取り付けます。

片面からバスケットを取り出す場合

- ① ベッドフレーム（本体）に取りつけたベッドフレーム用バスケットレールの前面のストッパーをゆるめ、背面のストッパーを締めます。
 - ② 左右のレールに、引き手が前面に来るようにバスケットフレームを差し込みます。
 - ③ バスケットフレームの内側で前面のストッパーを締めます。
- ※バスケットとストッパーの位置関係を参照してください。

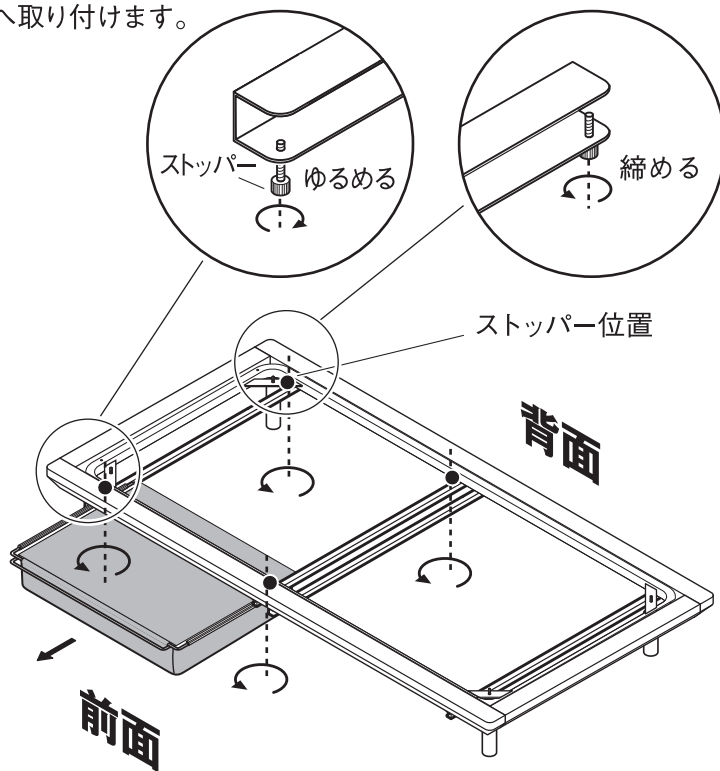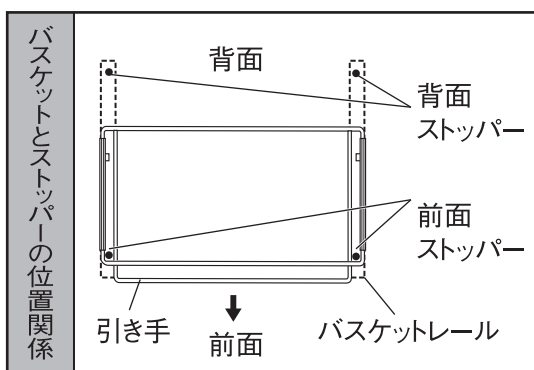



※イラストにはウッドスプリングを省略した
ベッドフレーム（本体）・シングルを使用しています。

お願い
（注意）

ストッパーを回しにくい場合はベッドフレーム用バスケットレール（別売）に付属されている六角レンチ（M3 用）を使用してください。

両面からバスケットを取り出す場合

- ① すべてのストッパーをゆるめます。
 - ② 左右のレールにバスケットフレームを差し込みます。
 - ③ バスケットフレームの内側でストッパーを締めます。
- ※バスケットとストッパーの位置関係を参照してください。

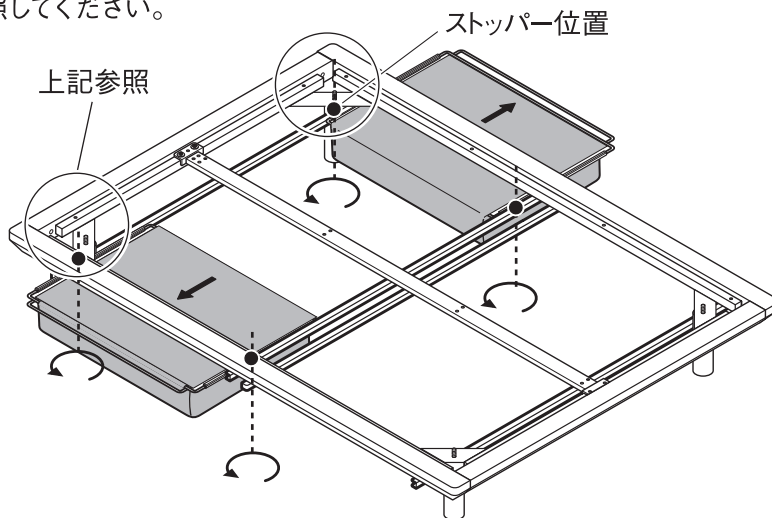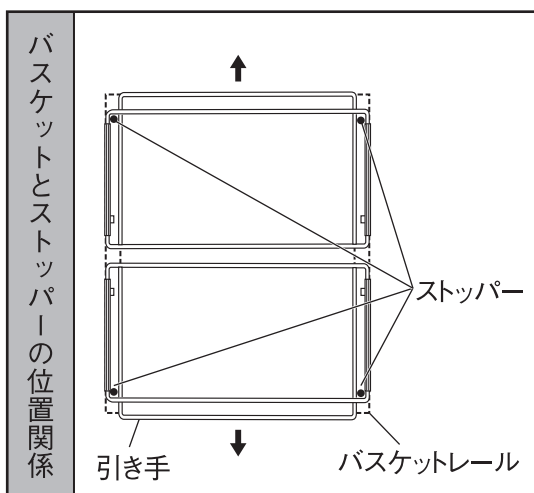

※イラストにはウッドスプリングを省略した
ベッドフレーム（本体）・ダブルを使用しています。

ご使用方法

※イラストには **シングル** サイズを使用しています。


帆布バスケット・設置可能数量確認表

片側（レール1セット）に入る帆布バスケットの最大数量です

下図のように、各サイズのベッドフレーム（本体）に適したレールを取り付けることにより、バスケットを使用することができます。バスケットの設置可能数量は、下記を参照してください。

	スモール	シングル	セミダブル	ダブル	クイーン	キング
バスケット・大のみ	1	1	2	2	3※	3
バスケット・大 / 小組み合わせ		大×1 / 小×1	大×1 / 小×1	大×1 / 小×2	大×2 / 小×1	大×1 / 小×3
					大×1 / 小×2	大×2 / 小×1
バスケット・小のみ	2	2	3	3	4	4


※片面からバスケットを取り出す入れ方はできません。両面からバスケットを取り出すようにしてください。

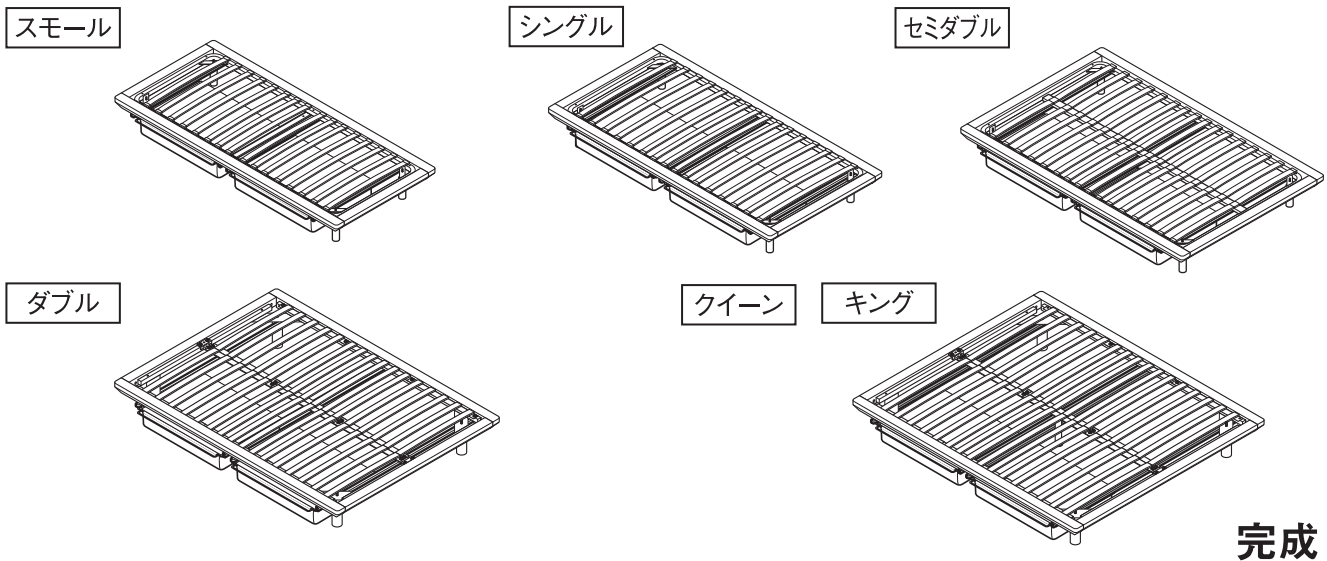


バスケットの取り出し方

●片側に2個以上のバスケットを取り付けている場合、奥のバスケットを取り出すときは、ベッドフレーム用バスケットレール（別売）に付属されている収納ハンドルを使用してください。


- バスケットを取り出す側のストッパーをゆるめてください。
※イラストにはウッドスプリングを省略したベッドフレーム（本体）・シングルを使用しています。

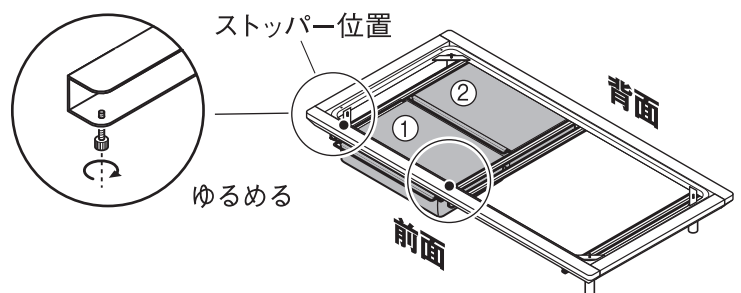

- 手前のバスケット①を取り出し、奥のバスケット②のバスケットフレーム（引き手）に収納ハンドルを引っ掛けます。

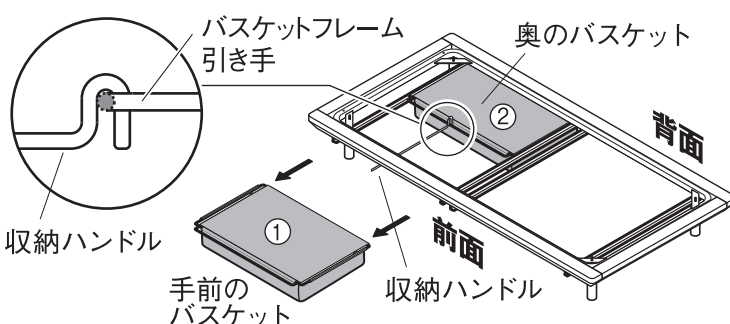

- バスケットを手前まで取り出してください。

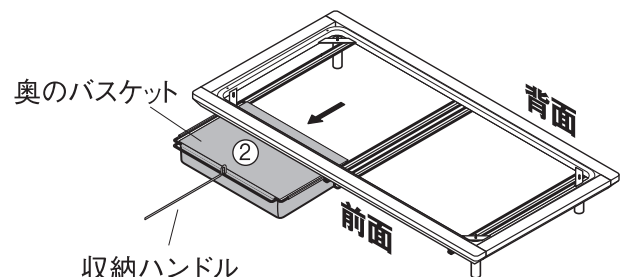

ご使用方法（つづき）

収納ハンドルの保管方法

- 紛失のおそれがある為、バスケットの中に入れて保管することをおすすめします。

スライド用チューブについて

- スライド用チューブは消耗品です。
必要に応じて交換パーツを用意しておりますので、お買い上げの店舗までお問い合わせください。

スチールバーについて

- バスケットのフタに取り付けているスチールバーは、フタの開閉時にずれて端部が露出することがあります。
そのまま使用するとケガのおそれがありますので、もとの位置に戻してから使用してください。

移動について

- 移動するときは、収納物を取り除いてから移動するようにしてください。
- 移動する際は、床面を引きずらずに持ち上げて運んでください。ケガや破損、床面へのキズの原因となります。
- 引越しなどで移動をする際は、組み立て前の状態に戻してから運んでください。
ケガや破損、床面へのキズの原因となります。

廃棄について

- 廃棄の際は、居住地域自治体のルールに従い、処分してください。

お手入れ方法

保守・点検

- 破損、変形した状態では使用しないでください。
- ストッパーやレールに、ゆるみやグラツキがないか定期的に点検し、ゆるみははじめたら、しっかり締め直してください。ゆるんだままだとケガや本体の破損、床面のキズの原因となります。また、ガタツキや異常音の発生の原因となります。

金属部のお手入れ

- 通常のお手入れはやわらかい布で乾ぶきしてください。
- 汚れがひどい時は、3～5%程度に薄めた中性洗剤を浸した布で汚れを落とし、その後、水で浸した布で洗剤をよくふき取ってください。次に乾いたやわらかい布で軽くふいた後で自然乾燥してください。

生成り部のお手入れ

※この商品は、「生成り」の生地を使用しております。「生成り」とは糸や布地を晒（さら）さないもの（無漂白）を言い、色の名ではありません。

- 生成りは漂白していない分、「綿特有のにおい」がそのまま残っているおそれがあります。また、パッケージされた状態で長い時間、高温多湿の状況下にあると、においを強く感じることも考えられます。時間の経過により、においは薄れてきます。
- 水に濡れ、乾燥する際に色素が水分と共に生地表面へと移動し、乾燥後には移動した色素だけが生地表面に残ってシミを作ってしまうです。（生成りの色素の凝縮されたものなので茶系、黄系のシミです）。濡れた場合は早急に乾いた布等で吸い取ってください。（濡れた直後は、生地表面に水分が溜まっています）。
- 漂白されていない分、夾雑物（きょうざつぶつ）内として残った有機的な物質はカビの栄養素にもなります。湿った状態で放置しておくと（漂白した物に比べて）カビが発生しやすくなります。ご注意ください。

ご使用に際して

底板の取り扱いについて

- 汚れた物や湿った物は収納しないでください。底板にカビが生じる原因となります。
- 底板内部の湿気対策を行ってください。
収納部は湿気がこもりやすくなりますので、市販の除湿剤（湿気取り用）などを使用してください。
また、定期的な換気を行ってください。

ホルムアルデヒドの対策について

- ホルムアルデヒドとは

ホルムアルデヒドとは、シックハウス症候群の原因物質の一つと言われています。常温で気化する無色で刺激臭のある化学物質で、家具はもとより建築資材、壁紙を貼る接着剤などに含まれています。少しずつ放散されるため、ホルムアルデヒドに汚染された室内に長時間いると目がチカチカしたり、喉に不快な刺激を感じたりすることがあります。濃度が高いと呼吸困難を起こす場合もあります。

- お部屋の換気をしてください。



家具を設置の際は、室内の換気を十分にしてください。化学物質に敏感な体質の方や乳幼児などは、アレルギー症状を起こすことがあります。

ホルムアルデヒドは空気中に放散されやすいので、普段からこまめに室内の換気を行うようにしてください。複数の家具を同時に設置した場合は特に窓をできるだけ広く開け、十分な換気を行ってください。室内の温度が高くなると、ホルムアルデヒドは多く放散される傾向がありますので、夏季に室内を長時間閉め切っている場合は、特に換気をするようご注意ください。換気効率を上げるため、複数の窓を開けたり、換気扇、扇風機、サーキュレーターを利用することをお勧めします。

- 化学物質に敏感な体質のお客様へ

ホルムアルデヒドに限らず、シックハウス症候群に該当する化学物質は許容量に個人差があります。よって、室内濃度指針値（健康上望ましいとされるホルムアルデヒドの室内濃度値）以下の濃度であっても反応する体質の方もいらっしゃいます。現段階の無印良品の家具におきましても、ホルムアルデヒド放散量の少ない材料を極力使用しておりますが、まったく放散されないわけではありませんので、ご注意ください。特に乳幼児の衣類などを収納する場合は、ビニール袋に入れたままの状態での収納してください。アレルギー症状が起きた際は、医師にご相談されることをお勧めします。

- 無印良品の家具は、梱包内にホルムアルデヒド吸着・分解シート※を入れて出荷しています。
(※ホルムアルデヒド吸着・分解シート：アイシン精機(株)との共同開発)

狭い空間ではホルムアルデヒドは逃げ場がなく、材料に再吸着する可能性があります。そこで、お手元に届くまでに少しでもホルムアルデヒド濃度を低下させるために、ホルムアルデヒド吸着・分解シートを入れてあります。※同梱の「ホルムアルデヒド吸着・分解シート」は効力が落ちておりますので、燃えるゴミとして処分してください。

- 「収納家具用ホルムアルデヒド吸着・分解シート」のご案内

収納家具用ホルムアルデヒド吸着・分解シートを別途販売しております。引出しなど密閉された空間の場合など、ホルムアルデヒドは少しずつ放散され続けますので、継続してのご使用がおすすめです。

製品仕様

品 名	ベッドフレーム用帆布バスケット・大	ベッドフレーム用帆布バスケット・小
製 品 寸 法	幅 765× 奥行 550× 高さ 135 (mm)	幅 765× 奥行 375× 高さ 135 (mm)
製 品 質 量	約 4kg	約 3kg
用 途	ベッドフレーム用帆布バスケット	
耐 荷 重	約 7kg	約 5kg
材 質	帆布バスケット：ポリエステル 65.5%、綿 34.5% 底 板：MDF バスケットフレーム：金属（スチール）／エポキシ樹脂塗装 スチールバー：金属（スチール）／エポキシ樹脂塗装	

Made in Taiwan

お問い合わせ先

商品のお問い合わせは、お買い上げの販売店もしくは下記お客様室までご連絡ください。

株式会社 良品計画

〒170-8424

東京都豊島区東池袋 4-26-3

お客様室でんわ



0120-14-6404

受付時間 ■平日 10:00 ～ 21:00
■土・日・祝 10:00 ～ 18:00

S1Y600901

BED FRAME CANVAS BASKET / L BED FRAME CANVAS BASKET / S

User Guide

Thank you for your purchase.

Read the User Guide before use to ensure correct use and assembly of this product.

Please store this User Guide in an easily accessible place for future reference.

Table of Contents	Pages
Important Information (Safety Advice)	13 - 14
Parts	15
Part Names	15
Assembly Instructions	16 - 18
Directions for Use	19 - 20
Care Instructions	20
Usage	21
Specifications	22
Contact Information	22

Important Information (Safety Advice)

These instructions
must be followed.

This manual contains important information for safe use in order to prevent harm to the user and others as well as damage to property.

Please note the following contents (indications and graphic symbols) before reading the main contents of this manual, and follow the instructions given.

- Explanations of Indications

If the product is used incorrectly, the degree of injury or damage that may arise is classified and explained with the following symbols.



Warning

Indicates a hazard with a level of risk which, if not avoided, could result in death or serious injury*¹ to the user.



Caution

Indicates a hazard with a level of risk which, if not avoided, could result in injury*² to the user or property damage*³.

- Explanations of Graphic Symbols

Instructions are given in the forms of the following graphic symbols. (Examples of graphic symbols are as follows.)



DON'Ts: Actions that are prohibited.



DOs: Actions that must be taken.

*¹ "Serious injury" indicates blindness, injuries, burns, bone fractures, poisoning, or electric shocks which have long term effects and require hospitalisation and / or long-term hospital visits for treatment.

*² "Injury" indicates injuries or burns which do not require hospitalisation or long-term hospital visits for treatment.

*³ "Property damage" indicates expanded damage that involves the house or household property.



Warning



DON'Ts

- Do not keep unwanted packaging materials within reach of small children.
- The fitting parts are all small parts. Keep out of reach of small children. Do not lose any of the parts. Parts may cause suffocation if swallowed accidentally.



Caution



DON'Ts

- Do not use unless fully assembled. Doing so may cause injury.
- Do not attempt to repair or modify the product. Doing so may weaken the strength of the product, resulting in injury.
- Do not use this product if it is damaged or deformed. Doing so may weaken the strength of the product, resulting in injury.
- Use this product only for its intended purpose. Failure to do so may cause damage to the product or injury.
- Do not use the product outside. Doing so may cause warping, deformation or cracks, resulting in injury.
- Do not sit or stand directly on the storage section, or apply excessive force by pulling them. Doing so may cause damage to the product or injury.
- Be careful not to get hands or fingers caught when opening and closing the drawers. This may result in injury.
- Do not place excessive weight on one part of the storage section. Also, do not pull the drawers with excessive force or move them in a direction other than the intended direction. Doing so may cause deformation or damage to the product, resulting in injury.
- Do not store dirty or wet items. Doing so may cause mould in the stored items or the product.
- Do not place heavy items that exceed the withstand load on the product, or place items within the withstand load on just one side of the product. Doing so may cause deformation or damage to the product, resulting in injury.

Caution



DOs

- Secure sufficient space when assembling the product, and assemble on a sheet / rug. Failure to do so may cause scratches to the floor and other furniture. Be careful when assembling the product.
- The product must be moved by two or more people. Attempting to move the product alone may result in injury or damage to the product.
- When moving the Bed Frame (main unit), remove all stored items and detach the canvas basket before moving it.
- Periodically ventilate the room. Especially under the following conditions, infestation of mould and mites may occur, and may cause a health hazard.
 - Humid season
 - During winter, when the difference in temperature between outside and inside is large causing condensation
 - Excessive use of a humidifier.
- Take measures to reduce the amount of humidity in the drawers.
Humidity accumulates easily in the storage section. Use a commercially available dehumidifying agent (for absorbing moisture) to reduce humidity. Also, regularly ventilate the storage section.
- Ventilate the room well at the early stage of product use. Formaldehyde contained in the wooden materials may still remain, and those with chemical sensitivity or infants may experience an allergic reaction. Keep stored items in plastic bags, especially when storing items such as children's clothing.
- Periodically inspect each parts such as bolts for abnormalities such as wobbling or abnormal noises, and stop using the product immediately if any problems are found.
- If the steel bar attached to the lid got detached from the lid and is exposed, return it to its original location. Continued use in this state may result in injury.





Note (Other Cautions)

- The inside of basket may get dusty if there is a large gap when the lid is closed. Be sure to pull the lid firmly to ensure it is not out of place.
- Install the product so that it remains horizontal. Using this product in a wobbly or unstable state may cause deformation or warping, resulting in damage to the product.
- Do not store for long periods of time in a hot (approx. temperature 35°C or higher) or dry (approx. humidity 30% or lower) location. Doing so may cause warping, deformation or cracks in the product.
- Do not wipe with a cloth that contains an organic solvent such as thinner for maintenance. Doing so may cause deformation or discolouration.
- The materials used in this product have a characteristic odour. The odour may transfer to stored items, so it is recommended that you place items such as clothing in plastic bags before storage.
- To dispose of the packaging material after unpacking, follow the rules implemented by your local government.
- The Bed Frame Canvas Basket Rail (sold separately) and Bed Frame Basket (L or S) can not be attached to the Bed Frame (main unit) if the legs (sold separately) are not attached.
- Attach the "20cm legs" or "26cm legs" (sold separately) if using the baskets. The "10cm legs" and "12cm legs" (sold separately) cannot be used as the height of the bed frame becomes insufficient for the use of the baskets.

Parts


For both BASKET / L and BASKET / S models

- * Each list applies to all sizes.
- * The BASKET / L product is used in the illustrations.
- * This product is designed exclusively for use with the Bed Frame (main unit). Attach the Bed Frame Canvas Basket Rails (sold separately) in order to use this product.

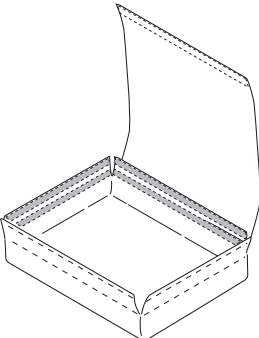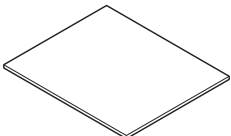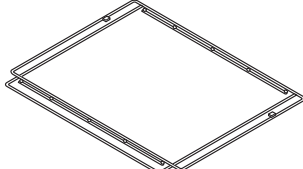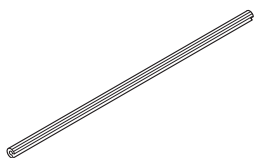Ⓐ Canvas Basket  ×1	Ⓑ Bottom Board  ×1	Ⓒ Basket Frame  ×1	Ⓓ Slide Tube  ×2
---	--	---	--

Part Names

- * The Bed Frame (main unit) / S size is used in the illustrations.
- * The BASKET / L product is used in the illustrations.
- * Attach the "20cm legs" or "26cm legs" (sold separately) if using the baskets. The "10cm legs" and "12cm legs" (sold separately) cannot be used as the height of the bed frame becomes insufficient for the use of the baskets.

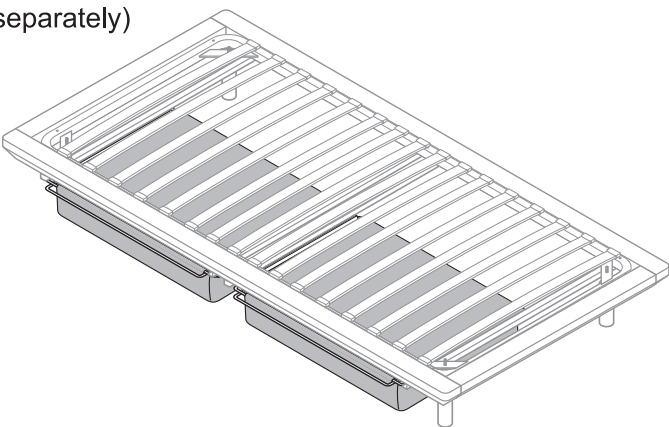

(Completion Image)

Slide Tube

Basket Frame

Handle

Lid

Steel Bar (attached)

Hook and Loop Fastener

Bottom Board

Assembly Instructions

* Assembly instructions apply to **BASKET / L** and **BASKET / S** models.

* The **BASKET / L** product is used in the illustrations.

Note (Caution)

Be careful not to damage the floor and furniture when assembling and installing the product.


* This User Guide is written based on the assumption that the Bed Frame Canvas Basket Rails (sold separately) are already installed on the Bed Frame (main unit).

1

First, place the ① canvas basket onto a sheet / rug with the lid open.

Note (Caution)

The steel bar attached to the basket lid may slide out of place when opening and closing the lid, exposing the tip of the bar. Continued use in this state may result in injury. Return it to the original position.

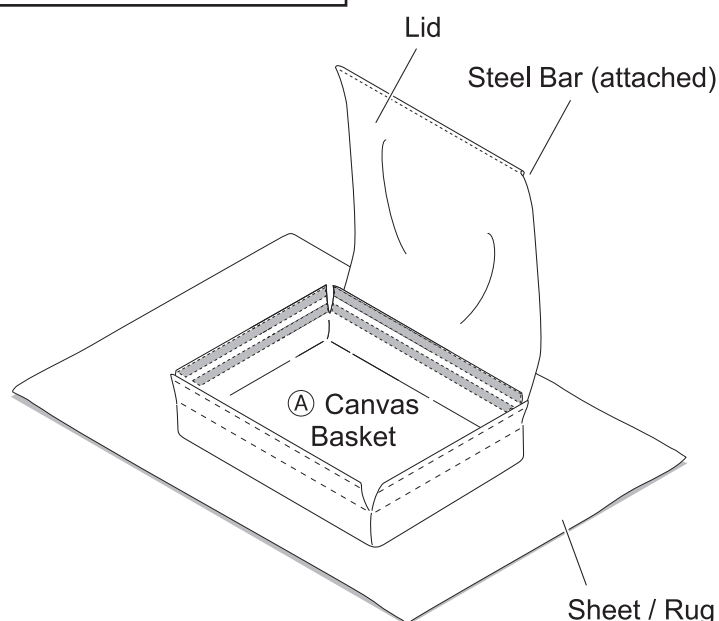

2


Insert the ② bottom board into the ① canvas basket.

* Be sure to use this product with the bottom board inserted.

Note (Caution)

Orientation of the Bottom Board

The bottom board has a quality display sticker attached. Make sure the side with the quality display sticker is facing downwards, as print of the sticker may transfer to stored items such as clothing.

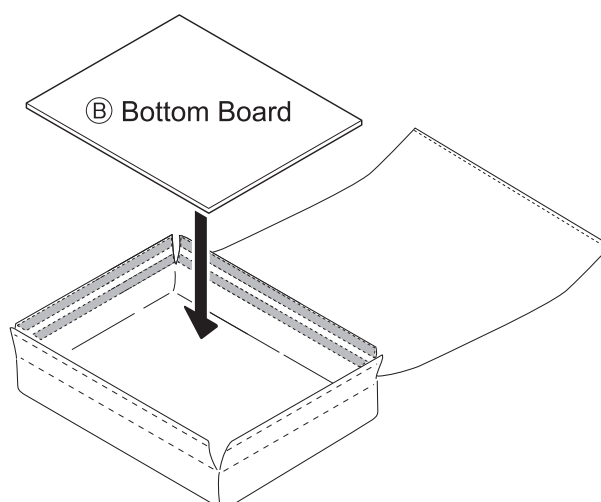

Assembly Instructions (Cont'd) * The BASKET / L product is used in the illustrations.

- 3** Wrap the (A) canvas basket around the (C) basket frame as shown in the figure below, and fix the hook and loop fasteners.


* The top and bottom of the frame are different. (See the figure below)

**Note
(Caution)**

Make sure the side of the frame with the basket handle is facing down.

**Note
(Caution)**

Align the hook and loop fasteners correctly and fix them securely. It may cause scratches to stored items if it is out of place or partly detached.

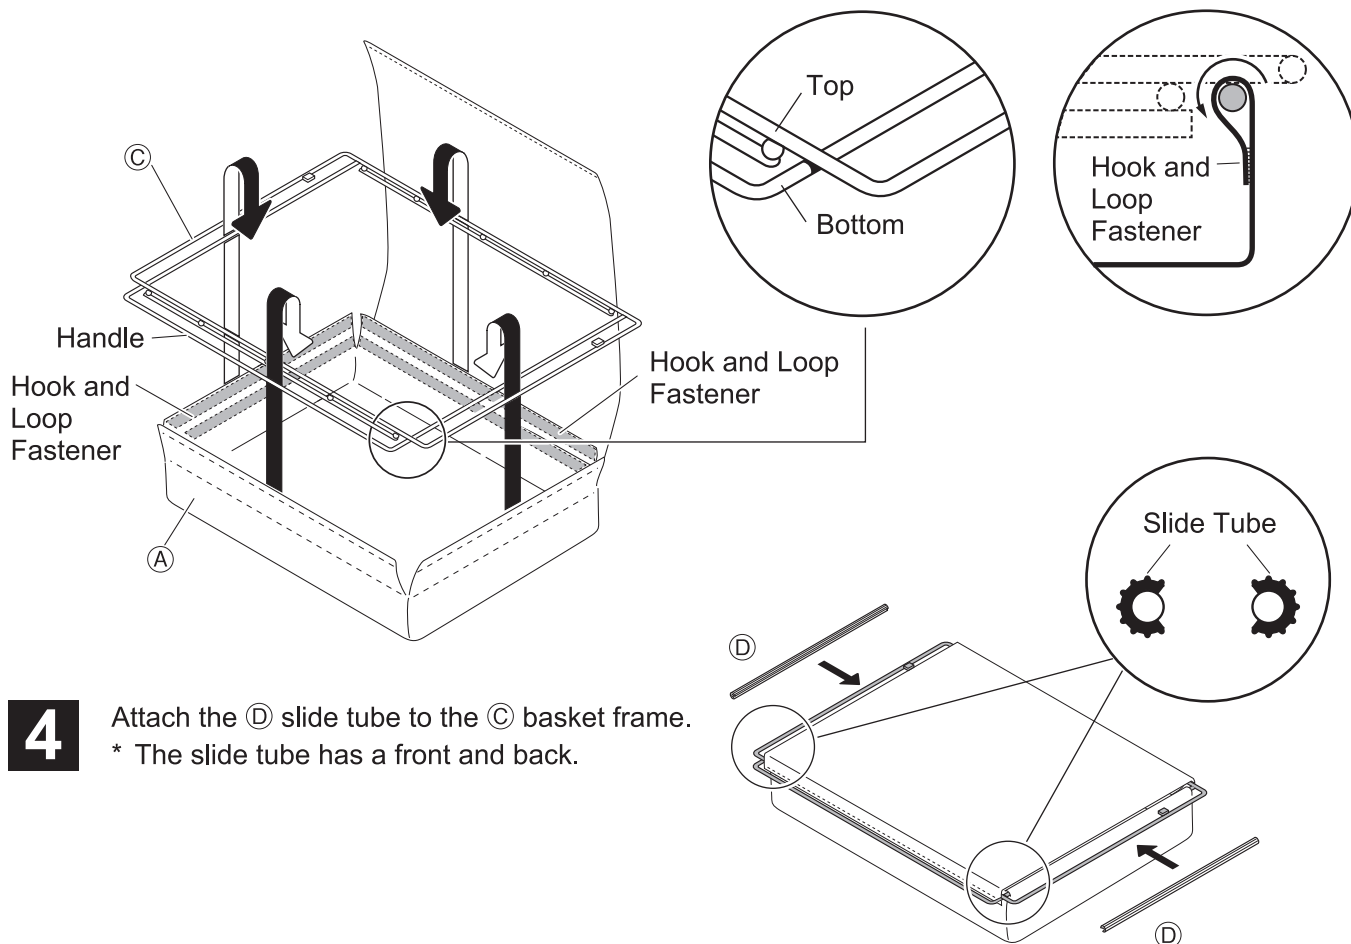


- 4** Attach the (D) slide tube to the (C) basket frame.

* The slide tube has a front and back.

**Note
(Caution)**

The slide tube is a consumable item. Replacement parts are available from the store where you purchased the product if needed.

- 5** Close the lid.

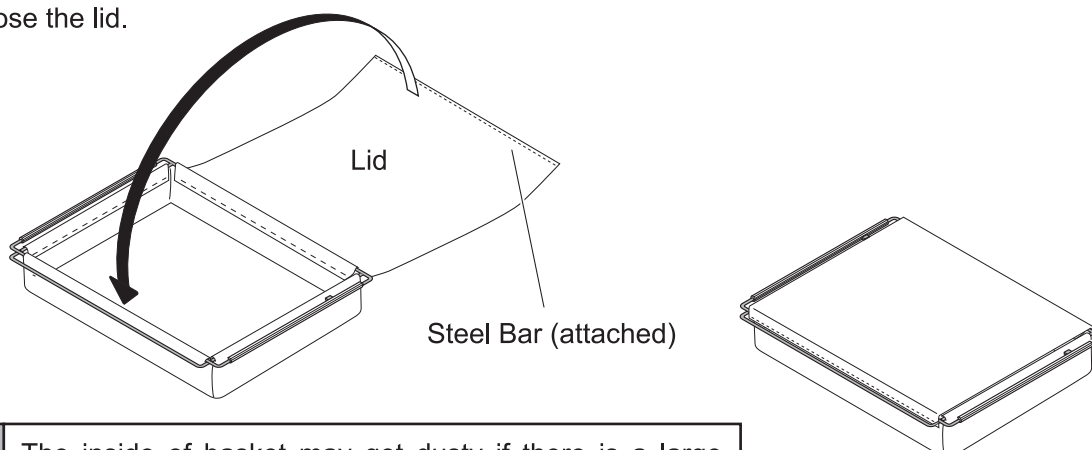

**Note
(Caution)**

The inside of basket may get dusty if there is a large gap when the lid is closed. Be sure to pull the lid firmly to ensure it is not out of place.



Assembly Instructions (Cont'd) * The BASKET / L product is used in the illustrations.

- 6** Attach to the Bed Frame Canvas Basket Rail (sold separately).

Removing the Basket from One Side

- ① Loosen the stopper on the front of the Bed Frame Canvas Basket Rail attached to the Bed Frame (main unit), and tighten the back side stopper.
- ② Insert the ③ basket frame into the left and right rails so that the handle is facing the front.
- ③ Tighten the front stoppers on the inside of the basket frame.

* Refer to "Positioning of the Basket and Stoppers".

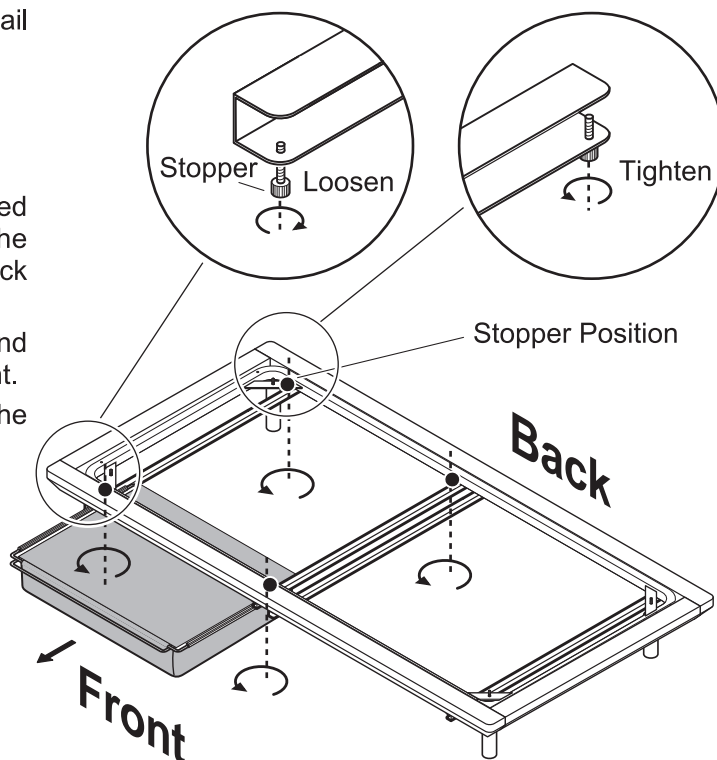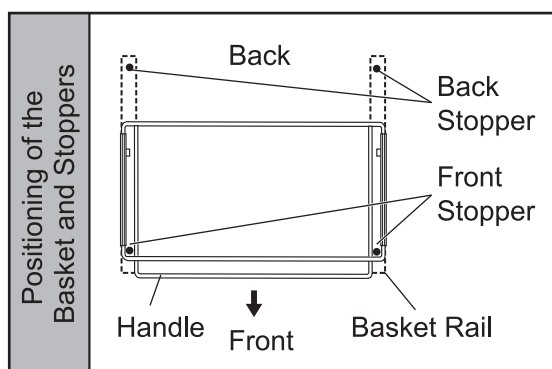

* The Bed Frame (main unit) / S size model with wooden springs omitted is used in the illustration.



Note (Caution)

If the stoppers are difficult to rotate, use the hexagonal wrench (M3) provided with the Bed Frame Canvas Basket Rail (sold separately).

Removing the Basket from Both Sides

- ① Loosen all of the stoppers.
- ② Insert the basket frame into the left and right rails.
- ③ Tighten the stoppers on the inside of the basket frame.

* Refer to "Positioning of the Basket and Stoppers".

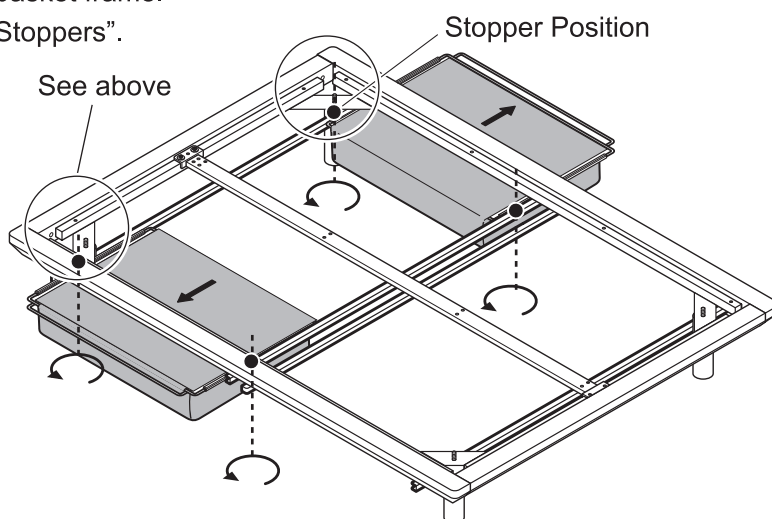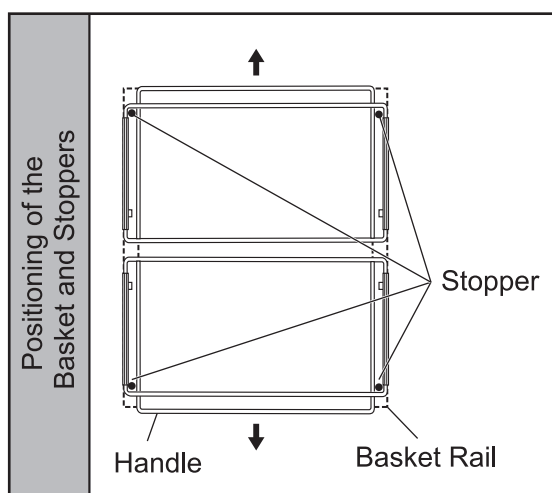

* The Bed Frame (main unit) / D size model with wooden springs omitted is used in the illustration.

Directions for Use

* The S size product is used in the illustrations.


Number of Canvas Baskets per Model

This table shows the maximum number of canvas baskets that can be fitted into one side (1 rail set).

As shown in the figure below, baskets can be used by attaching the appropriate number of rails to each size of Bed Frame (main unit). Refer to the table below for details on the maximum number of baskets that can be used.

	SS	S	SD	D	Q	K
Basket / L only	1	1	2	2	3*	3
Basket / Combination of L and S		L × 1, S × 1	L × 1, S × 1	L × 1, S × 2	L × 2, S × 1	L × 1, S × 3
					L × 1, S × 2	L × 2, S × 1
Basket / S only	2	2	3	3	4	4

* Baskets cannot be installed to be removed from one side. Remove the baskets from both sides.

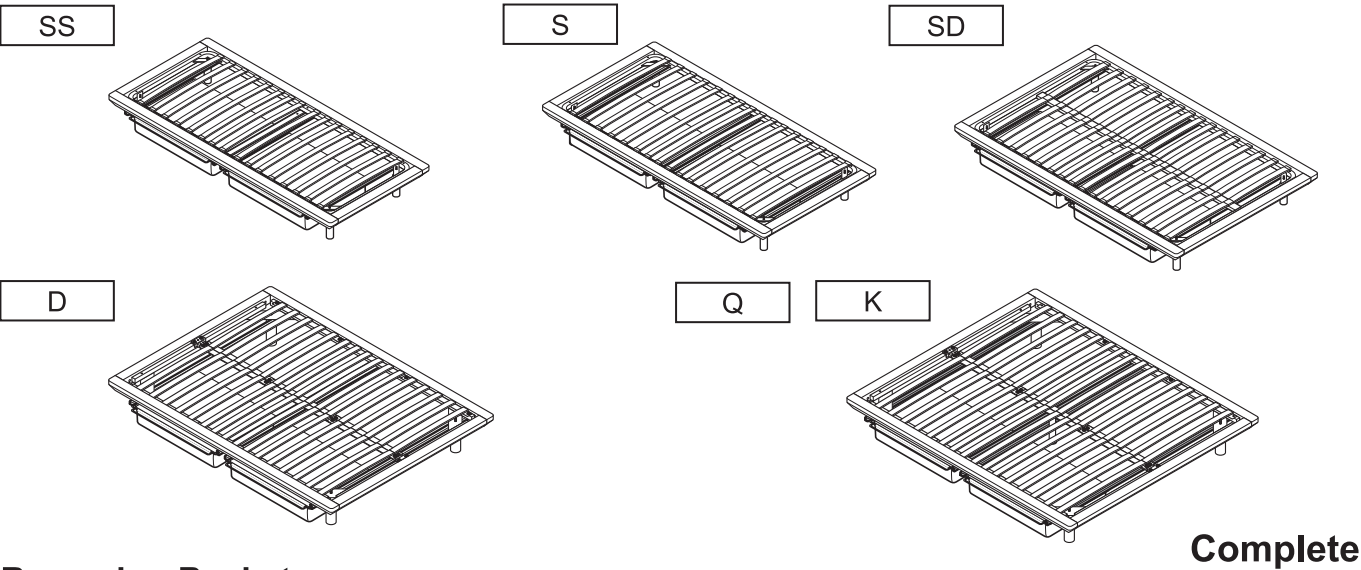


Removing Baskets

- If there are 2 or more baskets attached to one side, use the storage handle provided with the Bed Frame Canvas Basket Rail (sold separately) to remove the back basket.

1


Loosen the stoppers on the side that you want to remove the basket from.

* The Bed Frame (main unit) / S size model with wooden springs omitted is used in the illustration.

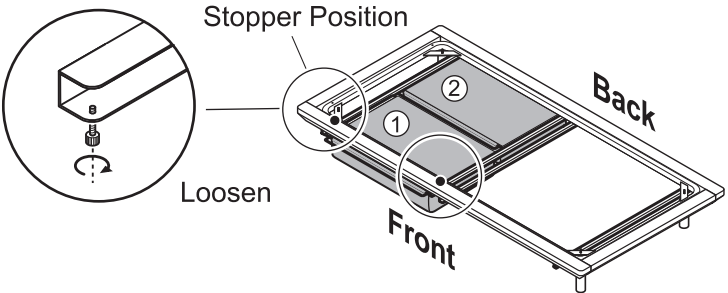


2

Remove the front ① basket, and hook the storage handle onto the basket frame (handle) of the back ② basket.

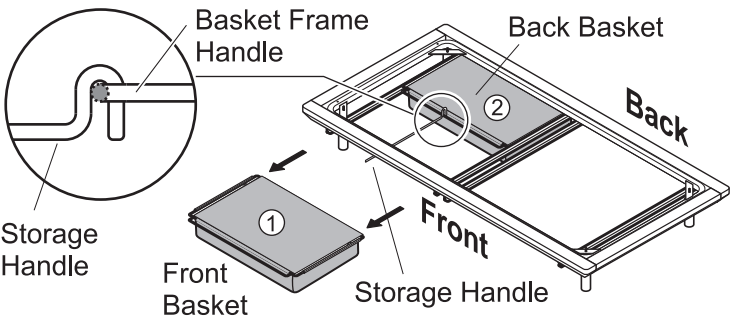

3

Pull the basket to the front.

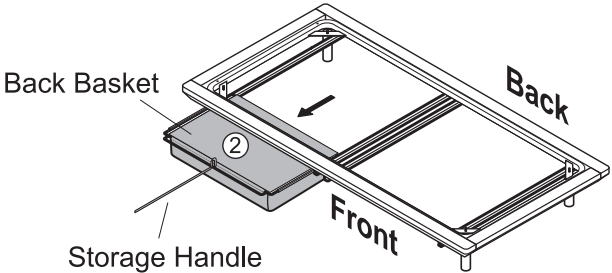

Directions for Use (Cont'd)

Storing of Storage Handle

- It is recommended that you store the handle in the basket to prevent it from getting lost.

Slide Tubes

- The slide tube is a consumable item.
Replacement parts are available from the store where you purchased the product if needed.

Steel Bar

- The steel bar attached to the basket lid may slide out of place when opening and closing the lid, exposing the tip of the bar.
Continued use in this state may result in injury. Return it to the original position.

Moving the Product

- When moving the product, remove any items stored in the product before moving it.
- Lift the product when moving it. Do not drag it on the floor. Doing so may cause injury, damage to the unit or scratches to the floor.
- When moving the product for a move, etc., disassemble the unit before moving it.
Doing so may cause injury, damage to the unit or scratches to the floor.

Disposal

- To dispose of this product, follow the rules implemented by your local government.

Care Instructions

Maintenance and Inspection

- Do not use this product if it is damaged or deformed.
- Periodically check the stoppers and rails for any looseness or wobbling, and re-tighten them if any looseness is found. Continued use with loose hooks or legs may result in injury, damage to the product or scratches to the floor. It may also cause instability or abnormal noises to occur.

Maintenance for Metal Sections

- For normal care, wipe with a soft, dry cloth.
- If the product is particularly dirty, wipe off the dirt with a cloth soaked in a 3% to 5% neutral detergent solution. Then wipe off any detergent residue with a damp cloth. Next, gently wipe with a soft, dry cloth and let the product dry naturally.

Maintenance for Unbleached Sections

- * This product is made with “unbleached” fabric. “Unbleached” indicates threads and fabric that has not been bleached. It is not the name of a colour.
- The material used in this product may have a distinct odour because it has not been bleached. This odour may become stronger if the product is kept in its packaging or in a high temperature and high humidity environment for a long period of time. The odour fades over time.
- If the product becomes wet, coloured pigment may transfer to the surface of the material as the product dries, leaving a stain on the surface. (This will be a brown or yellow stain as it is a concentration of the coloured pigment from the unbleached fabric.) If the product becomes wet, wipe immediately with a dry cloth. (Liquids are not immediately absorbed into the fabric.)
- As the fabric is not bleached, organic elements that remained as foreign substance can be a cause of mould. Please note that if left in a humid environment, this product may become mouldy faster than a bleached product.

Usage

Handling the Bottom Board

- Do not store dirty or wet items. Doing so may cause mould to occur in the bottom board.
- Take measures to reduce the amount of humidity around the bottom board.
Humidity accumulates easily in the storage section. Use a commercially available dehumidifying agent (for absorbing moisture) to reduce humidity.
Also, regularly ventilate the storage section.

Formaldehyde Countermeasures

- What is Formaldehyde?

Formaldehyde is said to be one of the causes of sick house syndrome. It is a colourless, pungent smelling compound that vaporizes at room temperature, and is found in such items as furniture, building materials and wallpaper adhesives. It is released gradually, but people in a room where formaldehyde has accumulated for a long time may experience symptoms such as itchy eyes or a sore throat. A high concentration of formaldehyde may cause breathing difficulties.

- Ventilate the room.



Ventilate the room well when installing the furniture. Small children and those who are sensitive to chemicals may have an allergic reaction.

Formaldehyde is easily dispersed in the air. Therefore, be sure to ventilate the room regularly. When several pieces of furniture are installed at the same time, open the windows widely for sufficient ventilation. More formaldehyde is released when the room temperature increases. Therefore, be careful if the room is closed for a long time during the summer, and ventilate the room thoroughly. In order to increase ventilation efficiency, it is recommended that you open multiple windows, or use a ventilation fan or air circulator.

- For Persons Who Have High Sensitivity to Chemicals

There are individual differences in resistance to chemicals other than formaldehyde that are related to sick house syndrome. Therefore, even when the actual formaldehyde value in the room is lower than the indoor concentration guideline value (indoor concentration of formaldehyde that is desirable for health), some people react to formaldehyde. At present, MUJI furniture products are made with materials that emit as little formaldehyde as possible, but this does not guarantee that no formaldehyde is emitted at all. Keep stored items in plastic bags, especially when storing items such as children's clothing.
We recommend consulting a physician if you experience any allergic symptoms.

- MUJI furniture products contain formaldehyde absorption / decomposition sheets(*) as part of the packing materials.

(* Formaldehyde absorption / decomposition sheet: Jointly developed with Aisin Seiki Co., Ltd.)

When used in narrow spaces, formaldehyde may be re-absorbed by the material if there is nowhere for it to dissipate. Formaldehyde absorption / decomposition sheets are used to reduce the concentration of formaldehyde as much as possible before the product reaches the customer.

* Effectiveness of the "formaldehyde absorption / decomposition sheet" in the packaging has been expended by the time the package reaches the customer, and it can be disposed of as burnable rubbish.

- Information on "Formaldehyde Absorption / Decomposition Sheets"

Formaldehyde absorption / decomposition sheets for storage furniture are sold separately. We recommend continued use for airtight spaces such as drawers in which formaldehyde may be constantly released in small quantities.

Specifications

Product Name	BED FRAME CANVAS BASKET / L	BED FRAME CANVAS BASKET / S
Product Dimensions	W765 × D550 × H135 (mm)	W765 × D375 × H135 (mm)
Product Weight	Approx. 4kg	Approx. 3kg
Usage	Bed Frame Canvas Basket	
Withstand Load	Approx. 7kg	Approx. 5kg
Materials	Canvas Basket: 65.5% Polyester, 34.5% Cotton Bottom Board: MDF Basket Frame: Metal (Steel) / Epoxy Resin Coating Steel Bar: Metal (Steel) / Epoxy Resin Coating	

Made in Taiwan

Contact Information

For your inquiry about the product, please contact the store where you bought it.

床框用帆布收纳篮/大
床框用帆布收纳篮/小

组装/使用说明书

本次承蒙惠购本商品，在此深表感谢。
使用前请务必仔细阅读本文，并在对内容充分理解的基础上再正确组装和使用。
此外，请务必妥善保管本文，以备随时进行确认。

目录	页
重要通知 (安全注意事项)	24 ~ 25
配件清单	26
各部位名称	26
组装步骤	27 ~ 29
使用方法	30 ~ 31
保养方法	31
使用注意事项	32
产品规格	33
联系方式	33

重要通知(安全注意事项)

请务必遵守。

为了防止使用者或他人遭受危害和经济损失，本文中记述了确保安全且正确使用的重要内容。
请在充分理解下述内容(标示/图形符号)的基础上仔细阅读本文，并严格遵守所述事项。

●标示说明

按错误使用所造成的危害或损失程度进行分类说明。

 警告 可能会导致使用者死亡或重伤(※1)的内容。	 注意 可能会导致使用者遭受伤害(※2)或物质损失(※3)的内容。
---	---

●图形符号说明

通过以下图形符号对应严守的内容进行说明。(以下为图形符号范例。)

 不得执行的“禁止”内容。	 必须执行的“强制”内容。
--	--

- ※1 所谓重伤，是指因失明或受伤、烫烧伤、骨折、中毒、触电等原因而留下后遗症以及需住院治疗、长期就医的伤势。
- ※2 所谓伤害，是指无需治疗或住院、长期就医的受伤、烫烧伤。
- ※3 所谓物质损失，是指住房、家庭财产相关的连带损失。

 警告	
 禁止	● 不要的包装材料请放置于婴幼儿无法触及的场所。 ● 组装零件为细小的零部件。请勿放在婴幼儿可以触及的地方。此外请勿丢失。否则不小心吞下时可能会导致窒息等。

 注意	
 禁止	● 组装完成之前请勿使用。否则可能会导致受伤。 ● 请勿擅自维修或改造。否则可能导致产品强度下降而受伤。 ● 在损坏、变形的状态下请勿使用。否则可能导致产品强度下降而受伤。 ● 请勿用于原本用途以外的其他用途。否则可能导致损坏而受伤。 ● 请勿在室外使用。否则可能导致弯曲、歪斜或开裂等而受伤。 ● 请勿在收纳部位上方乘坐、施压或大力拉开抽屉。否则可能导致损坏、受伤。 ● 开关抽屉时请小心不要夹到手。否则可能导致受伤。 ● 请勿使收纳部位局部过度负重。此外，请勿用力拉扯，移动时请务必顺着(滑轮)行进方向。否则可能因为商品的变形或损坏而导致受伤。 ● 请勿收纳脏的或湿的物品。否则可能导致收纳物品或产品主体发霉。 ● 请勿放置超过承重的物品,即使在承重范围内也请避免局部偏重。否则可能因为商品的变形或损坏而导致受伤。
 严守	● 组装时请确保足够的空间，并铺设铺垫物。以防损伤地面和原有的家具。作业时请特别注意。 ● 移动时请务必至少由2人共同作业。如果单人强行搬动，则可能导致受伤或商品损坏。 ● 移动床框(主体)时，请取下收纳物品，并拆下帆布收纳篮(另售)后再移动。

! 注意	
! 严守	● 请定期进行房间的换气。尤其在下述环境下易导致发霉或螨虫繁殖而危害健康。 · 高湿度的季节 · 冬季等外部冷空气与室内温度产生温差而导致结露的环境 · 过度使用加湿器 ● 请对抽屉内部采取除湿对策。 收纳部位容易积存湿气，请使用市面销售的除湿剂(去除湿气用)等。同时请定期换气。 ● 刚开始使用时，请务必对室内进行充分换气。木质材料等中可能含有甲醛残留物，易导致化学物质过敏体质者或婴幼儿等出现过敏症状。尤其收纳婴幼儿的衣物等时，请先放入塑料袋内再收纳。 ● 请定期检查螺栓等金属零件、各部位是否有摇晃或异常声响等，发现异常时请停止使用。 ● 安装于盖子的钢棒偏离露出盖时，请将其放回原来的位置。如果照常使用可能造成受伤。

请求(其他注意事项)	
	● 关闭盖子时，如果空隙较大灰尘容易进入，请尽量将盖子部位伸展平整使其盖紧。 ● 本商品请保持水平放置。在不平稳的状态下使用可能会造成商品变形、歪斜或损坏。 ● 请勿长期设置于高温场所(参考：温度在35℃以上)或干燥的场所(参考：湿度在30%以下)。否则可能导致产品弯曲、变形或开裂等。 ● 保养时请勿使用含有天那水等有机溶剂的布擦拭。否则可能导致变色或变形。 ● 商品会有材料特有的气味。由于容易使收纳物品沾染上气味，收纳衣物等时建议先放入塑料袋内再收纳。 ● 开封后的包装材料，请按各地区规定的方式进行废弃处理。 ● 床框(主体)上未安装脚(另售)使用时，无法设置床框用收纳篮轨(另售)与床框用收纳篮(大/小)。 ● 使用时，请安装“20cm脚”或“26cm脚”(另售)。“10cm脚”及“12cm脚”由于高度不足于安装收纳篮，因此不可使用。

配件清单

收纳篮/大





收纳篮/小

共通

- ※ 各尺寸的清单皆共通。
- ※ 插图使用的是

收纳篮/大

。
- ※ 本商品为床框专用收纳商品。请安装于床框用收纳篮滑轨(另售)使用。

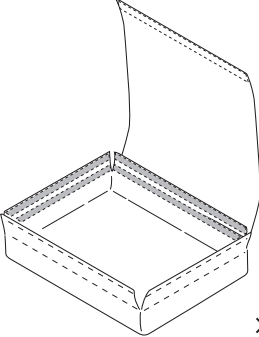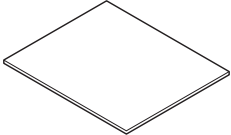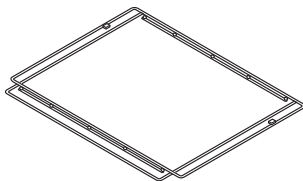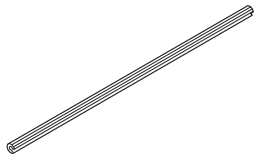
① 帆布收纳篮  ×1	② 底板  ×1	③ 篮框  ×1	④ 滑管  ×2
--	---	--	---

各部位名称


- ※ 插图使用的是床框(主体)/单人。
- ※ 插图使用的是

收纳篮/大

。
- ※ 使用时，请安装“20cm脚”或“26cm脚” (另售)。
“10cm脚”及“12cm脚”由于高度
不足于安装收纳篮，因此不可使用。

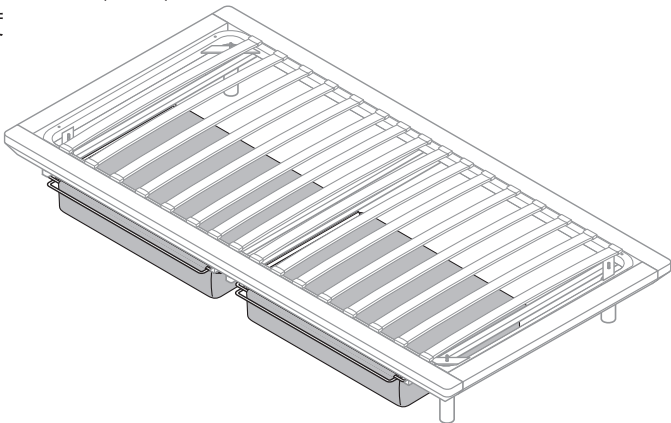

(完成图)

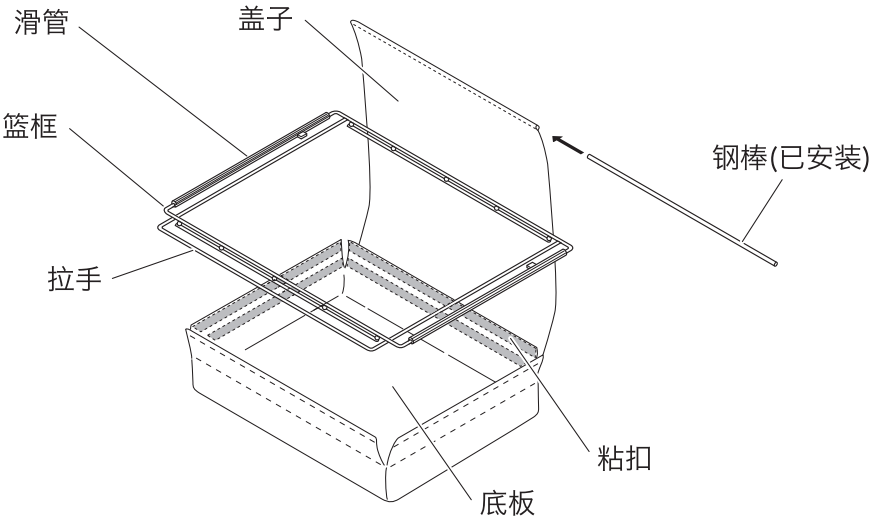

组装步骤

※ 收纳篮/大 收纳篮/小 的组装方式皆共通。

※ 插图使用的是 收纳篮/大 。

请求
(注意事项)

组装或设置时，请注意不要损伤地面和已有的家具。


※ 本组装/使用说明书是以在床框(主体)上安装床框用收纳篮滑轨(另售)为前提而制作。

1

首先请铺设铺垫物，在上面放置①帆布收纳篮，并将盖子保持开启状态。

请求
(注意事项)

收纳篮盖子上安装的钢棒在开合盖子时可能会偏离而从边端露出。此时如果照常使用可能导致受伤，因此请恢复原来的位置再使用。

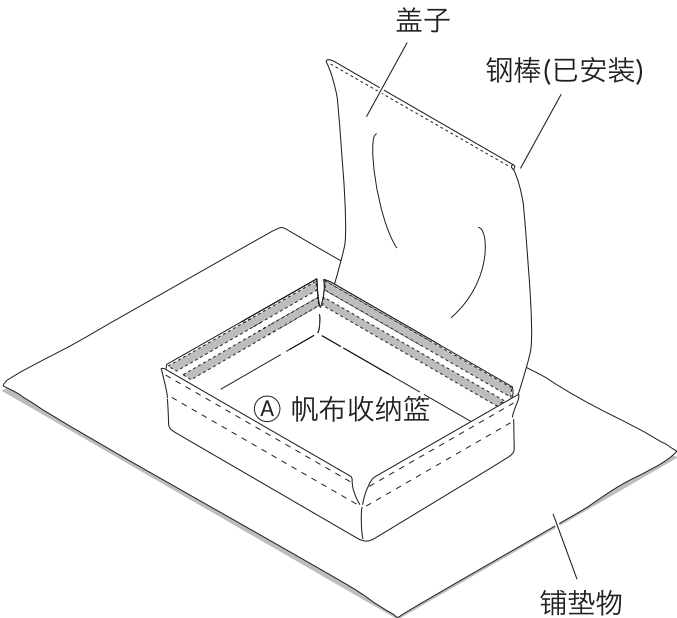


2

在①帆布收纳篮放入②底板。
※ 请务必放入底板再进行使用。

请求
(注意事项)

关于使用底板的方向
底板上贴有质量标签。收纳衣物等时，质量标签上的印字可能会串色，因此请将贴有质量标签的面朝下使用。

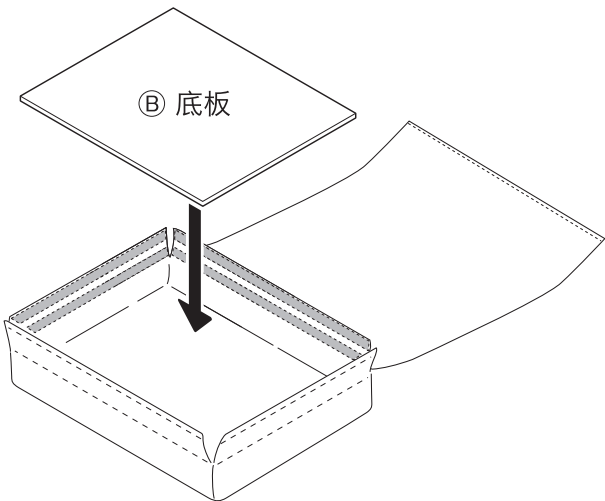


组装步骤(续)


※ 插图使用的是 收纳篮/大。

3 如下图将A帆布收纳篮翻卷在C篮框上，并通过粘扣固定。
※ 框架需区分上下方向。(参考下图)

请求 (注意事项)	请将篮子拉手侧的框架朝下。	请求 (注意事项)	粘扣请牢牢贴好固定。偏移或脱落可能会损伤收纳物品。
--------------	---------------	--------------	---------------------------

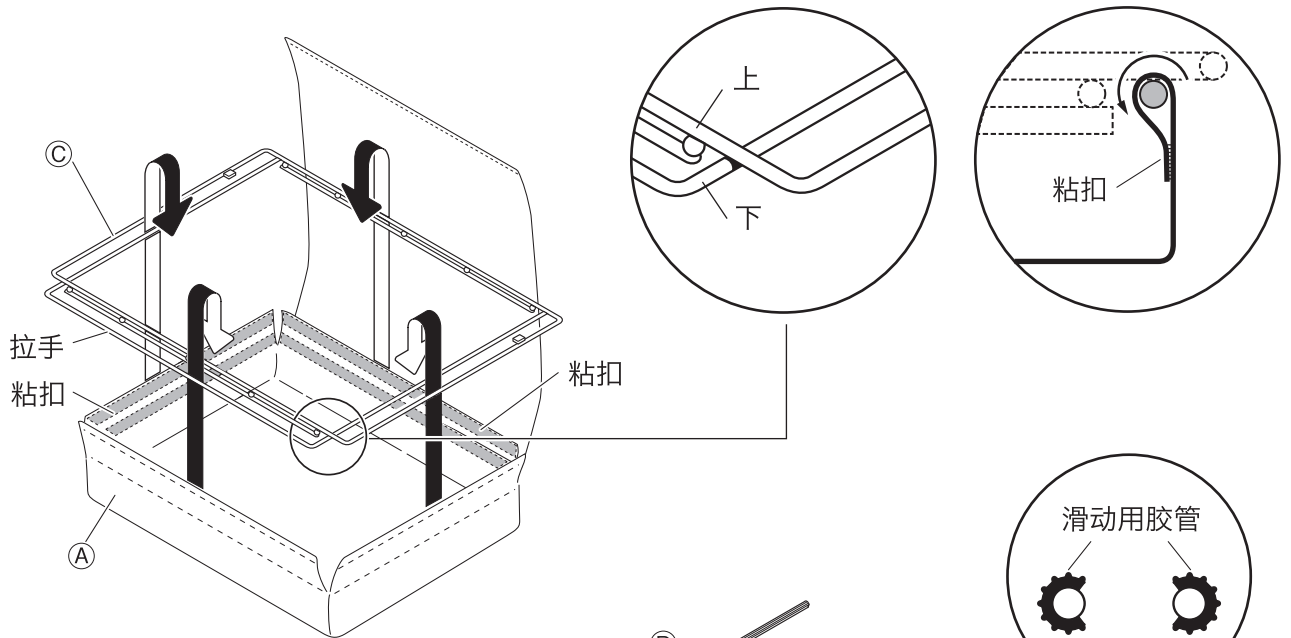


4 在C篮框上安装D滑管。
※ 滑管需区分方向。

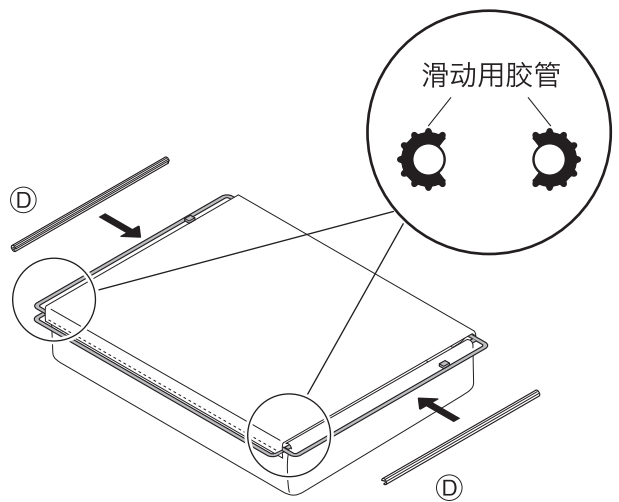

请求 (注意事项)	滑管为消耗品。需要更换配件时，请向购买的店铺咨询。
--------------	---------------------------

5 关闭盖子。


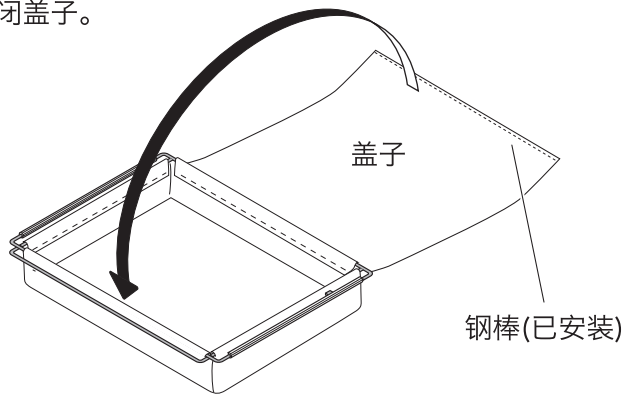


请求 (注意事项)	关闭盖子时，如果空隙较大将容易进入灰尘，请确认盖子是否伸展平整且盖实。
--------------	-------------------------------------

6 安装于床框用收纳篮滑轨(另售)。

从单侧取出收纳篮时

- ① 将床框(主体)上安装的床框用收纳篮滑轨前面的制动器拧松，拧紧背面的制动器。
 - ② 在左右导轨上，插入C篮框并使拉手置于前面。
 - ③ 在篮框内侧拧紧前面的制动器。
- ※ 请参考收纳篮与制动器的相关位置。

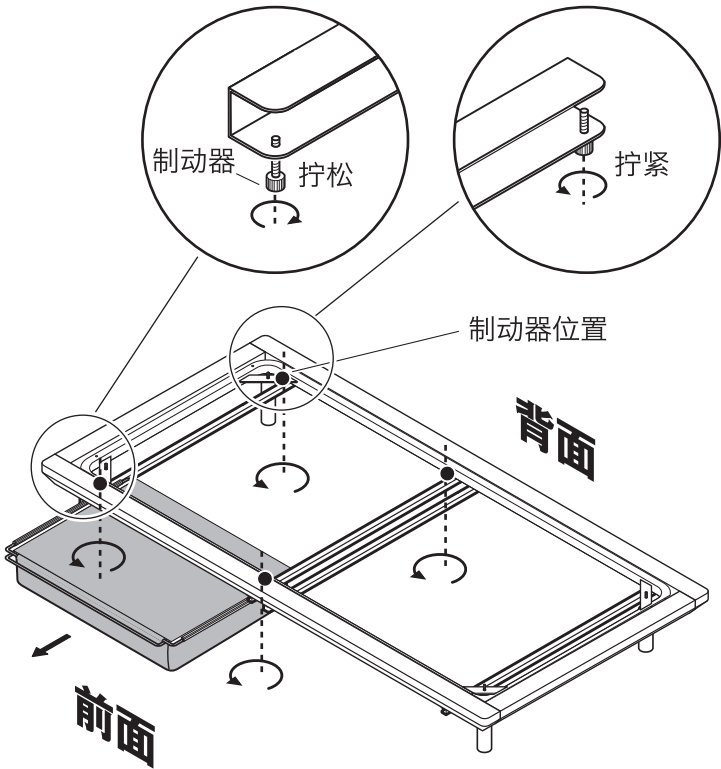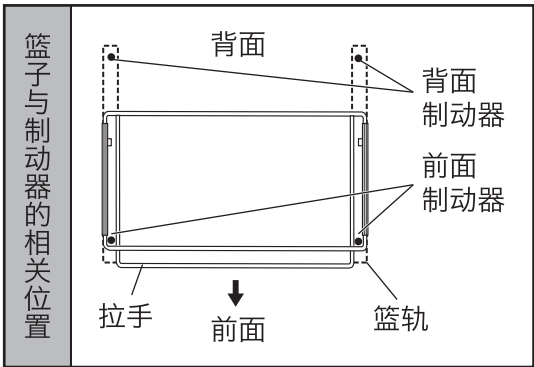



※ 插图使用的是省略木弹簧部位表示的床框(主体)/单人。

请求
(注意事项)

制动器不易旋转时，请使用床框用收纳篮滑轨(另售)附属的六角扳手(M3用)。

从两侧取出收纳篮时

- ① 拧松所有的制动器。
 - ② 在左右导轨上插入篮框。
 - ③ 在篮框内侧拧紧制动器。
- ※ 请参考收纳篮与制动器的相关位置。

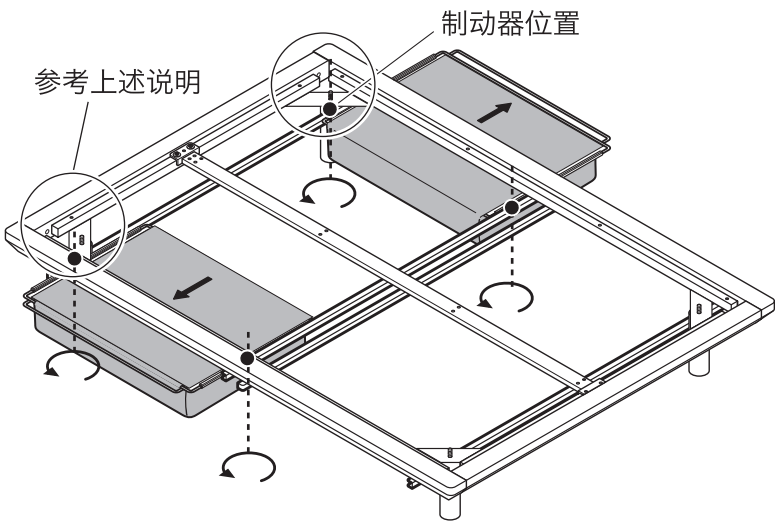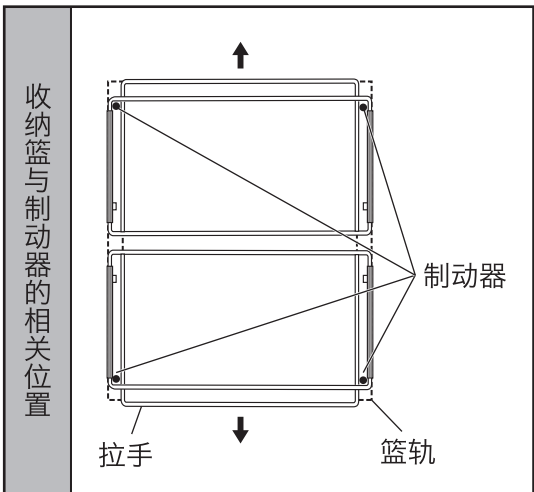

※ 插图使用的是省略木弹簧部位表示的床框(主体)/双人。

使用方法


※ 插图使用的为 单人 尺寸。

帆布收纳篮/可设置数量确认表 在单侧(导轨1套装)可放入帆布收纳篮的最大数量。

如下图，通过在各尺寸的床框(主体)安装相适用的导轨，即可使用收纳篮。可设置收纳篮的数量请参考下述说明。

	小	单人	小双人	双人	加宽双人	特宽双人
仅限收纳篮/大	1	1	2	2	3※	3
收纳篮/大/小组合		大×1/小×1	大×1/小×1	大×1/小×2	大×2/小×1	大×1/小×3
					大×1/小×2	大×2/小×1
仅限收纳篮/小	2	2	3	3	4	4


※ 无法从单侧取出或放入收纳篮。请从两侧取出收纳篮。

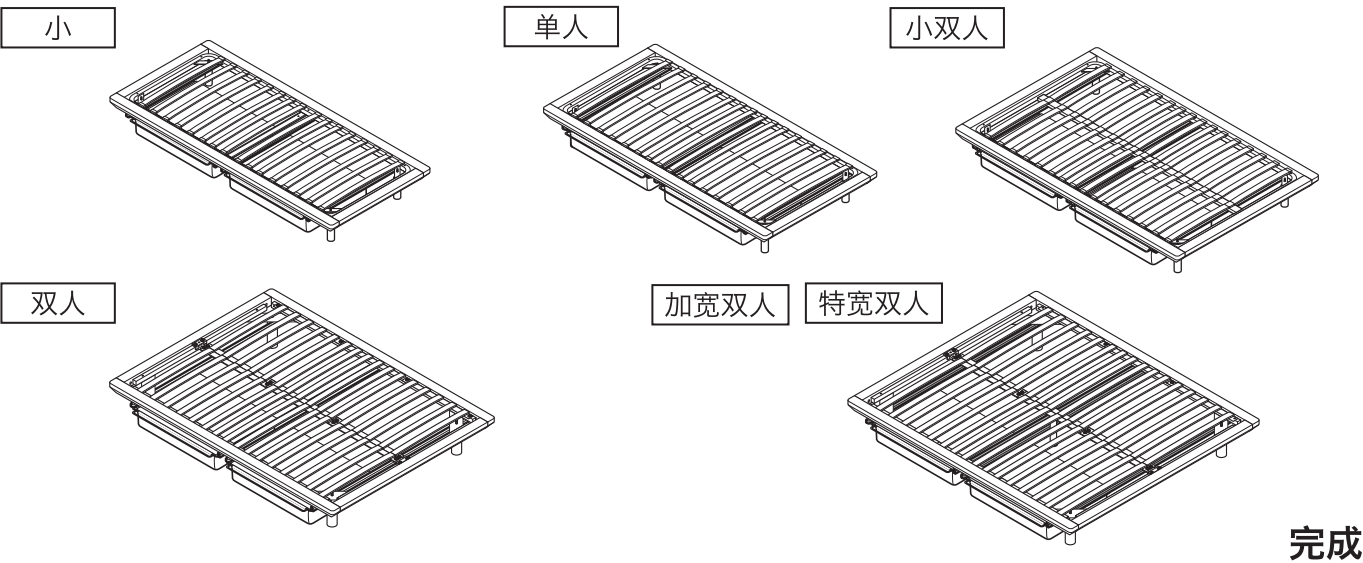

收纳篮取出方法



● 在单侧安装2个以上收纳篮的情况下，取出里面的收纳篮时，请使用床框用收纳篮(另售)附属的收纳手柄。

1 请拧松取出收纳篮一侧的制动器。
※插图使用的是省略木弹簧部位表示的床框(主体)/单人。

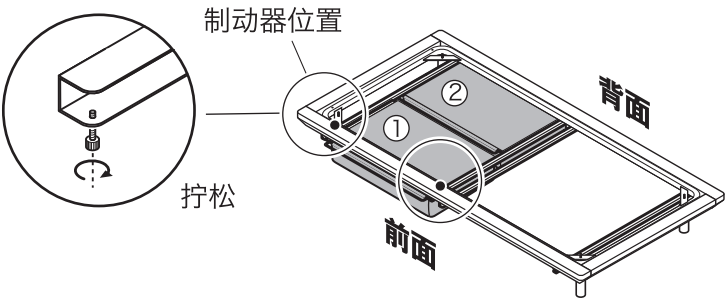

2 取出前面的收纳篮①，在里侧收纳篮②的篮框(拉手)扣住收纳手柄。

3 请将收纳篮拉到前面。

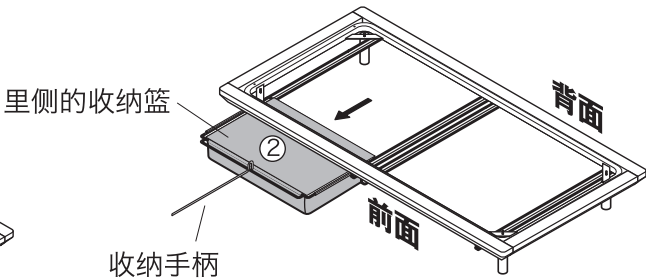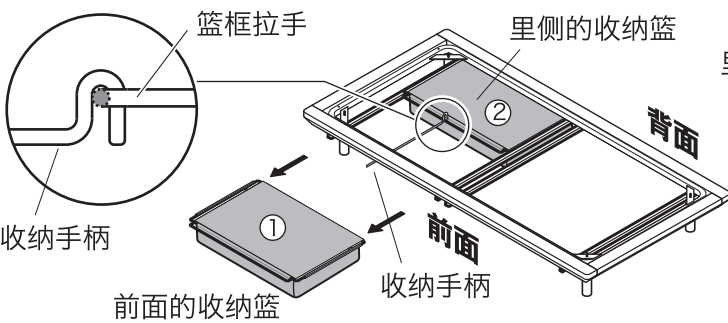

使用方法(续)

收纳手柄的保管方法

- 由于可能会丢失，建议放入收纳篮内保管。

关于滑管

- 滑管为消耗品。
需要更换配件时，请向购买的店铺咨询。

关于钢棒

- 收纳篮盖子上安装的钢棒在开合盖子时可能偏离而从边端露出。
此时如果照常使用的话可能会受伤，因此请放回原来的位置再使用。

关于移动

- 移动时请先取下收纳物品再移动。
- 移动时请勿在地面上拖动，请务必抬起进行搬运。否则可能导致受伤或商品损坏、划伤地面。
- 因搬家等原因而需要移动时，请将其恢复至组装前状态后再搬运。
否则可能导致受伤或商品损坏、划伤地面。

关于报废

- 报废时，请按各地区规定的方式进行废弃处理。

保养方法

保养/检查

- 在损坏、变形的状态下请勿使用。
- 请定期检查制动器、导轨有无松动或摇动，一旦发现松动，请立即重新紧固。出现松动仍照常使用的话，可能会导致受伤或造成主体损坏或损伤地面。此外，可能会导致摇晃或发出异常声响。

金属部分的保养方法

- 日常保养时使用软布干擦即可。
- 污垢严重时，请用经过3~5%稀释的中性洗涤剂将布浸透后擦除污垢，再用清水浸湿的布将洗涤剂擦拭干净。然后请用柔软的干布擦拭后使其自然风干。

原色部分的保养方法

※ 本商品使用“原色”面料。“原色”指的是线或布料未经漂白，并非颜色的名称。

- 由于原色部位未经漂白，可能会保有“棉的特殊气味”。此外，由于在封包状态下，可能长期存放在高温多湿的环境，可能使人感到较大的气味。但经过一段时间后气味会变淡。
- 沾水后干燥时，色素会随着水分移动到面料表面，干燥后色素留在面料表面而形成斑点。(原色色素凝缩后成为褐色、黄色的斑点)。因此如果沾湿请尽快用干布等吸干水分。(濡湿后水分会暂时停留在面料表面)。
- 由于未经漂白，掺杂物内残留的有机物质会成为霉菌的养分。在濡湿的状态下放置(与漂白过的相比)更容易发霉。敬请注意。

使用注意事项

关于底板的使用方法

- 请勿收纳脏的或湿的物品。否则底板可能会发霉。
- 请采取排除底板内部湿气的对策。
收纳部位容易积存湿气，请使用市面销售的除湿剂(去除湿气用)等。
同时请定期换气。

关于甲醛对策

- 何谓甲醛
据说甲醛是导致病态建筑综合症的物质之一。是一种在常温下会气化的无色且具有刺激性气味的化学物质，除了家具以外，建筑材料、粘贴墙纸使用的粘合剂等中也均含有这种物质。由于会逐渐扩散，所以如果长时间滞留于被甲醛污染的室内环境，将会刺激眼睛、导致咽喉产生不适的刺激感。如果浓度过高，还可能导致呼吸困难。
- 请对房间进行换气。



注意

设置家具后，请务必对室内进行充分换气。
否则可能导致化学物质过敏体质者及婴幼儿等出现过敏症状。

- 甲醛易在空气中扩散，故请在日常随时对室内进行充分换气。同时设置多款家具时，请尽量开大窗户，对室内进行充分换气。室内温度一旦升高，甲醛可能出现加速扩散的倾向，所以在夏季长时间门窗紧闭时，请务必确保充分换气。为了提高换气效率，建议同时打开多扇窗户，开启换气扇、电风扇、空气循环风扇等。
- 致化学物质过敏体质的用户
除甲醛以外，其他导致病态建筑综合症的化学物质在容许量上也均因人而异。因此，即使浓度在室内浓度标准值(不会影响健康的甲醛室内浓度值)以下，也会存在过敏反应体质的用户。我们在目前的无印良品家具上已尽力使用甲醛含量较少的材料，但依然无法完全阻止扩散，故请多加注意。尤其收纳婴幼儿的衣物等时，请先放入塑料袋内再收纳。
一旦出现过敏症状，建议立即向医生咨询。
 - 无印良品的家具在封装出厂时均已放入甲醛吸附/分解纸(※)。
(※ 甲醛吸附/分解纸：与爱信精机株式会社共同开发)
甲醛在狭窄的空间内无处可逃，可能再次被材料吸附。因此，为了尽量降低送达顾客手中的商品所附甲醛浓度，我们在封包中放入了甲醛吸附/分解纸。
※ 封包中的“甲醛吸附/分解纸”在运输等过程中性能已下降，故请作为可燃垃圾处理。
 - “收纳家具专用甲醛吸附/分解纸”简介
收纳家具专用甲醛吸附/分解纸为另售商品。甲醛会在抽屉等密封空间等持续不断扩散，所以建议持续使用。

产品规格

产品名称	床框用帆布收纳篮/大	床框用帆布收纳篮/小
产品尺寸	长765×宽550×高135(mm)	长765×宽375×高135(mm)
产品重量	约4kg	约3kg
用 途	床框用帆布收纳篮	
承 重	约7kg	约5kg
材 质	帆布收纳篮：聚酯纤维65.5%、棉34.5% 底 板：中密度纤维板 篮 框：金属(钢)/环氧树脂涂装 钢 棒：金属(钢)/环氧树脂涂装	
执行标准	QB/T 1585-1992	

Made in Taiwan

联系方式

有关商品的咨询，请联系购买的代理商。

无印良品(上海)商业有限公司
注册地址：上海市静安区南京西路1601号35楼
电话：021-6375-6677
www.muji.com.cn