

ワーキングチェア用アームセット／グレー (2009) ワーキングチェア用アームセット／黒 (2009)

WORKING CHAIR ARM / PAIR / GREY
WORKING CHAIR ARM / PAIR / BLACK

工作椅用扶手套件/灰色(2009)
工作椅用扶手套件/黑色(2009)

組立・取扱説明書

User Guide

组装 / 使用说明书

日本語

この度は本商品をお買い上げいただき、誠にありがとうございます。
1ページからお読みください。

English

Thank you for your purchase.
Read these instructions from Page 5.

中文

本次承蒙惠购本产品，在此深表感谢。
请从第九页开始阅读。

ワーキングチェア用アームセット／グレー（2009） ワーキングチェア用アームセット／黒（2009）

組立・取扱説明書

この度は本商品をお買い上げいただき、誠にありがとうございます。
ご使用前に本書をお読みいただき、内容を理解した上で、正しく組み立て、正しくお使いください。
本書は、いつでも確認できるように大切に保管してください。

もくじ	ページ
重要なお知らせ（安全上のご注意）	2～3
パーツリスト	3
各部の名称	3
組立方法	3
ご使用方法	4
お手入れ方法	4
製品仕様	4
お問い合わせ先	4

重要なお知らせ（安全上のご注意）

必ずお守りください。

本書には、お使いになる方や他の人への危害と財産への損害を未然に防ぎ、安全に正しくお使いいただくために、重要な内容を記載しています。

次の内容（表示・図記号）をよく理解してから本文をお読みになり、記載事項をお守りください。

●表示の説明

誤った使い方をした時に生じる危害や損害の程度を区分して説明しています。

 警告 使用者が死亡または重傷（※1）を負うことが想定される内容です。	 注意 使用者が傷害（※2）を負うことや物的損害（※3）が発生すると想定される内容です。
---	--

●図記号の説明

お守りいただく内容を次の図記号で説明しています。（次は図記号の例です。）

 してはいけない「禁止」の内容です。	 実行しなければならない内容です。
---	--

※1 重傷とは失明やケガ、やけど、骨折、中毒、感電などで後遺症が残るもの及び治療に入院、長期の通院を要するものをさします。

※2 傷害とは治療に入院や長期の通院を要しない、ケガ、やけどをさします。

※3 物的損害とは、家屋、家財にかかわる拡大損害をさします。

 警告	
 禁止	●座面の上に立ったり、逆向きに座ったり、アームや背もたれの上に座るなど座面以外の部分に座ったりしないでください。転倒や商品の破損によりケガをするおそれがあります。 ●アームをつかんで乱暴な座り立ちはしないでください。安定性が損なわれ、転倒してケガの原因となります。 ●アームを背もたれの代わりに使用するなど、無理な負荷はかけないでください。破損によりケガをするおそれがあります。 ●各部に異常を発見したままや、ネジがゆるんだまま使用しないでください。壊れてケガをすることがあります。 ●ストーブなどの火のそばで使用しないでください。引火して火事の原因となります。 ●不要になった梱包材料は、乳幼児の手の届くところに置かないでください。頭からかぶるなどしたときに口や鼻をふさぎ、窒息するおそれがあります。
 行う	●ワーキングチェア（2009）付属の組立・取扱説明書をよく読み、正しくお使いください。チェア本体を使用するうえでの注意が記載しており、ケガを防ぐために重要です。

 注意	
 禁止	●隙間や穴に手や指を入れないでください。はさまれてケガをするおそれがあります。 ●分解や改造をしないでください。破損や変形し、ケガをするおそれがあります。 ●屋外では使用しないでください。変形や著しい劣化が起こり、ケガをする原因となります。 ●用途外のご使用はしないでください。思わぬケガをする原因となります。
 行う	●使い始めは、室内の換気を十分に行ってください。接着剤などに含まれるホルムアルデヒドが残っている可能性があり、化学物質に過敏な体質の方や乳幼児などアレルギー症状を起こすことがあります。

重要なお知らせ (安全上のご注意)

必ずお守りください。(つづき)


お願い (その他 注意)

- 直射日光のあたる場所や高温多湿な場所で使用しないでください。変色、変形、サビ、カビなどの著しい劣化が起こるおそれがあります。

パーツリスト

グレー 黒 共通

下図のとおり部品がお揃いかご確認ください。

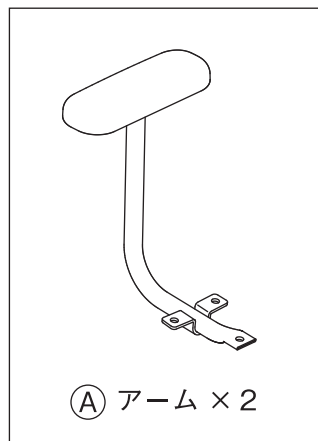

① アーム × 2


フィッティングパーツ

② ワッシャー × 6

③ 固定ネジ × 6

④ 六角レンチ × 1

各部の名称

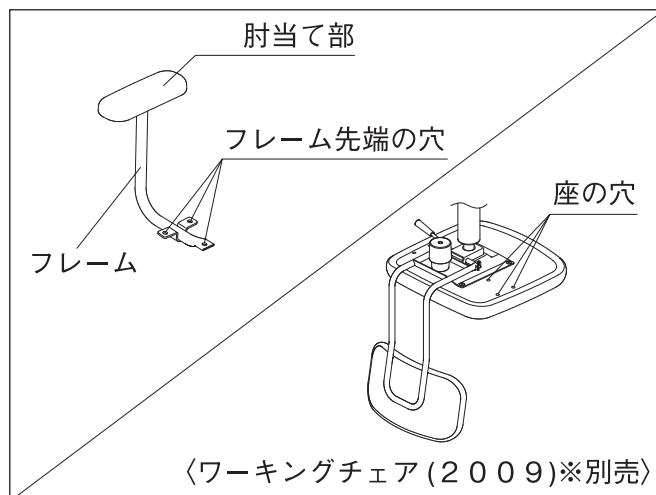


組立方法

グレー 黒 共通

1

ワーキングチェア (2009) 本体の裏側を上にして安定するように置いてください。

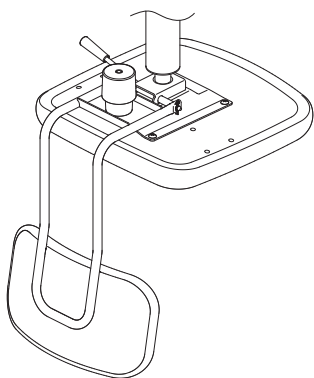

注意

安定しない場所で作業を行うとケガをするおそれがありますので、必ず安定するようにワーキングチェア (2009) を置いてください。




注意

組み立ての際は汚れやキズ防止のため布等を敷いて作業してください。


2

① アームのフレーム先端の穴と座の穴をそれぞれ合わせます。次に合わせた穴に ② ワッシャー、③ 固定ネジの順に取り付けます。
④ 六角レンチを使い、図の矢印の方向(右)に回して、しっかりと締め付けてください。(3カ所)

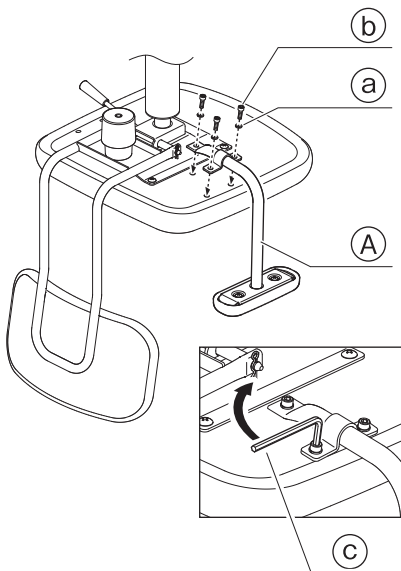

3

反対側も同様に、②の手順に従って取り付けてください。
(※取り外しの際は ① ~ ③ を逆の手順で行ってください。)

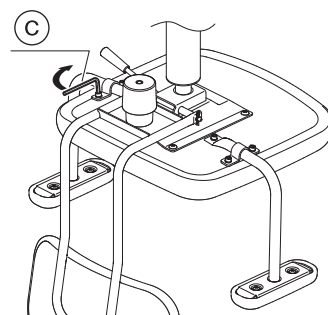

注意

片方のアームをしっかり取り付けてからもう片方を取り付けてください。取り付けが途中でずと外れて落下し、破損やケガをするおそれがあります。



注意

アームにガタつきがある場合は、ただちに使用をやめて、ネジを締め直してから使用してください。そのまま使用するとケガをするおそれがあります。

ご使用方法

移動について

- アームをつかんでチェアを持ち上げないでください。アームに無理な負荷がかかり、破損してケガをするおそれがあります。

廃棄について

- 廃棄の際は、居住地域自治体のルールに従い、処分してください。

お手入れ方法

保守点検

- 固定ネジにゆるみやグラツキがないか時々点検し、ゆるんでいる場合はしっかりと締め直してください。

布張りのお手入れ

- 通常のお手入れはブラッシングや掃除機で折り目のほこり等を取り除いてください。
- コーヒー・お酒等で汚した場合は、中性洗剤を3～5%位にお湯で薄め、やわらかい布に浸し、軽く絞って表面をたたくようにして拭き取ってください。後は洗剤をよく布で拭き取り、自然乾燥させてください。

プラスチック・金属部のお手入れ

- 通常のお手入れはやわらかい布で乾拭きしてください。
- 汚れのひどいときは、3～5%に薄めた中性洗剤を浸した布で汚れを落とし、その後、水に浸した布で洗剤分をよく拭き取ってください。次に乾いた布で軽く拭いた後、自然乾燥させてください。

製品仕様

品 名	ワーキングチェア用アームセット／グレー(2009)	ワーキングチェア用アームセット／黒(2009)
製品寸法※	幅 570× 奥行 530× 高さ 740 ～ 840 mm (座面の高さから肘当て部の高さ：190 mm)	
製品質量	約 1.0 kg	
用 途	ワーキングチェア (2009) 専用アーム	
材 質	構 造 部 材：ポリプロピレン クッション材：ウレタンフォーム 張 り 材：ポリエステル フ レ ー ム：金属 (鋼管) 表 面 加 工：フレーム ポリエステル樹脂塗装	
原 産 国	中国	

※本商品を取り付けた椅子の外形寸法です。

お問い合わせ先

商品のお問い合わせは、お買い上げの販売店もしくは下記お客様室までご連絡ください。

株式会社 良品計画

〒170-8424

東京都豊島区東池袋 4-26-3

お客様室でんわ



0120-14-6404

受付時間 ■平日 10:00 ～ 21:00
■土・日・祝 10:00 ～ 18:00

WORKING CHAIR ARM / PAIR / GREY WORKING CHAIR ARM / PAIR / BLACK

User Guide

Thank you for your purchase.

Read the User Guide before use to ensure correct use and assembly of this product.

Please store this User Guide in an easily accessible place for future reference.

Table of Contents	Pages
Important Information (Safety Advice)	6 - 7
Parts	7
Part Names	7
Assembly Instructions	7
Directions for Use	8
Care Instructions	8
Specifications	8
Contact Information	8

Important Information (Safety Advice) These instructions must be followed.

This User Guide contains important information for the safe use of this product in order to prevent harm to the user and others or damage to the property.

Please note the following contents (indications and graphic symbols) before reading the main contents of this User Guide, and follow the instructions given.

- Explanations of Indications

The degrees of injury and damage that may arise when the product is used incorrectly are classified and explained with the following symbols.

 Warning	Indicates a hazard with a level of risk which, if not avoided, could result in death or serious injury*1 to the user.	 Caution	Indicates a hazard with a level of risk which, if not avoided, could result in injury*2 to the user or property damage*3.
--	---	--	---

- Explanations of Graphic Symbols

Instructions are given in the form of the following graphic symbols. (Examples of graphic symbols are as follows.)

 DON'Ts: Actions that are prohibited.	 DOs: Actions that must be taken.
---	---

*1 "Serious injury" indicates blindness, injuries, burns, bone fractures, poisoning, or electric shocks which have long term effects and require hospitalisation and/or long-term hospital visits for treatment.

*2 "Injury" indicates injuries or burns which do not require hospitalisation or long-term hospital visits for treatment.

*3 Property damage indicates an expanded damage that involves the house or household property.

 Warning	
 DON'Ts	• Do not sit on any part of the chair other than the seat. Do not stand on the seat, sit backwards on the seat, or sit on the arms or backrest. Doing so may cause injury due to damage to the product or falling. • Do not handle the arms roughly when sitting and standing. Doing so may cause the product to become unstable, causing you to fall resulting in injury. • Do not use the arms instead of a backrest or place an unnecessary strain on them. Doing so may cause damage to the product, resulting in injury. • Stop using this product immediately if you find an abnormality in any of the parts or if the screws are loose. Doing so may cause the product to break, resulting in injury. • Do not use near a heat source such as a heater. Doing so may cause fire. • Do not keep unwanted packaging materials within reach of infants. Infants may accidentally pull packaging materials over the mouth or nose, causing suffocation.
 DOs	• Thoroughly read the User Guide provided with WORKING CHAIR to ensure the correct use. The User Guide contains important cautions on how to use the chair correctly in order to prevent injury.

 Caution	
 DON'Ts	• Do not insert a finger or hand into the gaps. Doing so may cause fingers or hands to become trapped, resulting in injury. • Do not disassemble or modify the product. Doing so may cause damage or deformation to the product, resulting in injury. • Do not use the product outdoors. Doing so may cause deformation or severe degradation of the product, resulting in injury. • Use this product only for its intended purpose. Failure to do so may result in an unexpected injury.
 DOs	• Ventilate the room well at the early stage of product use. A small quantity of formaldehyde may still remain in the adhesives, which may cause an allergic reaction in those who are sensitive to chemicals or infants.


Important Information (Safety Advice) These instructions must be followed. (Cont'd)

Note (Other Cautions)


- Avoid use in a place that is subject to direct sunlight or where the temperature and the humidity are high. Failure to do so may cause severe degradation of the product such as discolouration, distortion, rust or mould.

Parts Applies to both Grey and Black models

Check that the following parts are included in the packaging.

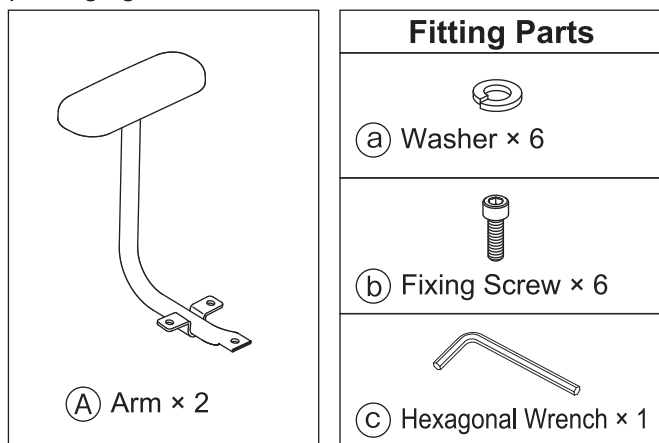


Part Names

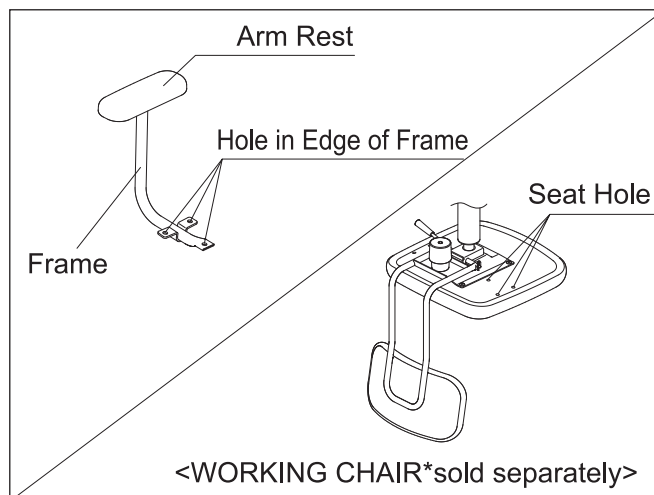

Assembly Instructions

Applies to both Grey and Black models

1 Place WORKING CHAIR in a stable place with its bottom facing upwards.

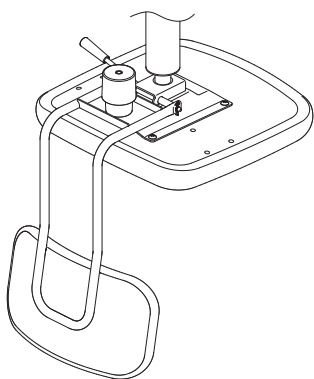


Working in an unstable location may cause injury. Therefore, make sure to place WORKING CHAIR in a stable manner.




When assembling, lay a sheet such as a rug on the floor to prevent the floor from being stained or scratched.

2 Align the hole in the edge of (A) Arm's frame with a hole in the seat. Next, attach (a) washers and (b) fixing screws to the aligned holes ((a) washers should come first). Use (c) hexagonal wrench to turn the screws in the direction shown by the arrow in the figure (right) to fully tighten them. (3 places)

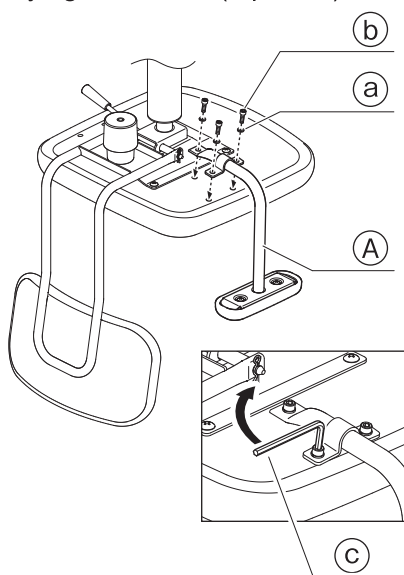

3 Perform the same procedures **2** for the opposite side. (*Reverse the procedures **1** to **3** to remove the arm.)

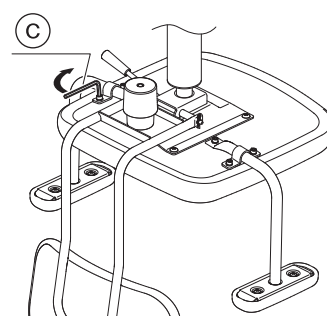

Securely fasten one arm first before attaching the other arm. Installing in a halfway manner may cause the arm to fall off, resulting in damage or injury.



If the arm becomes loose, stop use immediately and re-tighten the screws. Continuing use in this state may result in injury.

Directions for Use

Moving the Product

- Do not lift the chair using the handles. Doing so may put an unnecessary strain on the arms, causing damage which may result in injury.

Disposal

- To dispose of this product, follow the rules implemented by your local government.

Care Instructions

Maintenance and Inspection

- Periodically check the fixing screws for looseness or wobbling, and securely re-tighten them if any looseness is found.

Maintenance for Covering

- For normal care, brush or vacuum the product to remove the dust, etc from the surface.
- If the product is stained with a liquid such as coffee or an alcoholic beverage, soak a soft cloth in a 3% to 5% warm neutral detergent solution, gently wring out the cloth and then pat the affected area. Use a different cloth to wipe away all of the detergent, and then allow it to dry naturally.

Maintenance for Plastic/Metallic Sections

- For normal care, wipe them with a soft, dry cloth.
- If the product is particularly dirty, wipe off the dirt with a cloth soaked in a 3% to 5% neutral detergent solution. Then wipe off any detergent residue with a wet cloth. Next, gently wipe with a dry cloth and let the product dry naturally.

Specifications

Product Name	WORKING CHAIR ARM / PAIR / GREY	WORKING CHAIR ARM / PAIR / BLACK
Product Dimensions*	W570 × D530 × H740 - 840mm (Height from seat to arm rest: 190mm)	
Product Weight	Approx. 1.0kg	
Usage	ARM FOR WORKING CHAIR	
Materials	Structural Materials: Polypropylene Cushioning Material: Urethane Foam Covering Material: Polyester Frame: Metal (Steel Tubing) Surface Treatment: Frame: Polyester Resin Paint	
Country of Origin	China	

* External dimensions when this product is attached to the chair.

Contact Information

For your inquiry about the product, please contact the store where you bought it.

工作椅用扶手套件 / 灰色 (2009)

工作椅用扶手套件 / 黑色 (2009)

组装 / 使用说明书

本次承蒙惠购本商品，在此深表感谢。

使用前请务必仔细阅读本文，并在对内容充分理解的基础上再正确组装和使用。

此外，请务必妥善保管本文，以备随时进行确认。

目录	页
重要通知 (安全注意事项)	10 ~ 11
配件清单	11
各部位名称	11
组装步骤	11
使用方法	12
保养方法	12
产品规格	12
联系方式	12

2016年 3 月 1 日

重要通知(安全注意事项)

请务必遵守。

为了防止使用者或他人遭受危害和经济损失，本文中记述了确保安全且正确使用的重要内容。
请在充分理解下述内容(标示/图形符号)的基础上仔细阅读本文，并严格遵守所述事项。

●标示说明
按错误使用所造成的危害或损失程度进行分类说明。

 警告 可能会导致使用者死亡或重伤(※1)的内容。	 注意 可能会导致使用者遭受伤害(※2)或物质损失(※3)的内容。
---	---

●图形符号说明
通过以下图形符号对应严守的内容进行说明。(以下为图形符号范例。)

 不得执行的“禁止”内容。	 必须执行的“强制”内容。
--	--

※1 所谓重伤，是指因失明或受伤、烫烧伤、骨折、中毒、触电等原因而留下后遗症以及需住院治疗、长期就医的伤势。
※2 所谓伤害，是指无需治疗或住院、长期就医的受伤、烫烧伤。
※3 所谓物质损失，是指住房、家庭财产相关的连带损失。

 警告	
 禁止	● 请勿在座面上站立、反向乘坐、坐在扶手或靠背上等座面以外的部分。否则可能会因摔倒或商品损坏而受伤。 ● 请勿抓着扶手用力过度的坐下或站起。否则可能会失去平衡，导致摔倒而受伤。 ● 请勿将扶手当作靠背使用等，施加过度的负重。否则可能会导致损坏而受伤。 ● 各部位发现异常或螺栓松动时，请勿继续使用。否则可能会导致损坏而受伤。 ● 请勿在火炉等火源附近使用。否则可能引起火灾。 ● 多余的包装材料塑料袋请勿放在婴幼儿可以触及的地方。否则可能有因包装材料套住头部等阻碍嘴或鼻的呼吸而导致窒息的危险。
 严守	● 请详细阅读工作椅(2009)附属的组装/使用说明书，并正确使用。其中记述有工作椅主体的使用注意事项，对防止受伤十分重要。

 注意	
 禁止	● 请勿将手伸入空隙或孔内。否则可能会被夹住而受伤。 ● 请勿自行拆卸或改造。否则可能导致损坏、变形或人体受伤。 ● 请勿在室外使用。否则可能导致变形或严重劣化、人体受伤。 ● 请勿用于原本用途以外的其他用途。否则可能导致人体意外受伤。
 严守	● 刚开始使用时，请务必对室内进行充分换气。粘合剂等可能含有甲醛残留物，可能导致化学物质过敏体质者及婴幼儿等出现过敏症状。

重要通知(安全注意事项)

请务必遵守。(续)

请求(其他注意事项)


- 请勿在阳光直射或高温多湿的场所使用。否则可能导致严重变色、变形、生锈或发霉等劣化的情况。

配件清单

灰色 黑色 共通

各部位名称

请确认下图的零部件是否齐全。

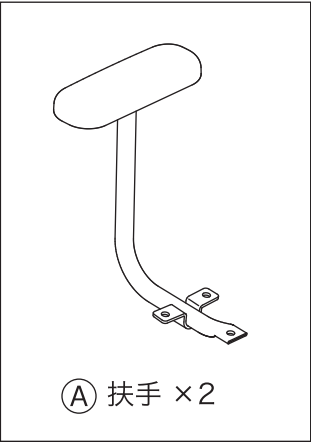


① 扶手 × 2

组装零件

② 垫圈 × 6

③ 固定螺栓 × 6


④ 六角扳手 × 1

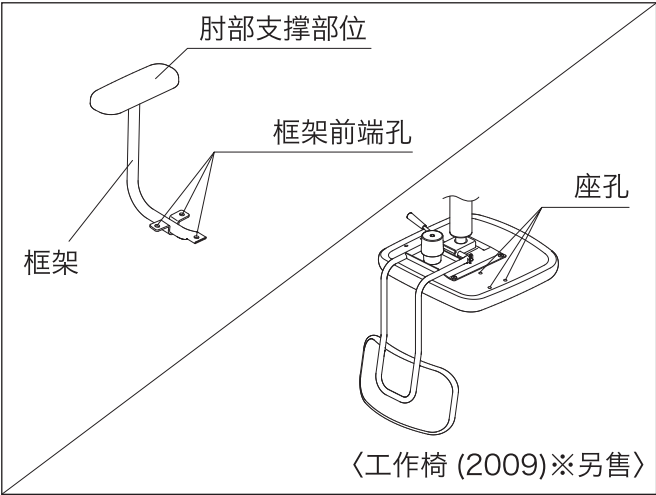

组装步骤

灰色 黑色 共通


1
将工作椅(2009)主体底面朝上并平稳放置。

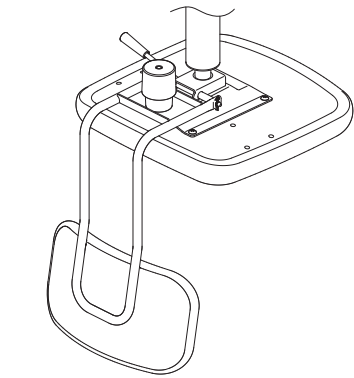


注意
由于在不平稳的场所作业可能会导致受伤，请务必平稳放置工作椅(2009)。

注意
组装时，为防止脏污或损伤请铺设布等铺垫物再进行作业。

2
请分别对准①扶手的框架前端孔与座孔。接着，在孔上依序安装②垫圈、③固定螺母。
请使用④六角扳手，按照图示的箭头方向(右)旋转并紧固。(3处)

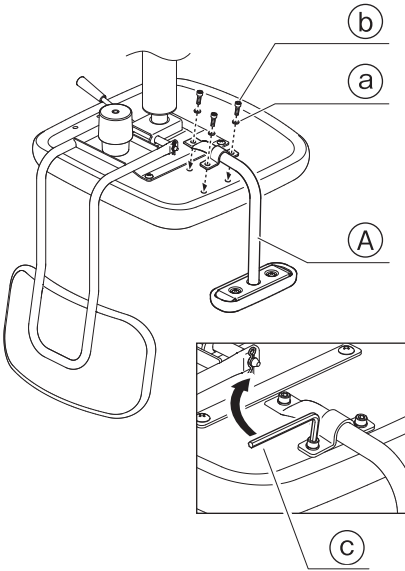

3
另一侧也请按照步骤**2**进行安装。
(※拆卸时请按照与**1**~**3**相反的顺序。)

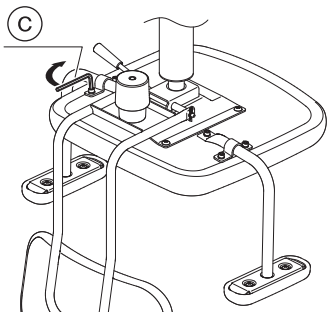

注意
请先将单侧的扶手确实安装好后，再安装另一侧的扶手。否则在安装的过程中可能会因松脱掉落而导致损坏或受伤。

注意
扶手出现晃动时，请立即停止使用，并重新拧紧螺栓后再使用。如果照常使用可能导致受伤。

使用方法

关于移动

● 请勿抓着扶手抬起工作椅。对扶手施加过度的负重可能会导致损坏而受伤。

关于报废

● 报废时，请按各地区官方规定的方式进行报废处理。

保养方法

保养检查

● 请定期检查固定螺栓是否有松动或摇晃，发现松缓时请重新拧紧。

布面的保养

- 平常保养时，请用刷子或吸尘器去除织纹间的灰尘等。
- 附有咖啡、酒类等污渍时，请用温水将中性洗涤剂稀释3~5%左右，再将软布浸湿后轻轻拧干，在表面轻敲擦拭。之后请用布擦去洗涤剂后使其自然风干。

塑料/金属部分的保养

- 平常保养时，请使用柔软的干布擦拭。
- 污垢严重时，请用经过3~5%稀释的中性洗涤剂将布浸透后擦除污垢，然后再用清水浸湿的布将洗涤剂擦拭干净。最后用干布擦拭后使其自然风干。

产品规格

产品名称	工作椅用扶手套件 / 灰色 (2009)	工作椅用扶手套件 / 黑色 (2009)
产品尺寸※	长 570× 宽 530× 高 740 ~ 840mm(座面高到扶手部的高: 190mm)	
产品重量	约 1.0kg	
用 途	工作椅 (2009) 专用扶手	
材 质	结 构 件: 聚丙烯 缓冲材料: 聚氨酯泡沫 蒙面材料: 聚酯纤维 框 架: 金属 (钢管) 表面加工: 框架 聚酯纤维树脂涂装	
执行标准	QB/T 2280-2007	
原 产 国	中国	

※ 安装本商品后椅子的外形尺寸。

联系方式

有关商品的咨询，请联系购买的代理商。

无印良品(上海)商业有限公司
注册地址: 上海市静安区石门一路211号6楼
电话: 021-6375-6677
www.muji.com.cn